

NYCe 4000

Multi-axis motion control system
Standard Housings & Accessories

Project Planning Manual
R911337672

Edition 11



Title NYCe 4000
Multi-axis motion control system
Standard Housings & Accessories

Type of Documentation Project Planning Manual

Document Typecode DOK-NY4000-HOUSING*ACC-PR11-EN-E

Internal File Reference RS-9af8ecd7a646e4b50a6846a5007c8309-11-en-US-3

Record of Revision

Edition	Release Date	Notes
DOK-NY4000-HOUSING*ACC-PR01-EN-E	09/2012	First edition
DOK-NY4000-HOUSING*ACC-PR02-EN-E	01/2013	2nd edition
DOK-NY4000-HOUSING*ACC-PR03-EN-E	06/2014	3rd edition
DOK-NY4000-HOUSING*ACC-PR04-EN-E	03/2015	4th edition
DOK-NY4000-HOUSING*ACC-PR05-EN-E	04/2016	5th edition
DOK-NY4000-HOUSING*ACC-PR06-EN-E	11/2016	6th edition
DOK-NY4000-HOUSING*ACC-PR07-EN-E	02/2017	7th edition
DOK-NY4000-HOUSING*ACC-PR08-EN-E	12/2017	8th edition
DOK-NY4000-HOUSING*ACC-PR09-EN-E	03/2018	9th edition
DOK-NY4000-HOUSING*ACC-PR10-EN-E	07/2018	10th edition
DOK-NY4000-HOUSING*ACC-PR11-EN-E	08/2018	11th edition

List of trademarks

FireWire is a registered trademark of Apple® Computer Inc.

Products in this publication are referred to by their general trade names. In most, if not all cases, these designations are claimed as trademarks or registered trademarks of their respective companies.

Copyright

© Bosch Rexroth AG 2018

All rights reserved, also regarding any disposal, exploitation, reproduction, editing, distribution, as well as in the event of applications for industrial property rights.

Liability

The specified data is intended for product description purposes only and shall not be deemed to be a guaranteed characteristic unless expressly stipulated in the contract. All rights are reserved with respect to the content of this documentation and the availability of the product.

Published by

Bosch Rexroth AG

P.O. Box 7170 ■ 5605 JD Eindhoven ■ The Netherlands

<http://www.boschrexroth.com>

Table of Contents

	Page
1 Introduction.....	7
1.1 Purpose of Documentation.....	7
1.2 General Information.....	9
1.3 Cross reference component name, order number, short name.....	10
1.3.1 Introduction.....	10
1.3.2 NYCe 4000 system housings.....	10
1.3.3 NYCe 4000 MCUs, drive, digital I/O and SERCOS III Master modules.....	10
1.3.4 NYCe 4000 accessories.....	10
2 Safety Instructions for Electric Drives and Controls.....	15
2.1 Definitions of Terms.....	15
2.2 Explanation of Signal Words and the Safety Alert Symbol.....	16
2.3 General Information.....	17
2.3.1 Using the Safety Instructions and Passing Them on to Others.....	17
2.3.2 Requirements for Safe Use.....	17
2.3.3 Hazards by Improper Use.....	19
2.4 Instructions with Regard to Specific Dangers.....	19
2.4.1 Protection against Contact with Electrical Parts and Housings.....	19
2.4.2 Safety Extra-Low Voltage as Protection Against Electric Shock.....	21
2.4.3 Protection against Dangerous Movements.....	21
2.4.4 Protection against Magnetic and Electromagnetic Fields during Operation and Mounting.....	24
2.4.5 Protection against Contact with Hot Parts.....	24
2.4.6 Protection during Handling and Mounting.....	25
3 Important Directions for Use.....	27
3.1 Appropriate Use.....	27
3.2 Areas of use and Application.....	27
3.3 Inappropriate Use.....	28
3.4 Acceptance tests and approvals.....	28
3.4.1 Introduction.....	28
3.4.2 Low voltage directive.....	29
3.4.3 EMC directive.....	29
3.4.4 CE.....	29
3.4.5 UL.....	30
3.4.6 RoHS.....	31
4 NY4013: 1 Drive Slot System Housing.....	33
4.1 Product Identification.....	33
4.2 System Housing Dimensions.....	36
4.3 Connector Overview.....	37
4.4 Field diagnostics.....	39

Table of Contents

	Page
5 NY4023: 2 Drive Slot System Housing.....	41
5.1 Product Identification.....	41
5.2 System Housing Dimensions.....	44
5.3 Connector Overview.....	45
5.4 Field diagnostics.....	47
6 NY4033: 3 Drive Slot System Housing.....	49
6.1 Product Identification.....	49
6.2 System Housing Dimensions.....	53
6.3 Connector Overview.....	55
6.4 Field diagnostics.....	56
7 NY4043: 4 Drive Slot System Housing.....	57
7.1 Product Identification.....	57
7.2 System Housing Dimensions.....	61
7.3 Connector Overview.....	63
7.4 Field diagnostics.....	64
8 NY4053: 5 Drive Slot System Housing.....	65
8.1 Product Identification.....	65
8.2 System Housing Dimensions.....	68
8.3 Connector Overview.....	70
8.4 Field diagnostics.....	72
9 NY4063: 3 Drive Slot System Housing with NY4125.....	73
9.1 Product Identification.....	73
9.2 System Housing Dimensions.....	76
9.3 Connector Overview.....	78
9.3.1 Introduction.....	78
9.3.2 Common System Housing Connectors.....	78
9.3.3 NY4063 Drive Power Connections.....	78
9.3.4 NY4063 Motor Connections - General Information.....	79
9.3.5 NY4063 Motor Connections - Drive Slot 0 (NY4125).....	80
9.3.6 NY4063 Motor Connections - Drive Slot 1 and 2 (NY4120 / NY4140).....	81
9.3.7 Keying of the Motor Headers and Plugs.....	81
9.3.8 Encoder Connections - General Information.....	82
9.3.9 Encoder Connections - Slot 0.....	82
9.3.10 Encoder Connections - Slot 1 and Slot 2.....	84
9.3.11 Fast Digital I/O Connections - General Information.....	84
9.3.12 Fast Digital I/O Connections - Slot 0.....	86
9.3.13 Fast Digital I/O Connections - Slot 1 and Slot 2.....	86
9.3.14 Digital I/O Connections - General Information.....	86
9.3.15 Digital I/O Connections - Slot 0.....	88
9.3.16 Digital I/O Connections - Slot 1 and Slot 2.....	89

Table of Contents

	Page
9.4	Field diagnostics..... 89
10	NY4074: LMS System Housing for 2 drive modules..... 91
10.1	Product Identification..... 91
10.2	System Housing Dimensions..... 94
10.3	Connector Overview..... 95
10.3.1	Introduction..... 95
10.3.2	Common System Housing Connectors..... 96
10.3.3	Motor connectors..... 96
10.3.4	LMS sensor connectors..... 98
10.3.5	Shared sensor connector..... 100
10.3.6	Digital / Fast Digital I/O Connectors..... 101
10.3.7	PTC connector..... 103
10.4	Field diagnostics..... 104
10.5	System Housing power requirements..... 104
11	NY4079: LMS System Housing for 4 SERCOS axes..... 105
11.1	Product Identification..... 105
11.2	System Housing Dimensions..... 107
11.3	Connector overview..... 108
11.3.1	Introduction..... 108
11.3.2	Common System Housing Connectors..... 109
11.3.3	LMS sensor connectors..... 109
11.3.4	Shared sensor connector..... 110
11.4	Field diagnostics..... 112
11.5	System Housing power requirements..... 112
12	Detailed Connection Information of Common Connectors..... 113
12.1	Introduction..... 113
12.2	24V System – System Power Connection..... 113
12.3	SE – Service Mode Input Connection..... 115
12.4	Fan – Fan Unit Connection..... 116
12.5	DP – NY4120 / NY4125 / NY4140 Drive Power Connections..... 117
12.6	DP NY4130 – NY4130 Drive Power Connections..... 120
12.7	CAP – Capacitor Connections..... 123
12.8	M – Motor Connections..... 124
12.9	E – Encoder Connections..... 127
12.10	Fdig – Fast Digital I/O Connections..... 130
12.11	Dig – Digital I/O Connections..... 132
12.12	An – Analog I/O Connections..... 135
12.13	PE – Protective Earth Connection..... 136
13	NY4901 and NY4901/10: Cable Strain Relief..... 137

Table of Contents

	Page
14 NY4910: Motor Cable Shield and Support.....	139
14.1 Introduction.....	139
14.2 Mounting Instruction.....	139
15 NY4915/10: Host Adapter IEEE 1394b (PCI).....	141
16 NY4916/10: Host Adapter IEEE 1394b and IEEE 1394b Cat-5e/Cat-6.....	143
16.1 Introduction.....	143
16.2 Standard Ethernet cable.....	143
16.3 Field diagnostics.....	144
17 NY4917: Host Adapter IEEE 1394b (PCIe).....	145
18 FireWire-b - 1394b Cat-5e/Cat-6 media converter.....	147
18.1 Introduction.....	147
18.2 Power supply.....	148
18.3 Field diagnostics.....	148
19 NY4920/10 Connector Set and Keying Fingers.....	149
19.1 Introduction.....	149
19.2 NY4920/10 Connector Set for One System.....	149
19.3 Keying Fingers for Drive Power and Motor Connectors.....	149
20 NY4921: Capacitor kit.....	153
20.1 Introduction.....	153
20.2 Available Capacitor kits.....	153
20.3 Identification.....	153
20.4 Mechanical dimensions of the Capacitor kit.....	154
20.5 Installation of the Capacitor kit.....	155
20.6 Removal of the Capacitor kit.....	158
20.7 Commissioning.....	159
20.8 Maintenance.....	159
21 NY4922: Fan Units.....	161
21.1 Introduction.....	161
21.2 Available fan unit types.....	161
21.3 Identification.....	161
21.4 Mechanical dimensions of the fan units.....	162
21.5 Installation of the fan unit on the system housing.....	165
21.6 Removal of the fan unit.....	167
21.7 Commissioning.....	168
21.8 Maintenance.....	168

Table of Contents

	Page
22 NY4950: IEEE 1394b Cables and Chokes.....	169
23 NY4951: LMS sensor and shared sensor cables.....	171
23.1 LMS sensor extension cables.....	171
23.2 Shared sensor cable.....	171
23.3 Connection.....	171
23.4 Cable specifications.....	172
24 NY4980: LMS Hall sensor module.....	173
24.1 Available Hall sensor modules.....	173
24.2 Hall sensor dimensions.....	174
24.3 Hall sensor specifications.....	175
24.4 Hall sensor connection.....	175
24.5 Hall sensor installation.....	177
25 NY4981: LMS MR sensor module.....	179
25.1 Available MR sensor modules.....	179
25.2 MR sensor dimensions.....	180
25.3 MR sensor specifications.....	180
25.4 MR sensor connection.....	181
25.5 MR sensor installation.....	182
26 NY4985: Magnetic scale.....	185
26.1 Introduction.....	185
26.2 Available magnetic scales.....	185
26.3 Magnetic scale dimensions.....	185
26.4 Magnetic scale specifications.....	186
26.5 Magnetic scale installation guide lines.....	186
27 LMS coils and magnet plates.....	189
27.1 TM series coils and magnet plates.....	189
27.2 TL series coils and magnet plates.....	195
27.3 TB series coils and magnet plates.....	199
27.4 Coil cable connection information.....	205
28 NYCe 4000 Hardware Glossary.....	207
29 Installation, Earthing, Shielding, EMC, Electrical Connections.....	209
29.1 Introduction.....	209
29.2 Connection Diagram Overview.....	209
29.3 General EMC Measures for Design and Installation.....	210
29.4 EMC-optimal Installation in Machine and Control Cabinet.....	211
29.4.1 Introduction.....	211

Table of Contents

	Page
29.4.2	Interference-free area (area A)..... 212
29.4.3	Interference-susceptible area (area B)..... 213
29.4.4	Strongly interference-susceptible area (area C)..... 213
29.5	Ground Connections..... 215
29.6	Installation of Signal Cables..... 216
29.7	Protective Earth Connection and Machine Frame..... 216
29.8	Installation of the NYCe 4000 System Housing..... 217
29.9	Connection of NYCe 4000 Systems..... 218
29.9.1	General Cabling Remarks..... 218
29.9.2	Power Supply Cables..... 218
29.9.3	Motor Cables..... 218
29.9.4	Encoder and/or Hall Sensor Cable, Analog Input, Analog Output..... 218
29.9.5	Fast Digital I/O, Digital I/O..... 219
29.10	Power Supply..... 219
29.10.1	Requirements on Mains Circuits..... 219
29.10.2	Combination of Power Supplies..... 219
29.10.3	24V System Power Supply..... 220
29.10.4	Drive Power Supply..... 220
29.10.5	(Fast) Digital I/O 24V Power Supply..... 220
29.10.6	Fuse Rating and Wire Diameter..... 220
29.11	PC..... 221
29.12	Installation Differences for NY40x2 and NY40x3 System Housings..... 222
30	Environmental Conditions..... 225
30.1	Thermal..... 225
30.2	Free clearance space..... 225
30.3	Shock and Vibration..... 226
30.4	Electromagnetic Compatibility..... 226
30.5	Environment..... 227
31	Cleaning, Disposal and Environmental Protection..... 229
31.1	Cleaning..... 229
31.2	Disposal..... 229
31.3	Environmental Protection..... 229
32	Service and Support..... 231
32.1	Helpdesk..... 231
32.2	Service-Hotline..... 231
32.3	Internet..... 231
32.4	Vor der Kontaktaufnahme... - Before contacting us..... 231

1 Introduction

1.1 Purpose of Documentation

This NYCe 4000 "Standard Housings and Accessories" Manual provides information about standard housings and accessories for the NYCe 4000 system. You can find on the internet (<http://www.boschrexroth.com/various/utilities/mediadirectory/index.jsp?oid=326148&language=en-GB>) the latest version of this manual. Click the links "Electric Drives and Controls" → "Control Units" → "Controls" → "NYCe 4000" on the mentioned webpage.

The following system housings are described in this manual.

NYS04.2-ST-01-ULNN-NY4013	NYS04.2-ST-02-ULNN-NY4023
NYS04.2-ST-03-ULNN-NY4033	NYS04.2-ST-04-ULNN-NY4043
NYS04.2-ST-05-ULNN-NY4053	NYS04.1-ST-03-4125-NY4063
NYS04.2-ST-02-LMSN-NY4074	NYS04.1-ST-01-LMS-SERCOS-NY4079

Tab. 1-1: System housings described in this manual

The following accessories are described in this manual.

NYM04.1-ESC-NNNN-NY4199	NYA04.1-COVRPL-NO-USED-NY4900
NYA04.1-STRAIN-RELIEF-5PCS-4110-NY4901	NYA04.1-STRAIN-RELIEF-41XX-NY4901/10
NYA04.1-SHIELD-SUP-MOT-5PCS-NY4910	NYA04.1-1394B-INT-MOD1-NY4915/10
NYA04.1-1394B-INT-CAT-NY4916/10	NYA04.1-1394B-INT-PCIE-NY4917
HAWA MCS KONVERTER FWB-UTPS400	NYA04.1-CONSET-SYSPW-NY4920/10
NYA04.1-CAP-100V-NY4921	NYA04.1-CAP-200V-NY4921/10
NYA04.1-FAN-1DRV-NY4922/00	NYA04.1-FAN-2DRV-NY4922/10
NYA04.1-FAN-3DRV-NY4922/20	NYA04.1-FAN-4DRV-NY4922/30
NYA04.1-FAN-5DRV-NY4922/50	NYA04.1-1394B-CABLE-B-B-00.5M-NY4950
NYA04.1-1394B-CABLE-B-B-01.0M-NY4950/10	NYA04.1-1394B-CABLE-B-B-02.0M-NY4950/20
NYA04.1-1394B-CABLE-B-B-04.5M-NY4950/30	NYA04.1-1394B-CABLE-ANGLED-01.2M-NY4950/40
NYA04.1-CHOKES-10PCS-1394B-NY4950/99	NYA04.1-LMS-MUX2-10Vtt-5V-NY4960/10
NYA04.1-LMS-MUX2-10Vtt-15V-NY4960/20	NYA04.1-LMS-COIL-UNIT-TM3S-3685075
NYA04.1-LMS-COIL-UNIT-TM6S-3685076	NYA04.1-LMS-COIL-UNIT-TM12S-3685078
NYA04.1-LMS-MAGNETTM-96MM-3685225	NYA04.1-LMS-MAGNETTM-144MM-3685226
NYA04.1-LMS-MAGNETTM-384MM-3685227	NYA04.1-LMS-MAGNETTMV-144MM-120C-3685419
NYA04.1-LMS-MAGNETTMV-384MM-120C-3685511	NYA04.1-LMS-COIL-UNIT-TL6N-3697458
NYA04.1-LMS-COIL-UNIT-TL6S-3685032	NYA04.1-LMS-COIL-UNIT-TL9N-3685311
NYA04.1-LMS-COIL-UNIT-TL9S-3675312	NYA04.1-LMS-COIL-UNIT-TL12N-3697459
NYA04.1-LMS-COIL-UNIT-TL12S-3685033	NYA04.1-LMS-COIL-UNIT-TL15N-3687460
NYA04.1-LMS-COIL-UNIT-TL15S-3685034	NYA04.1-LMS-COIL-UNIT-TL18N-3685223
NYA04.1-LMS-COIL-UNIT-TL18S-3685224	NYA04.1-LMS-COIL-UNIT-TL24N-3685014

Introduction

NYA04.1-LMS-COIL-UNIT-TL24S-3685035	NYA04.1-LMS-MAGNETTL-192MM-3685193
NYA04.1-LMS-MAGNETTL-288MM-3685194	NYA04.1-LMS-MAGNETTLV-192MM-120C-3685457
NYA04.1-LMS-MAGNETTLV-288MM-120C-3685472	NYA04.1-LMS-MAGNETTLV-192MM-150C-3685473
NYA04.1-LMS-MAGNETTLV-288MM-150C-3685420	NYA04.1-LMS-COIL-UNIT-TB12N-3685155
NYA04.1-LMS-COIL-UNIT-TB12S-3685157	NYA04.1-LMS-COIL-UNIT-TB15N-3685122
NYA04.1-LMS-COIL-UNIT-TB15S-3685120	NYA04.1-LMS-COIL-UNIT-TB30N-3685123
NYA04.1-LMS-COIL-UNIT-TB30S-3685121	NYA04.1-LMS-COIL-UNIT-TBW18N-3685263
NYA04.1-LMS-COIL-UNIT-TBW18S-3685264	NYA04.1-LMS-COIL-UNIT-TBW30N-3685242
NYA04.1-LMS-COIL-UNIT-TBW30S-3685243	NYA04.1-LMS-COIL-UNIT-TBW45N-3685244
NYA04.1-LMS-COIL-UNIT-TBW45S-3685245	NYA04.1-LMS-MAGNETTB-192MM-3685221
NYA04.1-LMS-MAGNETTB-288MM-3685222	NYA04.1-LMS-MAGNETTBV-192MM-120C-3685474
NYA04.1-LMS-MAGNETTBV-288MM-120C-3685475	NYA04.1-LMS-HALLSENSOR-24-180-NY4980/00
NYA04.1-LMS-HALLSENSOR-24-90-NY4980/10	NYA04.1-LMS-MRSENSOR-180-NY4981/00
NYA04.1-LMS-MAGNETSCALE-5-XXXX-NY4985	NYA04.1-SENSORCABLE-M-F-00.6M-NY4951/00
NYA04.1-SENSORCABLE-M-F-01.5M-NY4951/10	NYA04.1-SENSORCABLE-M-F-03.0M-NY4951/20
NYA04.1-SENSORCABLE-M-F-05.0M-NY4951/30	NYA04.1-SENSORCABLE-M-F-09.0M-NY4951/40
NYA04.1-SHARED-CABLE-M-M-01.0M-NY4951/70	

Tab. 1-2: Accessories described in this manual

The "Standard Housings and Accessories" Manual is intended for electrical engineers, system engineers and users of the NYCe 4000 system. They can use this document as a reference for connecting and installing a specific NYCe 4000 system.

WARNING

Personal injury and property damage can be caused by incorrect usage of the modules, machines and installations!

Take the content of this "Standard Housings and Accessories" Manual into account.

Further, this "Standard Housings and Accessories" Manual contains the following information.

- Identification information and dimensions of each system housing.
- Specification of the headers on the base plate of the system housing.
- Detailed connection information for each header.
- Installation instructions for a system housing.
- Electromagnetic compatibility (EMC) issues.
- Environmental conditions, maintenance and disposal information.

Each chapter that describes a NYCe 4000 component shows the dimensions of the component and lists all connections. A separate chapter lists common detailed information for the headers on the base plate of the system housings.

1.2 General Information

Damage can be caused to the NYCe 4000 module or circuit boards if electrostatic charge present in people and/or tools is discharged across them. Therefore, please note the following information:

⚠ WARNING

Electrostatic charges can cause damage to electronic components and interfere with their operational safety!

Objects that come into contact with components and circuit boards must be discharged by means of grounding. Otherwise, errors may occur when triggering motors and moving elements.

Such objects include:

- the copper bit when soldering
- the human body (discharge through touching a conductive, grounded item)
- parts and tools (placing on a conductive support)

Components sensitive to electrostatic discharge may only be stored or dispatched in conductive packaging.



Rexroth connection diagrams are only to be used for producing installation connection diagrams. The installation connection diagrams of the machine manufacturer must be used for wiring the installation!

- Route signal wires separately from the load resistance wires because of the occurrence of interference.
- Feed analog signals (for example, command values, actual values) via shielded lines.
- Do not connect mains, DC bus or power leads to low voltages or allow them to come into contact.
- When carrying out a high voltage test or insulation withstand test on the machine's electrical equipment, disconnect all connections to the units. This protects the electronic components (permitted in accordance with EN 60204-1).

⚠ WARNING

Plugging and unclamping live connections can damage the controller.

Do not plug in or unclamp live connections.

Introduction

1.3 Cross reference component name, order number, short name

1.3.1 Introduction

This chapter identifies the components of the NYCe 4000 system, the official component name with its order number and the short name as used in the user documentation. The short name is used in the user documentation to improve readability.

1.3.2 NYCe 4000 system housings

Component name	Order number	Short name
NYS04.2-ST-01-ULNN-NY4013	R911172904	NY4013
NYS04.2-ST-02-ULNN-NY4023	R911172905	NY4023
NYS04.2-ST-03-ULNN-NY4033	R911172966	NY4033
NYS04.2-ST-04-ULNN-NY4043	R911172906	NY4043
NYS04.2-ST-05-ULNN-NY4053	R911172907	NY4053
NYS04.1-ST-03-4125-NY4063	R911172218	NY4063
NYS04.2-ST-02-LMSN-NY4074	R911378504	NY4074
NYS04.1-ST-01-LMS-SERCOS-NY4079	R911378505	NY4079

Tab. 1-3: Component name - order number and short name overview of NYCe 4000 system housings

1.3.3 NYCe 4000 MCUs, drive, digital I/O and SERCOS III Master modules

Component name	Order number	Short name
NYM04.1-MCU-NNNN-NY4110	R911318960	NY4110
NYM04.1-MCU-ETHER-NY4112	R911173007	NY4112
NYM04.1-MCU-ETHER-NY4114	R911173598	NY4114
NYM04.1-2PW-NNNN-NY4120	R911318961	NY4120
NYM04.1-2PW-LMSN-NY4120/10	R911320447	NY4120/10
NYM04.1-5PW-NNNN-NY4125	R911172221	NY4125
NYM04.1-2LD-NNNN-NY4130	R911318962	NY4130
NYM04.1-1HV-NNNN-NY4140	R911318963	NY4140
NYM04.1-SE3-MAST-NY4150	R911325072	NY4150
NYM04.1-SE3-MAST-NY4150/10	R911172782	NY4150/10

Tab. 1-4: Component name - order number and short name overview of NYCe 4000 system modules

1.3.4 NYCe 4000 accessories

Component name	Order number	Short name
NYM04.1-ESC-NNNN-NY4199	R911320450	NY4199
NYA04.1-COVRPL-NO-USED-NY4900	R911318964	NY4900
NYA04.1-STRAIN-RELIEF-5PCS-4110-NY4901	R911322873	NY4901

Introduction

Component name	Order number	Short name
NYA04.1-STRAIN-RELIEF-41XX-NY4901/10	R911172941	NY4901/10
NYA04.1-SHIELD-SUP-MOT-5PCS-NY4910	R911172999	NY4910
NYA04.1-1394B-INT-MOD1-NY4915/10	R911328808	NY4915/10
NYA04.1-1394B-INT-CAT-NY4916/10	R911325070	NY4916/10
NYA04.1-1394B-INT-PCIE-NY4917	R911345705	NY4917
HAWA MCS KONVERTER FWB-UTPS400	R911329980	-
NYA04.1-CONSET-SYSPW-NY4920/10	R911325078	NY4920/10
NYA04.1-CAP-100V-NY4921	R911325079	NY4921
NYA04.1-CAP-200V-NY4921/10	R911325082	NY4921/10
NYA04.1-FAN-1DRV-NY4922/00	R911328062	NY4922/00
NYA04.1-FAN-2DRV-NY4922/10	R911325083	NY4922/10
NYA04.1-FAN-3DRV-NY4922/20	R911172220	NY4922/20
NYA04.1-FAN-4DRV-NY4922/30	R911328063	NY4922/30
NYA04.1-FAN-5DRV-NY4922/50	R911325084	NY4922/50
NYA04.1-1394B-CABLE-B-B-00.5M-NY4950	R911318966	NY4950
NYA04.1-1394B-CABLE-B-B-01.0M-NY4950/10	R911318967	NY4950/10
NYA04.1-1394B-CABLE-B-B-02.0M-NY4950/20	R911318968	NY4950/20
NYA04.1-1394B-CABLE-B-B-04.5M-NY4950/30	R911318969	NY4950/30
NYA04.1-1394B-CABLE-ANGLED-01.2M-NY4950/40	R911334596	NY4950/40
NYA04.1-CHOKES-10PCS-1394B-NY4950/99	R911322874	NY4950/99
NYA04.1-LMS-MUX2-10Vtt-5V-NY4960/10	R911320451	NY4960/10
NYA04.1-LMS-MUX2-10Vtt-15V-NY4960/20	R911320453	NY4960/20
NYA04.1-LMS-COIL-UNIT-TM3S-3685075	R911343771	-
NYA04.1-LMS-COIL-UNIT-TM6S-3685076	R911343770	-
NYA04.1-LMS-COIL-UNIT-TM12S-3685078	R911343769	-
NYA04.1-LMS-COIL-UNIT-TM18N-3685500	R911384027	-
NYA04.1-LMS-COIL-UNIT-TM18S-3685519	R911384029	-
NYA04.1-LMS-MAGNETTM-96MM-3685225	R911343774	-
NYA04.1-LMS-MAGNETTM-144MM-3685226	R911343775	-
NYA04.1-LMS-MAGNETTM-384MM-3685227	R911343773	-
NYA04.1-LMS-MAGNETTMV-144MM-120C-3685419	R911343772	-
NYA04.1-LMS-MAGNETTMV-384MM-120C-3685511	R911369668	-
NYA04.1-LMS-COIL-UNIT-TL6N-3697458	R911343602	-
NYA04.1-LMS-COIL-UNIT-TL6S-3685032	R911343601	-
NYA04.1-LMS-COIL-UNIT-TL9N-3685311	R911343558	-
NYA04.1-LMS-COIL-UNIT-TL9S-3675312	R911343559	-

Introduction

Component name	Order number	Short name
NYA04.1-LMS-COIL-UNIT-TL12N-3697459	R911343597	-
NYA04.1-LMS-COIL-UNIT-TL12S-3685033	R911343435	-
NYA04.1-LMS-COIL-UNIT-TL15N-3687460	R911343560	-
NYA04.1-LMS-COIL-UNIT-TL15S-3685034	R911343561	-
NYA04.1-LMS-COIL-UNIT-TL18N-3685223	R911343562	-
NYA04.1-LMS-COIL-UNIT-TL18S-3685224	R911343603	-
NYA04.1-LMS-COIL-UNIT-TL24N-3685014	R911343604	-
NYA04.1-LMS-COIL-UNIT-TL24S-3685035	R911343605	-
NYA04.1-LMS-MAGNETTL-192MM-3685193	R911343580	-
NYA04.1-LMS-MAGNETTL-288MM-3685194	R911343563	-
NYA04.1-LMS-MAGNETTLV-192MM-120C-3685457	R911343565	-
NYA04.1-LMS-MAGNETTLV-288MM-120C-3685472	R911343573	-
NYA04.1-LMS-MAGNETTLV-192MM-150C-3685473	R911343576	-
NYA04.1-LMS-MAGNETTLV-288MM-150C-3685420	R911343579	-
NYA04.1-LMS-COIL-UNIT-TB12N-3685155	R911343767	-
NYA04.1-LMS-COIL-UNIT-TB12S-3685157	R911347637	-
NYA04.1-LMS-COIL-UNIT-TB15N-3685122	R911347642	-
NYA04.1-LMS-COIL-UNIT-TB15S-3685120	R911347643	-
NYA04.1-LMS-COIL-UNIT-TB30N-3685123	R911347644	-
NYA04.1-LMS-COIL-UNIT-TB30S-3685121	R911347645	-
NYA04.1-LMS-COIL-UNIT-TBW18N-3685263	R911347646	-
NYA04.1-LMS-COIL-UNIT-TBW18S-3685264	R911347647	-
NYA04.1-LMS-COIL-UNIT-TBW30N-3685242	R911347648	-
NYA04.1-LMS-COIL-UNIT-TBW30S-3685243	R911347649	-
NYA04.1-LMS-COIL-UNIT-TBW45N-3685244	R911347650	-
NYA04.1-LMS-COIL-UNIT-TBW45S-3685245	R911347651	-
NYA04.1-LMS-MAGNETTB-192MM-3685221	R911343765	-
NYA04.1-LMS-MAGNETTB-288MM-3685222	R911343763	-
NYA04.1-LMS-MAGNETTBV-192MM-120C-3685474	R911343764	-
NYA04.1-LMS-MAGNETTBV-288MM-120C-3685475	R911343768	-
NYA04.1-LMS-HALLSENSOR-24-180-NY4980/00	R911173569	NY4980/00
NYA04.1-LMS-HALLSENSOR-24-90-NY4980/10	R911173570	NY4980/10
NYA04.1-LMS-MRSENSOR-180-NY4981/00	R911174592	NY4981/00
NYA04.1-LMS-MAGNETSCALE-5-XXXX-NY4985	R91117yyyy	NY4985
NYA04.1-SHARED-CABLE-M-M-01.0M-NY4951/70	R911174516	NY4951/70
NYA04.1-SENSORCABLE-M-F-00.6M-NY4951/00	R911174517	NY4951/00

Introduction

Component name	Order number	Short name
NYA04.1-SENSORCABLE-M-F-01.5M-NY4951/10	R911174518	NY4951/10
NYA04.1-SENSORCABLE-M-F-03.0M-NY4951/20	R911174519	NY4951/20
NYA04.1-SENSORCABLE-M-F-05.0M-NY4951/30	R911174520	NY4951/30
NYA04.1-SENSORCABLE-M-F-09.0M-NY4951/40	R911174521	NY4951/40

Tab. 1-5: Component name - order number and short name overview of NYCe 4000 accessories

2 Safety Instructions for Electric Drives and Controls

2.1 Definitions of Terms

Application Documentation	The entire documentation used to inform the user of the product about the use and safety-relevant features for configuring, integrating, installing, mounting, commissioning, operating, maintaining, repairing and decommissioning the product. The following terms are also used for this kind of documentation: User Guide, Operation Manual, Commissioning Manual, Instruction Manual, Project Planning Manual, Application Manual, etc.
Component	Combination of elements with a specified function, which are part of a piece of equipment, device or system. Components of a drive and control system are, for example, supply units, drive controllers, mains choke, mains filter, motors, cables, etc.
Control System	Several interconnected control components placed on the market as a single functional unit.
Device	Finished product with a defined function, intended for users and placed on the market as an individual piece of merchandise.
Drive System	A group of components consisting of electric motor(s), motor encoder(s) and cable(s), supply units and drive controllers, as well as possible auxiliary and additional components, such as mains filter, mains choke, etc.
Electrical Equipment	Objects used to generate, convert, transmit, distribute or apply electrical energy, such as machines, transformers, switching devices, cables, lines, power-consuming devices, circuit board assemblies, plug-in units, control cabinets, etc.
Installation	Several devices or systems interconnected for a defined purpose and on a defined site which, however, are not intended to be placed on the market as a single functional unit.
Machine	Entirety of interconnected parts or units at least one of which is movable. Thus, a machine consists of the appropriate machine drive elements, as well as control and power circuits, which have been assembled for a specific application. A machine is, for example, intended for processing, treatment, movement or packaging of a material. The term "machine" also covers a combination of machines which are arranged and controlled in such a way that they function as a unified whole.
Manufacturer	Individual or legal entity bearing responsibility for the design and manufacture of a product which is placed on the market in the individual's or legal entity's name. The manufacturer can use finished products, finished parts or finished elements, or contract out work to subcontractors. However, the manufacturer must always have overall control and possess the required authority to take responsibility for the product.
Product	Produced device, component, part, system, software, firmware, among other things.
Project Planning Manual	Part of the application documentation used to support the dimensioning and planning of systems, machines or installations.
Qualified Persons	In terms of this application documentation, qualified persons are those persons who are familiar with the installation, mounting, commissioning and operation of the components of the drive and control system, as well as with the hazards this implies, and who possess the qualifications their work requires. To comply with these qualifications, it is necessary, among other things,

Safety Instructions for Electric Drives and Controls

- to be trained, instructed or authorized to switch electric circuits and devices safely on and off, to ground them and to mark them,
- to be trained or instructed to maintain and use adequate safety equipment,
- to attend a course of instruction in first aid.

User A person installing, commissioning or using a product which has been placed on the market.

2.2 Explanation of Signal Words and the Safety Alert Symbol

The Safety Instructions in the available application documentation contain specific signal words (DANGER, WARNING, CAUTION or NOTICE) and, where required, a safety alert symbol (in accordance with ANSI Z535.6-2006).

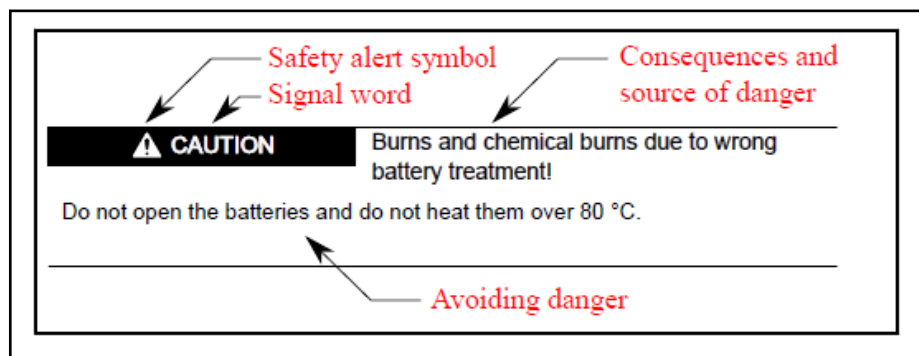


Fig. 2-1: Example of a Safety Instruction

The signal word is meant to draw the reader's attention to the safety instruction and identifies the hazard severity.

The safety alert symbol (a triangle with an exclamation point), which precedes the signal words DANGER, WARNING and CAUTION, is used to alert the reader to personal injury hazards.

DANGER

In case of non-compliance with this safety instruction, death or serious injury **will** occur.

WARNING

In case of non-compliance with this safety instruction, death or serious injury **can** occur.

⚠ CAUTION

In case of non-compliance with this safety instruction, minor or moderate injury can occur.

NOTICE

In case of non-compliance with this safety instruction, property damage can occur.

2.3 General Information

2.3.1 Using the Safety Instructions and Passing Them on to Others

Do not attempt to install and operate the electric components of the drive and control system without first reading all documentation provided with the product. Read and understand these safety instructions and all user documentation prior to working with these components. If you do not have the user documentation for the components, contact your responsible Bosch Rexroth sales partner. Ask for these documents to be sent immediately to the person or persons responsible for the safe operation of the components.

If the component is resold, rented and/or passed on to others in any other form, these safety instructions must be delivered with the component in the official language of the user's country.

⚠ WARNING

Improper use of these components, failure to follow the safety instructions in this document or tampering with the product, including disabling of safety devices, can result in property damage, injury, electric shock or even death.

Observe the safety instructions!

2.3.2 Requirements for Safe Use

Read the following instructions before initial commissioning of the electric components of the drive and control system in order to eliminate the risk of injury and/or property damage. You must follow these safety instructions.

- Bosch Rexroth is not liable for damages resulting from failure to observe the safety instructions.
- Read the operating, maintenance and safety instructions in your language before commissioning. If you find that you cannot completely understand the application documentation in the available language, please ask your supplier to clarify.
- Proper and correct transport, storage, mounting and installation, as well as care in operation and maintenance, are prerequisites for optimal and safe operation of the component.
- Only qualified persons may work with components of the drive and control system or within its proximity.

Safety Instructions for Electric Drives and Controls

- Only use accessories and spare parts approved by Bosch Rexroth.
- Follow the safety regulations and requirements of the country in which the electric components of the drive and control system are operated.
- Only use the components of the drive and control system in the manner that is defined as appropriate. See [chapter 3.1 "Appropriate Use" on page 27](#).
- The ambient and operating conditions given in the application documentation at hand must be observed.
- The equipment is designed for installation in industrial machinery.
- Safety-relevant applications are only allowed if clearly and explicitly specified in the application documentation "Integrated Safety Technology". If this is not the case, they are excluded. Safety-relevant are all such applications which can cause danger to persons and property damage.

For example, the following areas of use are not permitted: construction cranes, elevators used for people or freight, devices and vehicles to transport people, medical applications, refinery plants, transport of hazardous goods, nuclear applications, applications sensitive to high frequency, mining, food processing, control of protection equipment (also in a machine).

- The information given in the application documentation with regard to the use of the delivered components contains only examples of applications and suggestions.

The machine and installation manufacturer must

- make sure that the delivered components are suited for his individual application and check the information given in this application documentation with regard to the use of the components,
- make sure that his individual application complies with the applicable safety regulations and standards and carry out the required measures, modifications and complements.
- Commissioning of the delivered components is only allowed once it is sure that the machine or installation in which the components are installed complies with the national regulations, safety specifications and standards of the application.
- Operation is only allowed if the national EMC regulations for the application are met.
- The instructions for installation in accordance with EMC requirements can be found in the section on EMC in the documentation.

The machine or installation manufacturer is responsible for compliance with the limit values as prescribed in the national regulations.

- The technical data, connection and installation conditions of the components are specified in the respective application documentations and must be followed at all times.

National regulations which the user must take into account

- European countries: According to European EN standards
- United States of America (USA):
 - National Electrical Code (NEC)
 - National Electrical Manufacturers Association (NEMA), as well as local engineering regulations

Safety Instructions for Electric Drives and Controls

- Regulations of the National Fire Protection Association (NFPA)
- Canada: Canadian Standards Association (CSA)
- Other countries:
 - International Organization for Standardization (ISO)
 - International Electrotechnical Commission (IEC)

2.3.3 Hazards by Improper Use

- High electrical voltage and high working current! Danger to life or serious injury by electric shock!
- High electrical voltage by incorrect connection! Danger to life or injury by electric shock!
- Dangerous movements! Danger to life, serious injury or property damage by unintended motor movements!
- Health hazard for persons with heart pacemakers, metal implants and hearing aids in proximity to electric drive systems!
- Risk of burns by hot housing surfaces!
- Risk of injury by improper handling! Injury by crushing, shearing, cutting, hitting!

2.4 Instructions with Regard to Specific Dangers

2.4.1 Protection against Contact with Electrical Parts and Housings



This section concerns components of the drive and control system with voltages of **more than 50 volts**.

Contact with parts conducting voltages above 50 volts can cause personal danger and electric shock. When operating components of the drive and control system, it is unavoidable that some parts of these components conduct dangerous voltage.

Safety Instructions for Electric Drives and Controls

⚠ WARNING**High electrical voltage! Danger to life, risk of injury by electric shock or serious injury!**

- Only qualified persons are allowed to operate, maintain and/or repair the electric components of the drive and control system.
- Follow the general installation and safety regulations when working on power installations.
- Before switching on, the equipment grounding conductor must have been permanently connected to all electric components in accordance with the connection diagram.
- Even for brief measurements or tests, operation is only allowed if the equipment grounding conductor has been permanently connected to the points of the components provided for this purpose.
- Before accessing electrical parts with voltage potentials higher than 50 V, you must disconnect electric components from the mains or from the power supply unit. Secure the electric component from reconnection.
- With electric components, observe the following aspects:
Always wait **30 minutes** after switching off power to allow live capacitors to discharge before accessing an electric component. Measure the electrical voltage of live parts before beginning to work to make sure that the equipment is safe to touch.
- Install the covers and guards provided for this purpose before switching on.
- Never touch electrical connection points of the components while power is turned on.
- Do not remove or plug in connectors when the component has been powered.
- As a basic principle, residual-current-operated circuit-breakers cannot be used for electric drives to prevent direct contact.
- Secure built-in devices from penetrating foreign objects and water, as well as from direct contact, by providing an external housing, for example a control cabinet.
- The System Housing may only be used as build-in equipment, which means that the end-user must provide a suitable fire and electrical safe enclosure.
- The System Housing has no certified functional safety on board. This means that all precautions for a safe operation must be ensured by external components.
- The System Housing may only be used in combination with external approved (for example EN60950-1 or EN61558-2-16) power supplies which have the required insulation barriers.

To be observed with electrical drive and filter components:

Safety Instructions for Electric Drives and Controls

⚠ WARNING

High housing voltage and high leakage current! Danger to life, risk of injury by electric shock!

- Before switching on and before commissioning, ground or connect the components of the drive and control system to the equipment grounding conductor at the grounding points.
- Connect the equipment grounding conductor of the components of the drive and control system permanently to the main power supply at all times. The leakage current is greater than 3.5 mA.
- Establish an equipment grounding connection with a copper wire of a cross section of at least 10 mm² (AWG 8) or additionally run a second equipment grounding conductor of the same cross section as the original equipment grounding conductor.

2.4.2 Safety Extra-Low Voltage as Protection Against Electric Shock

Safety extra-low voltage (SELV) is used to allow connecting devices with basic insulation to extra-low voltage circuits.

All connections and terminals with voltages between 5 and 50 volts at the components of the Bosch Rexroth drive and control system are SELV systems. It is allowed to connect devices equipped with basic insulation (such as programming devices, PCs, notebooks, display units) to these connections.

⚠ WARNING

Danger to life, risk of injury by electric shock! High electrical voltage by incorrect connection!

If extra-low voltage circuits of devices containing voltages and circuits of more than 50 volts (for example, the mains connection) are connected to Bosch Rexroth products, the connected extra-low voltage circuits must comply with the requirements for SELV ("Safety Extra-Low Voltage").

- Only connect equipment, electrical components and cables of the protective low voltage type to all terminals and clamps with voltages of 0 to 50 Volts.
- Only electrical circuits may be connected which have double or reinforced isolation against high voltage circuits. Double or reinforced isolation is achieved, for example, with an isolating transformer or when battery-operated.

2.4.3 Protection against Dangerous Movements

Dangerous movements can be caused by faulty control of connected motors. Some common examples are:

- Improper or wrong wiring or cable connection
- Operator errors
- Wrong input of parameters before commissioning
- Malfunction of sensors, encoders and monitoring devices
- Defective components

Safety Instructions for Electric Drives and Controls

- Software or firmware errors

These errors can occur immediately after equipment is switched on or even after an unspecified time of trouble-free operation.

The monitoring functions in the components of the drive and control system will normally be sufficient to avoid malfunction in the connected drives. Regarding personal safety, especially the danger of injury and/or property damage, this alone cannot be relied upon to ensure complete safety. Until the integrated monitoring functions become effective, it must be assumed in any case that faulty drive movements will occur. The extent of faulty drive movements depends upon the type of control and the state of operation.

Safety Instructions for Electric Drives and Controls

⚠ WARNING**Dangerous movements! Danger to life, risk of injury, serious injury or property damage!**

- A **risk assessment** must be prepared for the installation or machine, with its specific conditions, in which the components of the drive and control system are installed. As a result of the risk assessment, the user must provide for monitoring functions and higher-level measures on the installation side for personal safety. The safety regulations applicable to the installation or machine must be taken into consideration. Unintended machine movements or other malfunctions are possible if safety devices are disabled, bypassed or not activated.

To avoid accidents, injury and/or property damage:

- Keep free and clear of the machine's range of motion and moving machine parts. Prevent personnel from accidentally entering the machine's range of motion by using, for example:
 - Safety fences
 - Safety guards
 - Protective coverings
 - Light barriers
 - Make sure the safety fences and protective coverings are strong enough to resist maximum possible kinetic energy.
 - Mount emergency stop switches in the immediate reach of the operator. Before commissioning, verify that the emergency stop equipment works. Do not operate the machine if the emergency stop switch is not working.
 - Prevent unintended start-up. Isolate the drive power connection by means of an emergency stop circuit or use a safe starting lockout.
 - Make sure that the drives are brought to a safe standstill before accessing or entering the danger zone.
 - Additionally secure vertical axes against falling or dropping after switching off the motor power by, for example,
 - mechanically securing the vertical axes,
 - adding an external braking/arrester/clamping mechanism or
 - ensuring sufficient equilibration of the vertical axes.
 - The standard equipment **motor holding brake** or an external holding brake controlled by the drive controller is **not sufficient to guarantee personal safety!**
 - Disconnect electrical power to the components of the drive and control system using the master switch and secure them from reconnection for:
 - Maintenance and repair work
 - Cleaning of equipment
 - Long periods of discontinued equipment use
 - Prevent the operation of high-frequency, remote control and radio equipment near electric/electronic components of the drive and control system and their supply leads. If the use of these devices cannot be avoided, check the machine or installation, before initial commissioning of the drive and control system, for possible malfunctions when operating such high-frequency, remote control and radio equipment in its possible positions of normal use. It might possibly be necessary to perform a special electromagnetic compatibility (EMC) test.
-

Safety Instructions for Electric Drives and Controls

2.4.4 Protection against Magnetic and Electromagnetic Fields during Operation and Mounting

Magnetic and electromagnetic fields generated by current-carrying conductors or permanent magnets of electric motors represent a serious danger to persons with heart pacemakers, metal implants and hearing aids.

⚠ WARNING

Health hazard for persons with heart pacemakers, metal implants and hearing aids in proximity to electric components!

- Persons with heart pacemakers and metal implants are not allowed to enter the following areas:
 - Areas in which components of the drive and control systems are mounted, commissioned and operated.
 - Areas in which parts of motors with permanent magnets are stored, repaired or mounted.
- If it is necessary for somebody with a heart pacemaker to enter such an area, a doctor must be consulted prior to doing so. The noise immunity of implanted heart pacemakers differs greatly so that no general rules can be given.
- Those with metal implants or metal pieces, as well as with hearing aids, must consult a doctor before they enter the areas described above.

2.4.5 Protection against Contact with Hot Parts

⚠ CAUTION

Hot surfaces of components of the drive and control system. Risk of burns!

- Do not touch hot surfaces of, for example, braking resistors, heat sinks, supply units and drive controllers, motors, windings and laminated cores!
- According to the operating conditions, temperatures of the surfaces can be **higher than 60 °C (140 °F)** during or after operation.
- Before touching motors after having switched them off, let them cool down for a sufficiently long time. Cooling down can require **up to 140 minutes!** The time required for cooling down is approximately five times the thermal time constant specified in the technical data.
- After switching chokes, supply units and drive controllers off, wait **15 minutes** to allow them to cool down before touching them.
- Wear safety gloves or do not work at hot surfaces.
- For certain applications and according to the respective safety regulations, the manufacturer of the machine or installation has to take measures to avoid injuries caused by burns in the end application. These measures can be, for example: Warnings at the machine or installation, guards (shieldings or barriers) or safety instructions in the application documentation.

2.4.6 Protection during Handling and Mounting

⚠ CAUTION

Risk of injury by improper handling! Injury by crushing, shearing, cutting, hitting, and mechanical shock!

- Observe the relevant statutory regulations of accident prevention.
 - Use suitable equipment for mounting and transport.
 - Avoid jamming and crushing by appropriate measures.
 - Always use suitable tools. Use special tools if specified.
 - Use lifting equipment and tools in the correct manner.
 - Use suitable protective equipment (hard hat, safety goggles, safety shoes, safety gloves, for example).
 - Do not stand under hanging loads.
 - Immediately clean up any spilled liquids from the floor due to the risk of slipping.
-

3 Important Directions for Use

3.1 Appropriate Use

Introduction

Rexroth products represent state-of-the-art developments and manufacturing. They are tested prior to delivery to ensure operating safety and reliability.

WARNING

Personal injury and property damage caused by incorrect use of the products!

The products have been designed for use in the industrial environment and may only be used in the appropriate way. If they are not used in the appropriate way, situations resulting in property damage and personal injury can occur.



Rexroth, as manufacturer, is not liable for any damages resulting from inappropriate use. In such cases, the guarantee and the right to payment of damages resulting from inappropriate use are forfeited. The user alone carries all responsibility of the risks.

Before using Rexroth products, make sure that all the pre-requisites for an appropriate use of the products are satisfied:

- Personnel that in any way, shape or form uses our products must first read and understand the relevant safety instructions and be familiar with appropriate use.
- If the product takes the form of hardware, then they must remain in their original state, in other words, no structural changes are permitted. It is not permitted to decompile software products or alter source codes.
- Do not install damaged or faulty products or use them in operation.
- Make sure that the products have been installed in the manner described in the relevant documentation.

3.2 Areas of use and Application

NYCe 4000 modules made by Rexroth are designed to control electrical motors and monitor their operation.

Control and monitoring of the motors may require additional sensors and actuators.

Important Directions for Use



The NYCe 4000 modules may only be used with the accessories and parts specified in this documentation. If a component has not been specifically named, then it may neither be installed nor connected.

Operation is only permitted in the specified configurations and combinations of components using the software and firmware as specified in the relevant function descriptions.

Every NYCe 4000 module must be programmed before starting it up, making it possible for the motor to execute the specific functions of an application. The NYCe 4000 modules are designed for use in single or multiple-axis drive and control applications.

To ensure an application-specific use, the NYCe 4000 modules are available with differing drive power and different interfaces.

Typical applications of NYCe 4000 modules are the following.

- semiconductor machines
- solar cell machines

The NYCe 4000 modules may only be operated under the assembly, installation and ambient conditions as described in this documentation (temperature, system of protection, humidity, EMC requirements, etc.) and in the position specified.

3.3 Inappropriate Use

Using the NYCe 4000 modules outside of the above-referenced areas of application or under operating conditions other than described in the documentation, technical data and specifications is defined as "inappropriate use".

NYCe 4000 modules may not be used

- if they are subject to operating conditions that do not meet the specified ambient conditions. This includes, for example, operation under water, in case of extreme temperature fluctuations or extremely high maximum temperatures,
or
- if Rexroth has not specifically released them for that intended purpose.



Make sure you carefully follow the specifications outlined in [chapter 2.3 "General Information" on page 17](#).

3.4 Acceptance tests and approvals

3.4.1 Introduction

Declarations of conformity confirm that the components comply with valid EN standards and EU directives. If required, our sales representative can provide you with the declarations of conformity for our components.

3.4.2 Low voltage directive

The following components correspond to the standard

- EN61010-1:2010 (IEC 61010-1:2010)
 (Safety requirements for electrical equipment for measurement, control and laboratory use - Part 1: General requirements)

NYS04.2-ST-01-ULNN-NY4013	NYS04.2-ST-02-ULNN-NY4023
NYS04.2-ST-03-ULNN-NY4033	NYS04.2-ST-04-ULNN-NY4043
NYS04.2-ST-05-ULNN-NY4053	NYS04.1-ST-03-4125-NY4063
NYS04.2-ST-02-LMSN-NY4074	NYA04.1-CAP-100V-NY4921
NYA04.1-CAP-200V-NY4921/10	

Tab. 3-1: EN61010-1:2010

3.4.3 EMC directive

The following components correspond to the following standards

- EN61000-6-2:2005 (IEC61000-6-2:2005)
 (Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments)
- EN61000-6-4:2007 + A1:2011 (IEC61000-6-4:2006 + A1:2010)
 (Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments)

NYS04.2-ST-01-ULNN-NY4013	NYS04.2-ST-02-ULNN-NY4023
NYS04.2-ST-03-ULNN-NY4033	NYS04.2-ST-04-ULNN-NY4043
NYS04.2-ST-05-ULNN-NY4053	NYS04.1-ST-03-4125-NY4063
NYS04.2-ST-02-LMSN-NY4074	NYS04.1-ST-01-LMS-SERCOS-NY4079
NYM04.1-ESC-NNNN-NY4199	NYA04.1-CAP-100V-NY4921
NYA04.1-CAP-200V-NY4921/10	NYA04.1-LMS-HALLSENSOR-24-180-NY4980/00
NYA04.1-LMS-MRSENSOR-180-NY4981/00	NYA04.1-LMS-HALLSENSOR-24-90-NY4980/10

Tab. 3-2: EN61000-6-2:2005 and EN61000-6-4:2007/A1:2011

3.4.4 CE



Fig. 3-1: CE conformity

All above mentioned components comply with the requirements and the target of the following EU directive and with the following harmonized European standards.

Important Directions for Use

- Low Voltage Directive 2006/95/EG (valid until 19 April 2016)
- Low Voltage Directive 2014/35/EU (valid from 20 April 2016)
- EMC Directive 2014/30/EU

These components are built-in units which, owing to their installation characteristics, are not able to comply with the regulations for complete apparatus, machines or installations from the outset. For this reason, they may only be used for built-in purposes. The components may only be assessed with regard to their electrical and mechanical safety as well as to environmental effects (foreign bodies, moisture) after they have been installed in the product intended for the final user. After the component has been installed, its EMC properties may change. Hence the component intended for the final user (complete apparatus, machines or installations) should be inspected with regard to its EMC properties by the manufacturer of the product intended for the final user.

3.4.5 UL

The following components are UL certified (Underwriters Laboratories Inc. ®). You can find the evidence of certification on the internet address <http://www.ul.com> under "Certifications" by entering the file number of the "Company Name: Rexroth".



Fig. 3-2: UL listed

These components modules are certified according to:

- UL 61010-1:2012
UL file no. E353498
 - NYS04.2-ST-01-ULNN-NY4013
 - NYS04.2-ST-02-ULNN-NY4023
 - NYS04.2-ST-03-ULNN-NY4033
 - NYS04.2-ST-04-ULNN-NY4043
 - NYS04.2-ST-05-ULNN-NY4053
 - NYS04.2-ST-02-LMSN-NY4074
 - NYS04.1-ST-01-LMS-SERCOS-NY4079
 - NYA04.1-LMS-HALLSENSOR-24-180-NY4980/00
 - NYA04.1-LMS-HALLSENSOR-24-90-NY4980/10
 - NYA04.1-LMS-MRSENSOR-180-NY4981/00



Fig. 3-3: UL recognized

These components modules are certified according to:

- UL 61010-1:2012
UL file no. E353498
 - NYM04.1-ESC-NNNN-NY4199
 - NYA04.1-CAP-100V-NY4921
 - NYA04.1-CAP-200V-NY4921/10
 - NYA04.1-FAN-1DRV-NY4922/00
 - NYA04.1-FAN-2DRV-NY4922/10
 - NYA04.1-FAN-3DRV-NY4922/20
 - NYA04.1-FAN-4DRV-NY4922/30
 - NYA04.1-FAN-5DRV-NY4922/50

However, there can exist combinations with modules or accessories with limited or missing certification. Therefore, verify the registration according to the UL marking on the device.



Loss of UL conformity due to changes to the component.

The UL marking is only valid for the component in its delivery status. After any modification by the customer to the component the UL compliance is to be verified.



Loss of UL conformity due to assembly with not UL compliant components.

The UL marking is only valid for an assembly if all components used in the assembly are UL compliant.

3.4.6 RoHS

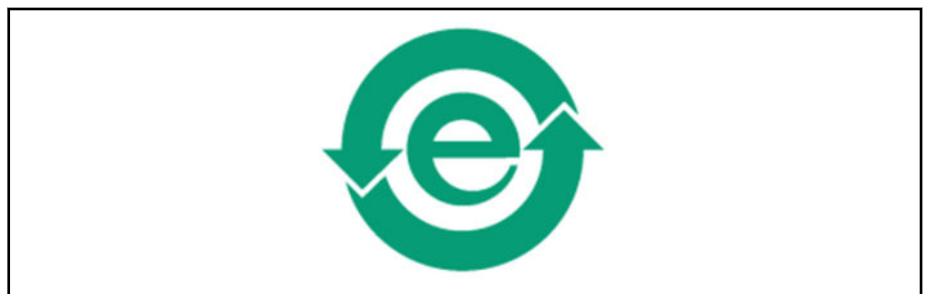


Fig. 3-4: China RoHS 2 marking

Important Directions for Use

The above mentioned components and the NY4985 comply with the requirements of the Administrative Measures for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products, known as China RoHS 2.

4 NY4013: 1 Drive Slot System Housing

4.1 Product Identification

The NY4013 system housing has two slots, one slot for the MCU and one slot for one drive module. Part number is R911172904, ordering code is NYS04.2-ST-01-ULNN-NY4013.

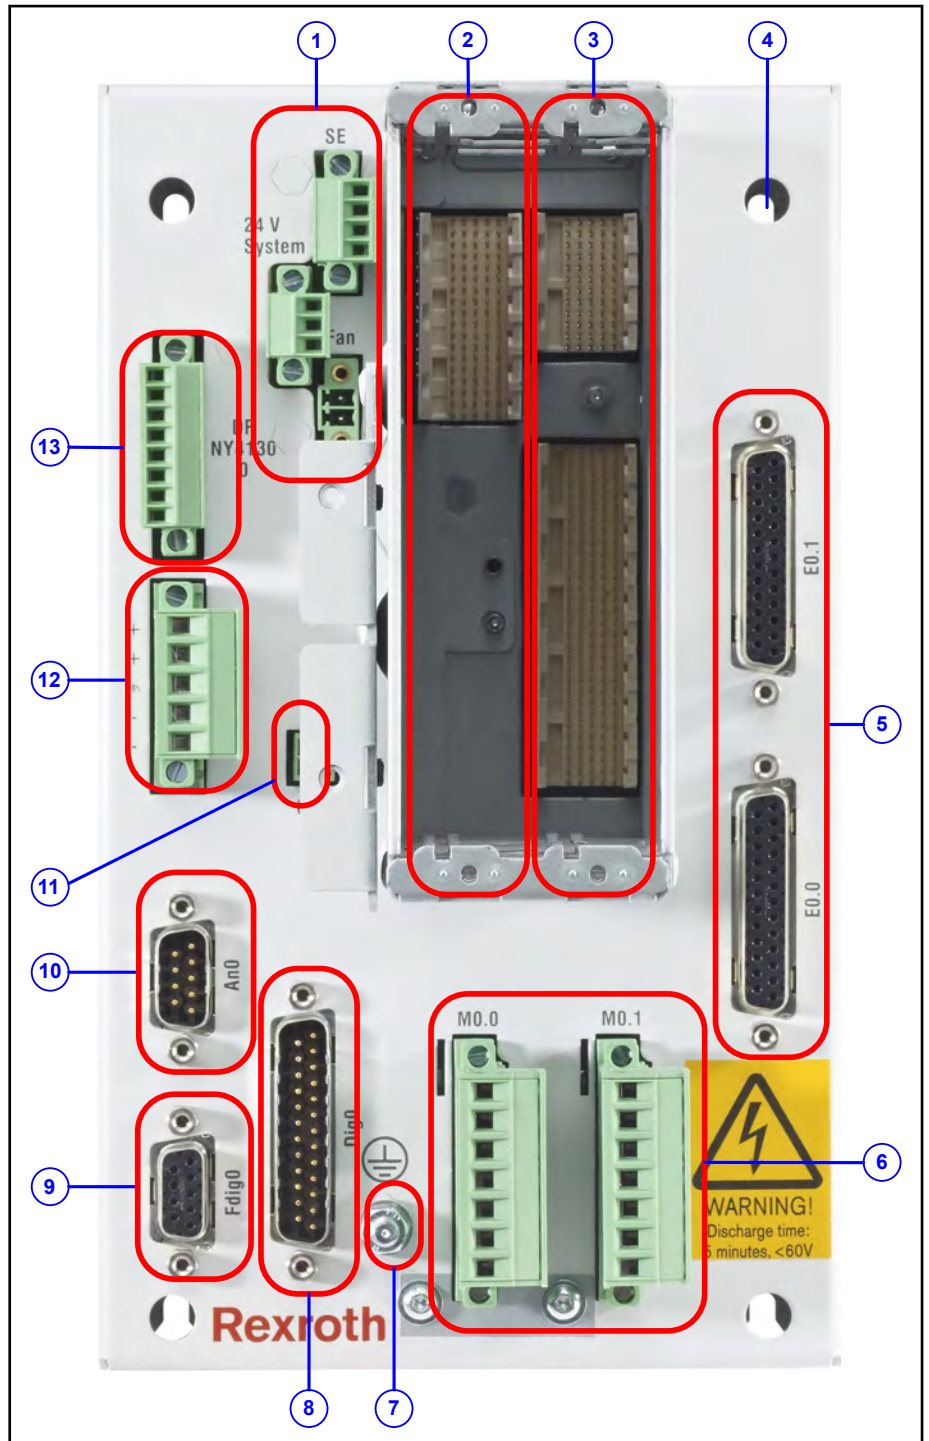


Fig. 4-1: NY4013 system housing

NY4013: 1 Drive Slot System Housing

Identifier number	Description
1	24V System, SE and Fan connectors
2	Motion Control Unit slot
3	Drive module slot
4	Mounting screw opening (4)
5	Encoder connectors
6	Motor connectors
7	Protective Earth post
8	Digital I/O connector
9	Fast digital I/O connector
10	Analog I/O connector
11	Capacitor connector
12	NY4120 / NY4140 drive power connector
13	NY4130 drive power connector

Tab. 4-1: NY4013 system housing identification legend

The discharge warning label warns the technician to observe a 5 minute discharge time delay to be certain that voltages are below 60 V, before undertaking any actions with the product.



Fig. 4-2: Discharge warning label on the system housing

The Power Marking label at the right side of the module holder indicates the rating of the system housing and other information.

NY4013: 1 Drive Slot System Housing

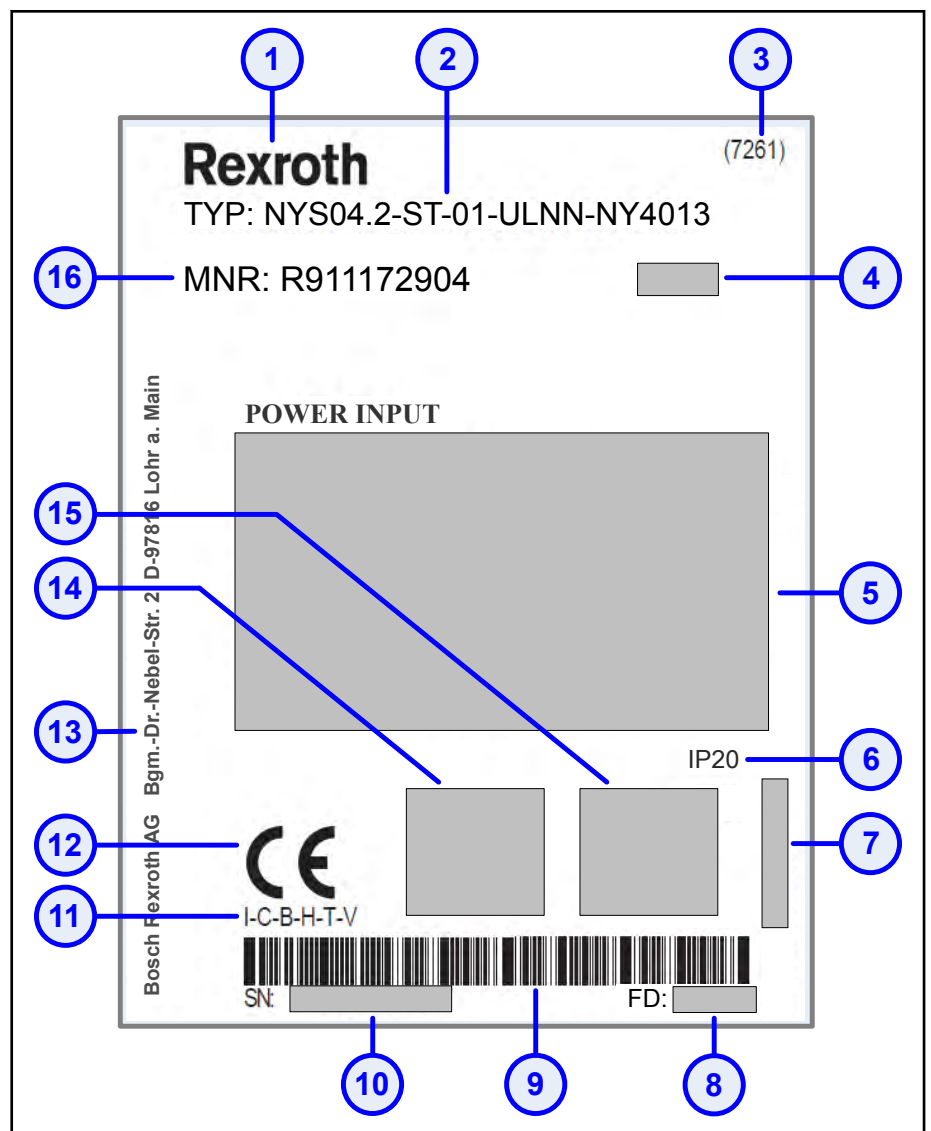


Fig. 4-3: Power Marking label on the module holder

Identifier number	Description
1	Logo type
2	Type code
3	Division number / plant number
4	Change index
5	Rated voltages and currents
6	Degrees of protection provided by enclosure (IP code)
7	Designation of origin
8	Date of manufacture (yyWww)
9	Rexroth bar code
10	Serial number

NY4013: 1 Drive Slot System Housing

Identifier number	Description
11	Test marking
12	CE marking
13	Company address
14	UL marking
15	Consult documentation marking
16	Material number

Tab. 4-2: Power Marking legend

4.2 System Housing Dimensions

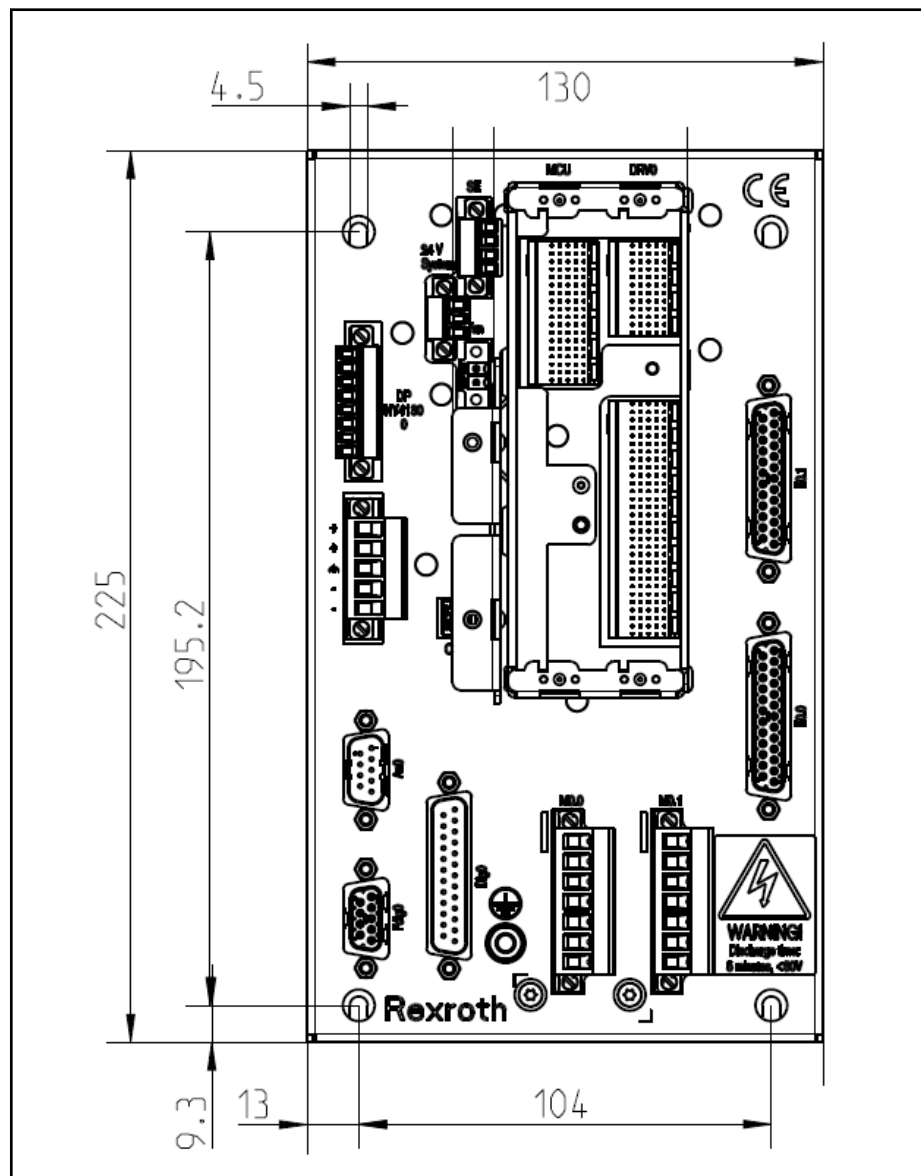


Fig. 4-4: NY4013 system housing front view dimensions

NY4013: 1 Drive Slot System Housing

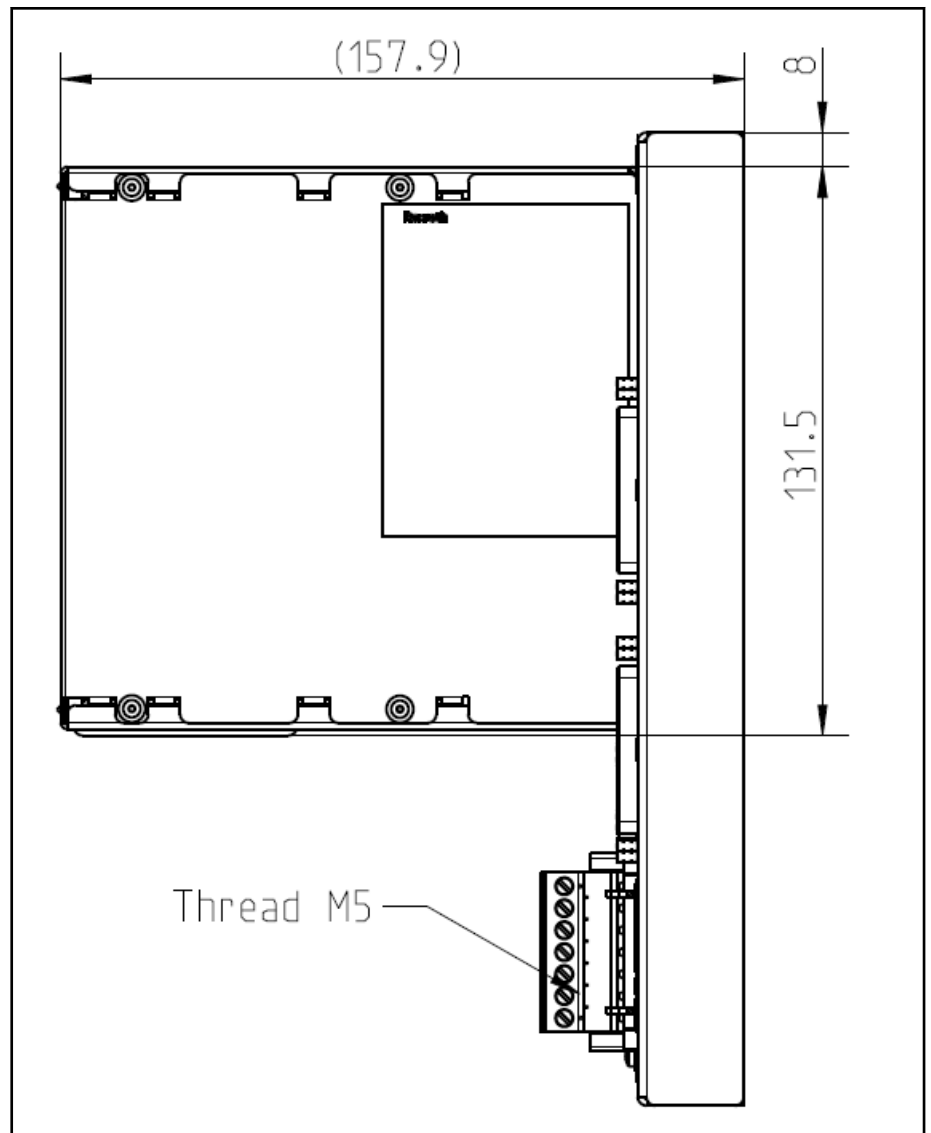


Fig. 4-5: NY4013 system housing side view dimensions

System housing type code	Width	Height	Depth	Weight
NYS04.2-ST-01-ULNN-NY4013	130 mm	225 mm	157.9 mm	1800 gr

Tab. 4-3: NY4013 physical data

4.3 Connector Overview

This chapter gives an overview of all connections on the base plate of the system housing with links to the detailed information such as connector type, order code and pinout specification.

NY4013: 1 Drive Slot System Housing

Text marking on base plate	Purpose	Detailed information
24V System	<p>The 24 Volt System supply header is used by the MCU module to generate</p> <ul style="list-style-type: none"> the logic supply voltages for the MCU and drive modules the supply voltage for all encoders connected to the drive modules. 	24V SYSTEM
SE	<p>The Service Connection has two inputs. One input called "ServiceMode" is used to set the operation mode of the system to "service mode". The other input called "StopAxes" can be used to execute an as fast as possible stop of all axes connected to the system.</p>	SERVICE
Fan	<p>The Fan connector is a power supply header for the optional fan unit that can be installed underneath the module holder for forced cooling of the system.</p>	FAN
CAP0	<p>External drive power capacitor header for the drive slot in the module holder.</p> <p>A capacitor may only be needed if the drive module installed in the drive slot is an NY4120 or NY4140. No capacitor is needed if the drive slot contains an NY4130 drive module or NY4150 SERCOS III Master module.</p>	CAP
DP 0	<p>External drive power supply header for the drive slot in the module holder. This drive power supply header is used if the drive slot contains an NY4120 or NY4140 drive module.</p>	DP
DP NY4130 0	<p>External drive power supply header for the drive slot in the module holder if the drive slot contains an NY4130 drive module.</p>	DP NY4130
M0.0 M0.1	<p>Two motor headers, one header for each axis, are available for the drive slot.</p> <p>M0.0 is the motor header for axis 0 if the drive module of that slot contains an NY4120, NY4130, or NY4140.</p> <p>M0.1 is the motor header for axis 1 if the drive module of that slot contains an NY4120, NY4130.</p> <p>Note: pinout of M0.0 and M0.1 are different.</p>	MOTOR
E0.0 E0.1	<p>Two encoder headers, one header for each axis, are available for the drive slot.</p> <p>E0.0 is the encoder header for axis 0.</p> <p>E0.1 is the encoder header for axis 1.</p> <p>Note: pinout of E0.0 and E0.1 are different.</p>	ENCODER
FDIG0	<p>One header is available for the Fast Digital I/O connections.</p>	FDIG I/O

NY4013: 1 Drive Slot System Housing

Text marking on base plate	Purpose	Detailed information
DIG0	One header is available for the Digital I/O connections.	DIG I/O
AN0	One header is available for the Analog I/O connections.	AN I/O
PE	Protective earth connection	PE

Tab. 4-4: Connection overview

4.4 Field diagnostics

No diagnosis is available for the system housing.

The system housing does not contain any replaceable or wear parts. In case of failure, the entire system housing must be replaced.

5 NY4023: 2 Drive Slot System Housing

5.1 Product Identification

The NY4023 system housing has three slots, one slot for the MCU and two slots for drive modules. Part number is R911172905, ordering code is NYS04.2-ST-02-ULNN-NY4023.

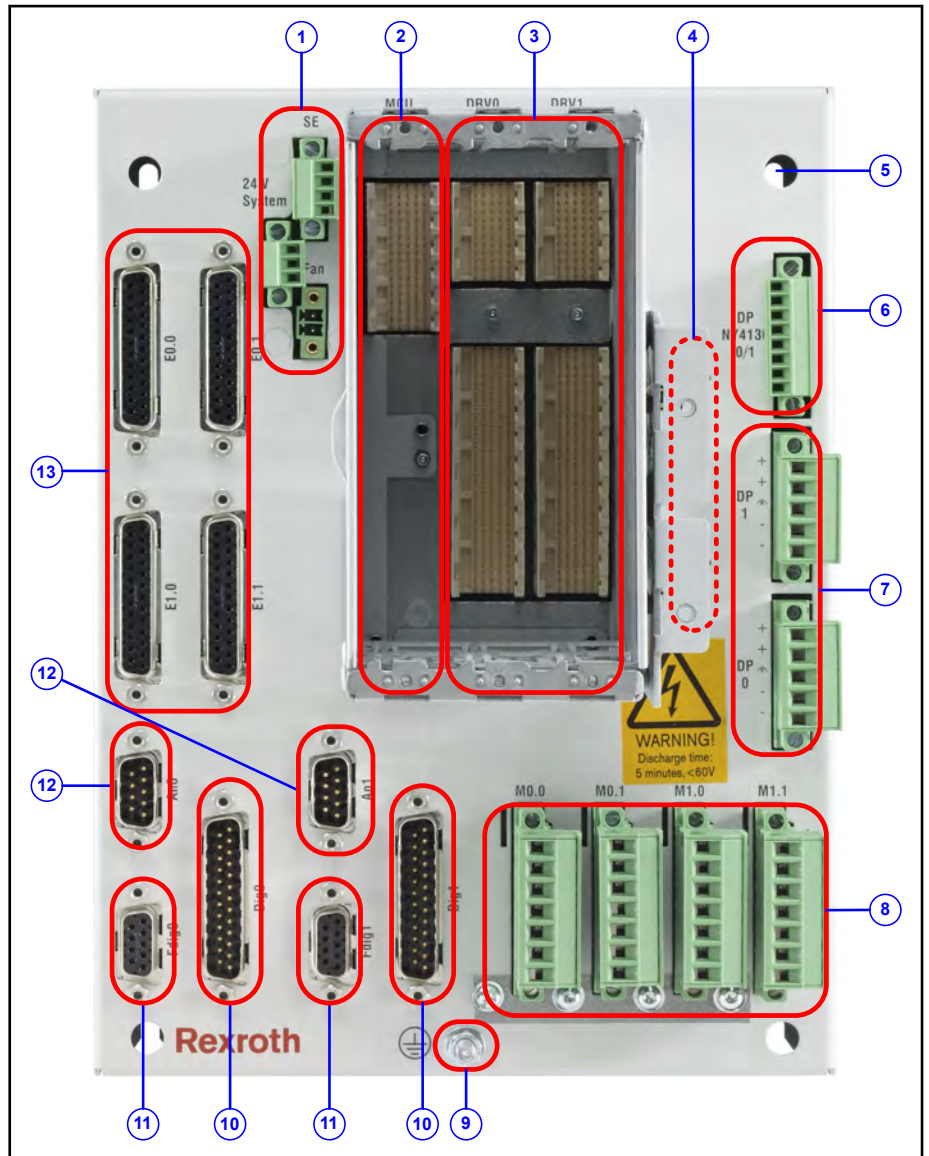


Fig. 5-1: NY4023 system housing

Identifier number	Description
1	24V System, SE and Fan connectors
2	Motion Control Unit slot
3	Drive module slots (2)
4	Capacitor connectors (1 per drive slot)

NY4023: 2 Drive Slot System Housing

Identifier number	Description
5	Mounting screw opening (4)
6	NY4130 drive power connector (slot DRV0 and slot DRV1)
7	NY4120 / NY4140 drive power connectors (slot DRV0, slot DRV1)
8	Motor connectors (2 per drive slot)
9	Protective Earth post
10	Digital I/O connectors (slot DRV0, slot DRV1)
11	Fast digital I/O connectors (slot DRV0, slot DRV1)
12	Analog I/O connectors (slot DRV0, DRV1)
13	Encoder connectors (2 per drive slot)

Tab. 5-1: NY4023 system housing identification legend

The discharge warning label warns the technician to observe a 5 minute discharge time delay to be certain that voltages are below 60 V, before undertaking any actions with the product.



Fig. 5-2: Discharge warning label on the system housing

The Power Marking label at the right side of the module holder indicates the rating of the system housing and other information.

NY4023: 2 Drive Slot System Housing

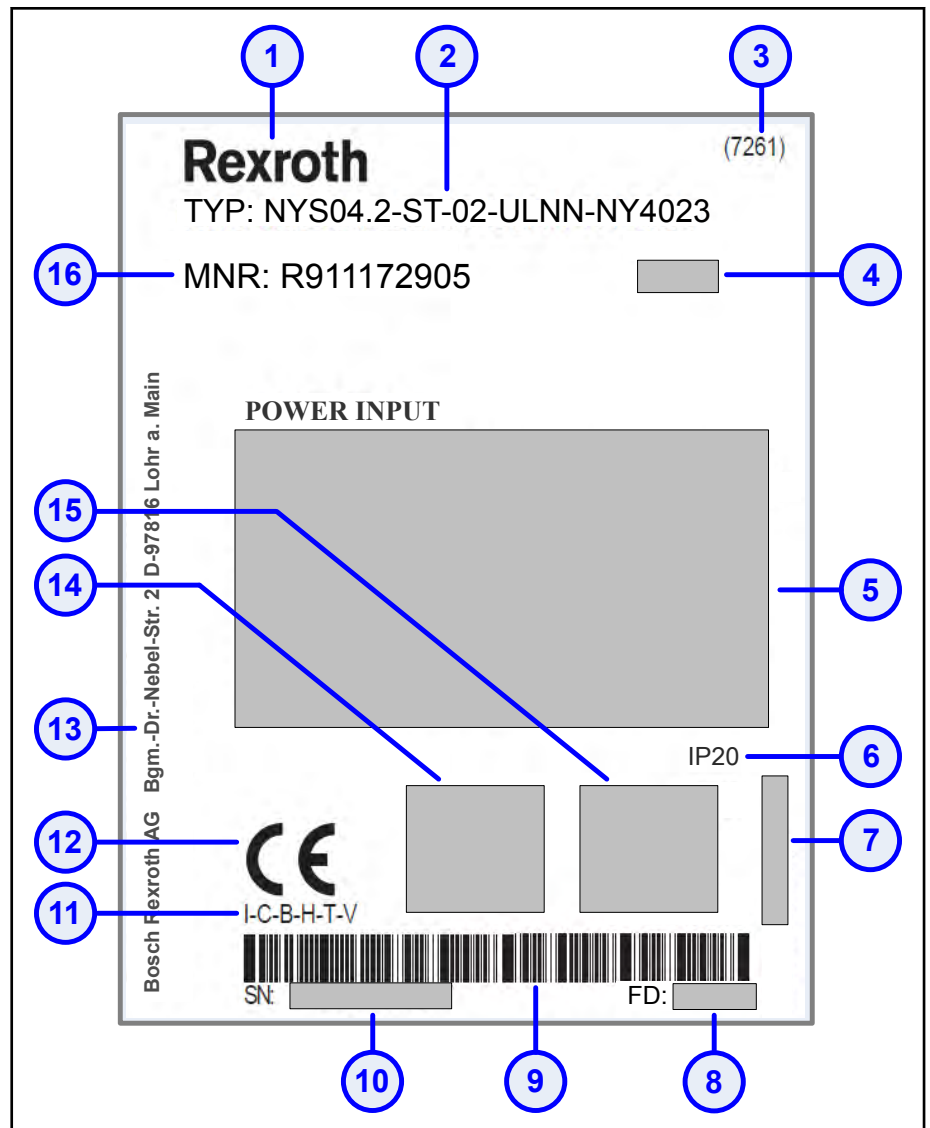


Fig. 5-3: Power Marking label on the module holder

Identifier number	Description
1	Logo type
2	Type code
3	Division number / plant number
4	Change index
5	Rated voltages and currents
6	Degrees of protection provided by enclosure (IP code)
7	Designation of origin
8	Date of manufacture (yyWww)
9	Rexroth bar code
10	Serial number

NY4023: 2 Drive Slot System Housing

Identifier number	Description
11	Test marking
12	CE marking
13	Company address
14	UL marking
15	Consult documentation marking
16	Material number

Tab. 5-2: Power Marking legend

5.2 System Housing Dimensions

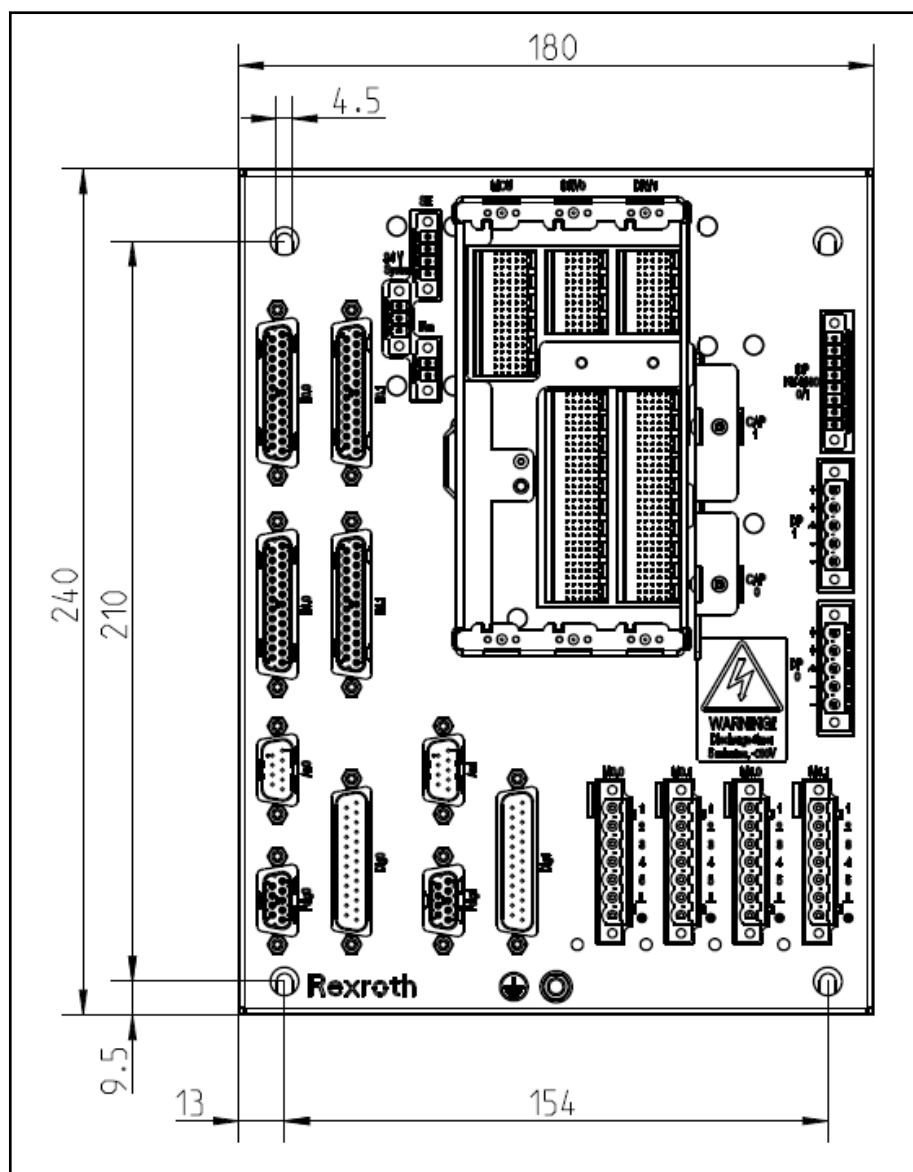


Fig. 5-4: NY4023 system housing front view dimensions

NY4023: 2 Drive Slot System Housing

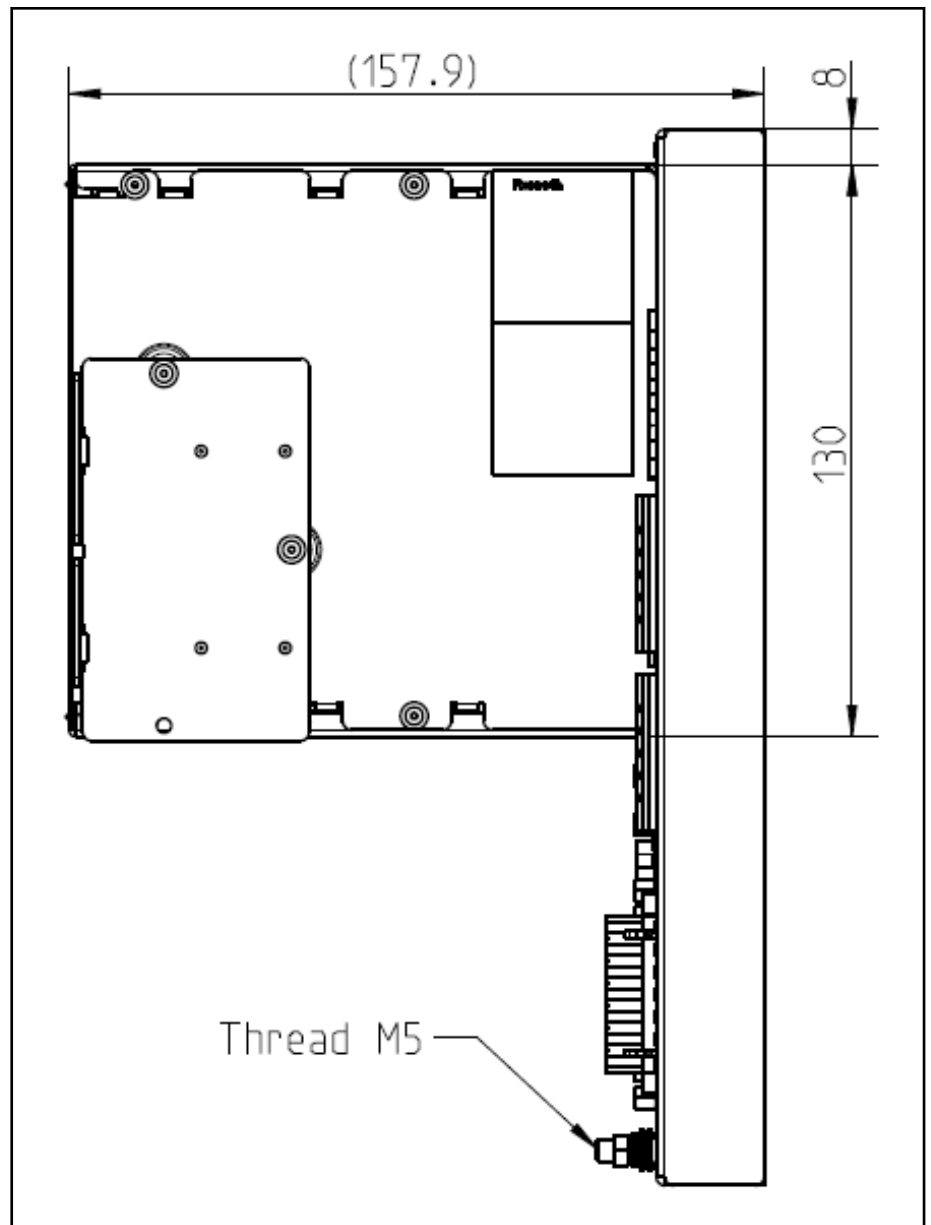


Fig. 5-5: NY4023 system housing side view dimensions

System housing type code	Width	Height	Depth	Weight
NYS04.2-ST-02-ULNN-NY4023	180 mm	240 mm	157.9 mm	2300 gr

Tab. 5-3: NY4023 physical data

5.3 Connector Overview

This chapter gives an overview of all connections on the base plate of the system housing with links to the detailed information such as connector type, order code and pinout specification.

NY4023: 2 Drive Slot System Housing

Text marking on base plate	Purpose	Detailed information
24V System	<p>The 24 Volt System supply header is used by the MCU module to generate</p> <ul style="list-style-type: none"> the logic supply voltages for the MCU and drive modules the supply voltage for all encoders connected to the drive modules. 	24V SYSTEM
SE	<p>The Service Connection has two inputs. One input called "ServiceMode" is used to set the operation mode of the system to "service mode". The other input called "StopAxes" can be used to execute an as fast as possible stop of all axes connected to the system.</p>	SERVICE
Fan	<p>The Fan connector is a power supply header for the optional fan unit that can be installed underneath the module holder for forced cooling of the system.</p>	FAN
CAP0 CAP1	<p>For every drive slot in the module holder is a dedicated external drive power capacitor header. Thus CAP0 is the capacitor associated with drive slot 0, and so on.</p> <p>A capacitor may only be needed if the drive module installed in a drive slot is an NY4120 or NY4140. No capacitor is needed if the drive slot contains an NY4130 drive module or NY4150 SERCOS III Master module.</p>	CAP
DP 0 DP 1	<p>For every drive slot in the module holder is a dedicated external drive power supply header which is used if the drive slot contains an NY4120 or NY4140 drive module. Thus DP 0 is the drive power header associated with drive slot 0, and so on.</p>	DP
DP NY4130 0/1	<p>External drive power supply header for both drive slots in the module holder if the drive slot contains an NY4130 drive module.</p>	DP NY4130
M0.0 M0.1 M1.0 M1.1	<p>For every drive slot in the module holder are two motor headers, one header for each axis.</p> <p>Mx.0 is the motor header for axis 0 if the drive module of that slot contains an NY4120, NY4130, or NY4140.</p> <p>Mx.1 is the motor header for axis 1 if the drive module of that slot contains an NY4120, NY4130.</p> <p>Note: pinout of Mx.0 and Mx.1 are different.</p>	MOTOR

NY4023: 2 Drive Slot System Housing

Text marking on base plate	Purpose	Detailed information
E0.0 E0.1 E1.0 E1.1	For every drive slot in the module holder are two encoder headers, one header for each axis. Ex.0 is the encoder header for axis 0. Ex.1 is the encoder header for axis 1. Note: pinout of Ex.0 and Ex.1 are different.	ENCODER
FDIG0 FDIG1	For every drive slot in the module holder is one headers for the Fast Digital I/O connections.Thus FDIG0 is the Fast Digital I/O header associated with drive slot 0, and so on.	FDIG I/O
DIG0 DIG1	For every drive slot in the module holder is one headers for the Digital I/O connections.Thus DIG0 is the Digital I/O header associated with drive slot 0, and so on.	DIG I/O
AN0 AN1	For every drive slot in the module holder is one headers for the Analog I/O connections.Thus AN0 is the Analog I/O header associated with drive slot 0, and so on.	AN I/O
PE	Protective earth connection	PE

Tab. 5-4: Connection overview

5.4 Field diagnostics

No diagnosis is available for the system housing.

The system housing does not contain any replaceable or wear parts. In case of failure, the entire system housing must be replaced.

6 NY4033: 3 Drive Slot System Housing

6.1 Product Identification

The NY4033 system housing has four slots, one slot for the MCU and three slots for drive modules. Part number is R911172966, ordering code is NYS04.2-ST-03-ULNN-NY4033.

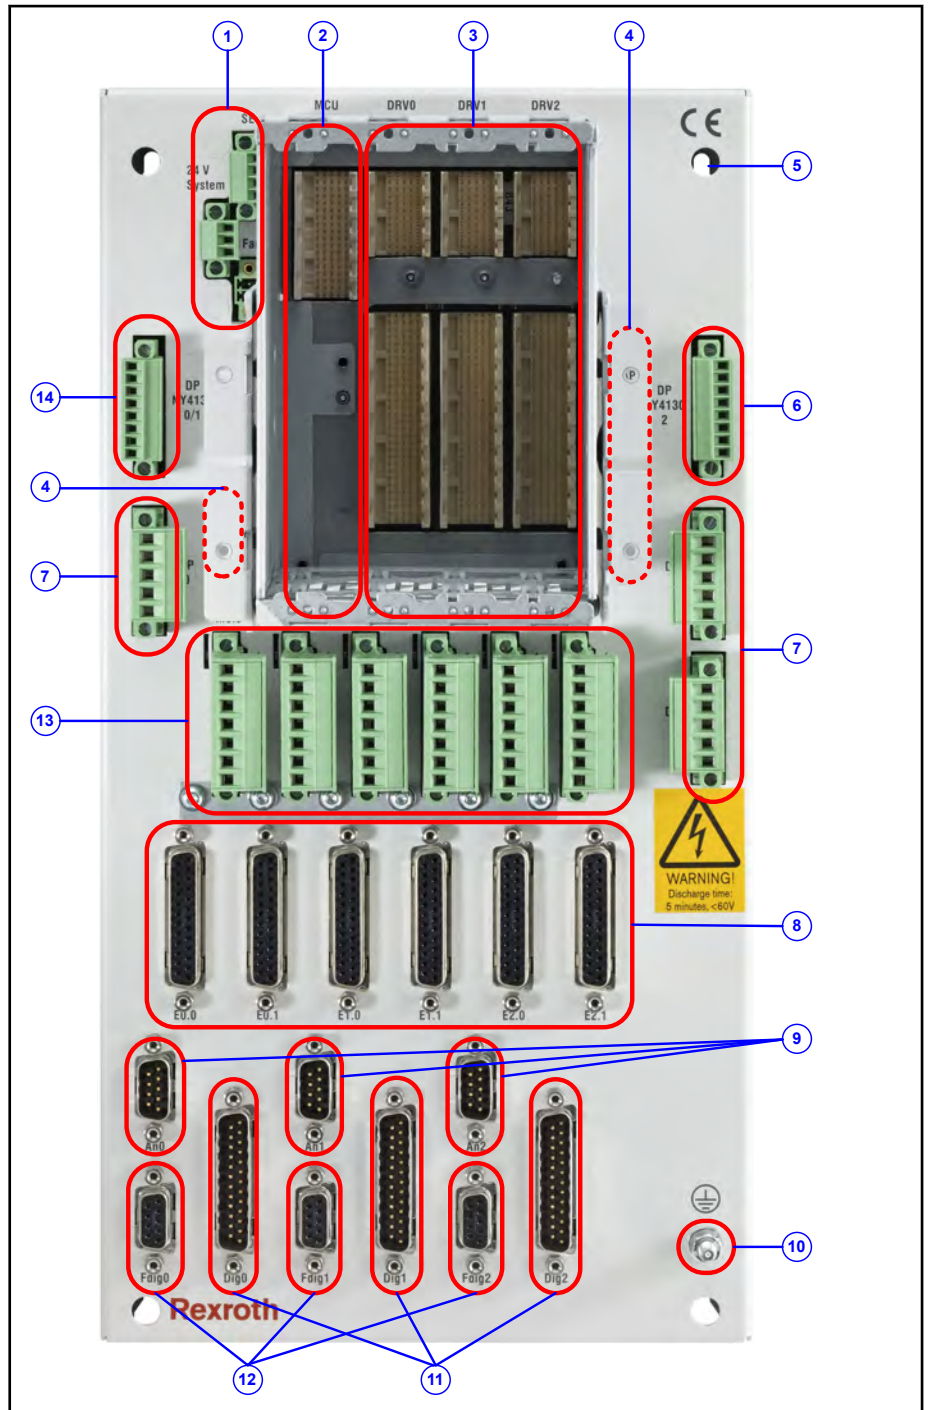


Fig. 6-1: NY4033 system housing

NY4033: 3 Drive Slot System Housing

Identifier number	Description
1	24V System, SE and Fan connectors
2	Motion Control Unit slot
3	Drive module slots (3)
4	Capacitor connectors (1 per drive slot)
5	Mounting screw opening (4)
6	NY4130 drive power connector (slot DRV2)
7	NY4120 / NY4140 drive power connectors (1 per drive slot)
8	Encoder connectors (2 per drive slot)
9	Analog I/O connectors (1 per drive slot)
10	Protective Earth post
11	Digital I/O connectors (1 per drive slot)
12	Fast digital I/O connectors (1 per drive slot)
13	Motor connectors (2 per drive slot)
14	NY4130 drive power connector (slot DRV0 and slot DRV1)

Tab. 6-1: NY4033 system housing identification legend

The discharge warning label warns the technician to observe a 5 minute discharge time delay to be certain that voltages are below 60 V, before undertaking any actions with the product.



Fig. 6-2: Discharge warning label on the system housing

The Power Marking label at the right side of the module holder indicates the rating of the system housing and other information.

NY4033: 3 Drive Slot System Housing

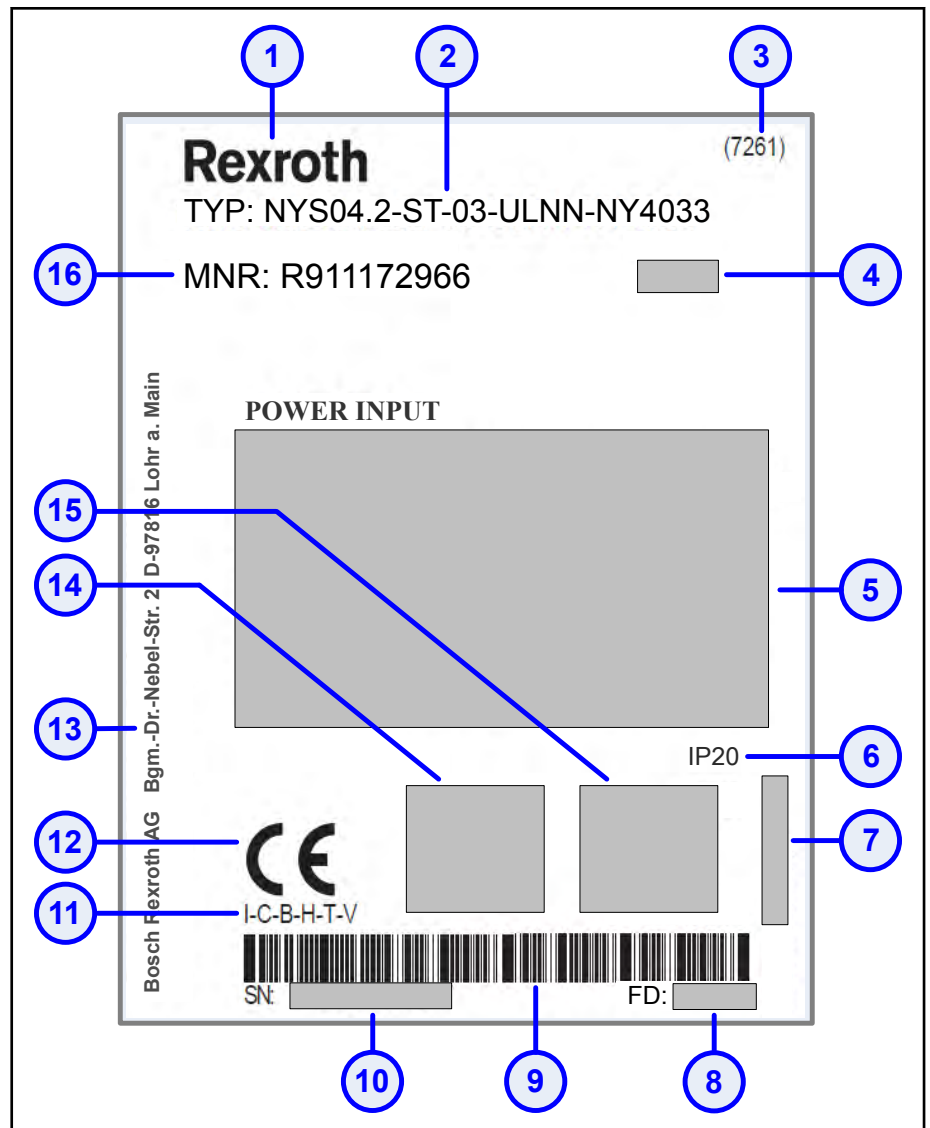


Fig. 6-3: Power Marking label on the module holder

Identifier number	Description
1	Logo type
2	Type code
3	Division number / plant number
4	Change index
5	Rated voltages and currents
6	Degrees of protection provided by enclosure (IP code)
7	Designation of origin
8	Date of manufacture (yyWww)
9	Rexroth bar code
10	Serial number

NY4033: 3 Drive Slot System Housing

Identifier number	Description
11	Test marking
12	CE marking
13	Company address
14	UL marking
15	Consult documentation marking
16	Material number

Tab. 6-2: Power Marking legend

6.2 System Housing Dimensions

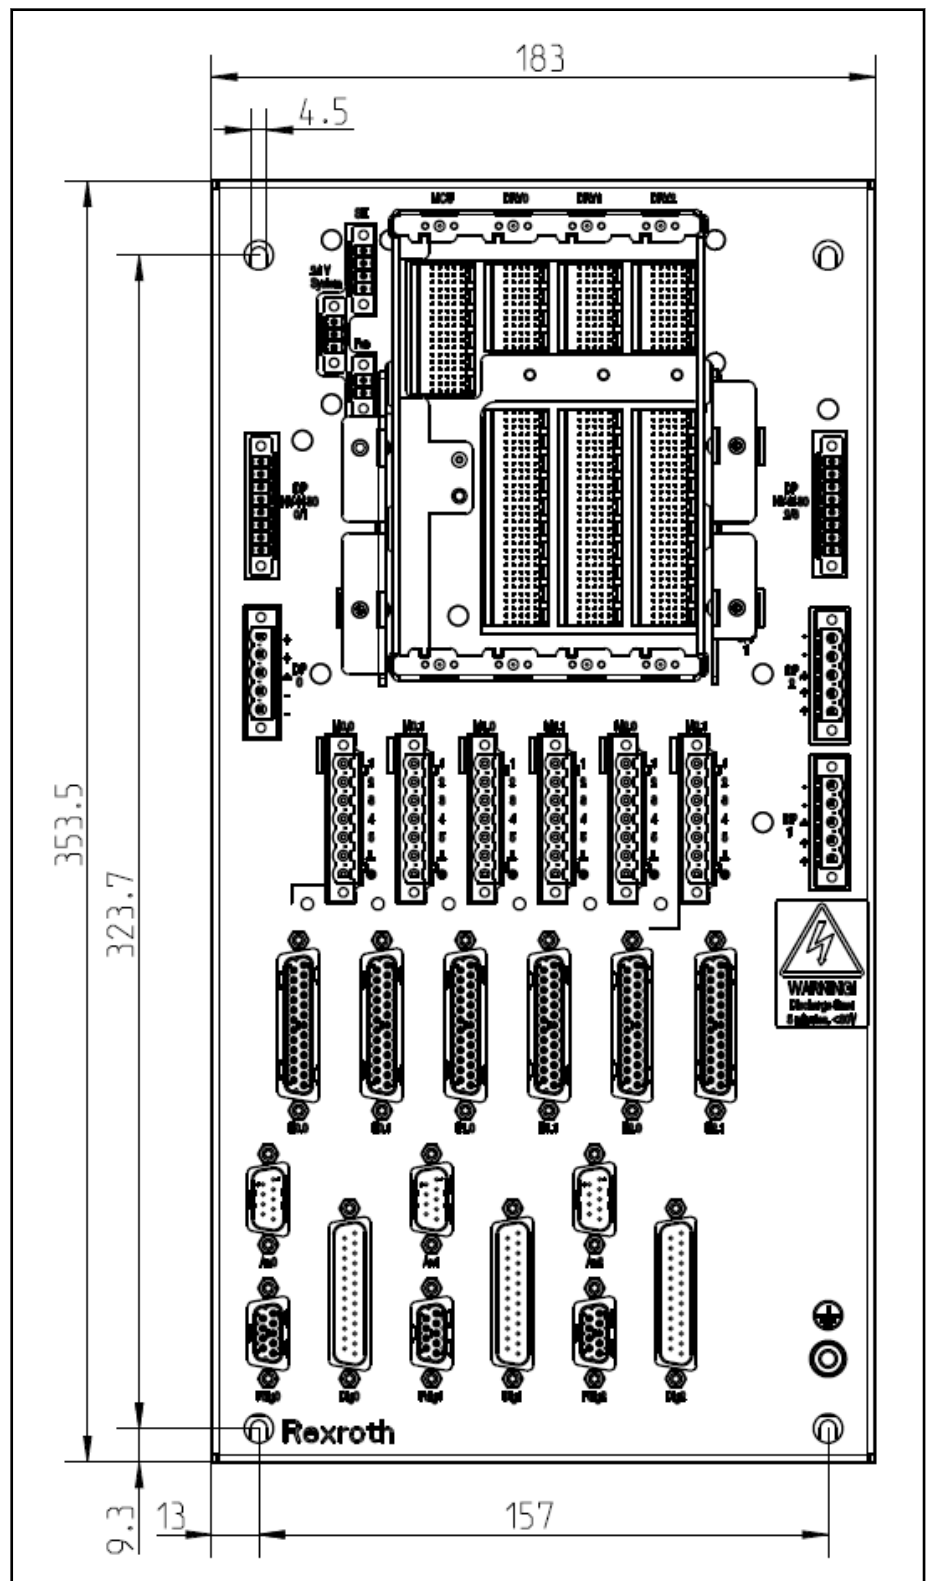


Fig. 6-4: NY4033 system housing front view dimensions

NY4033: 3 Drive Slot System Housing

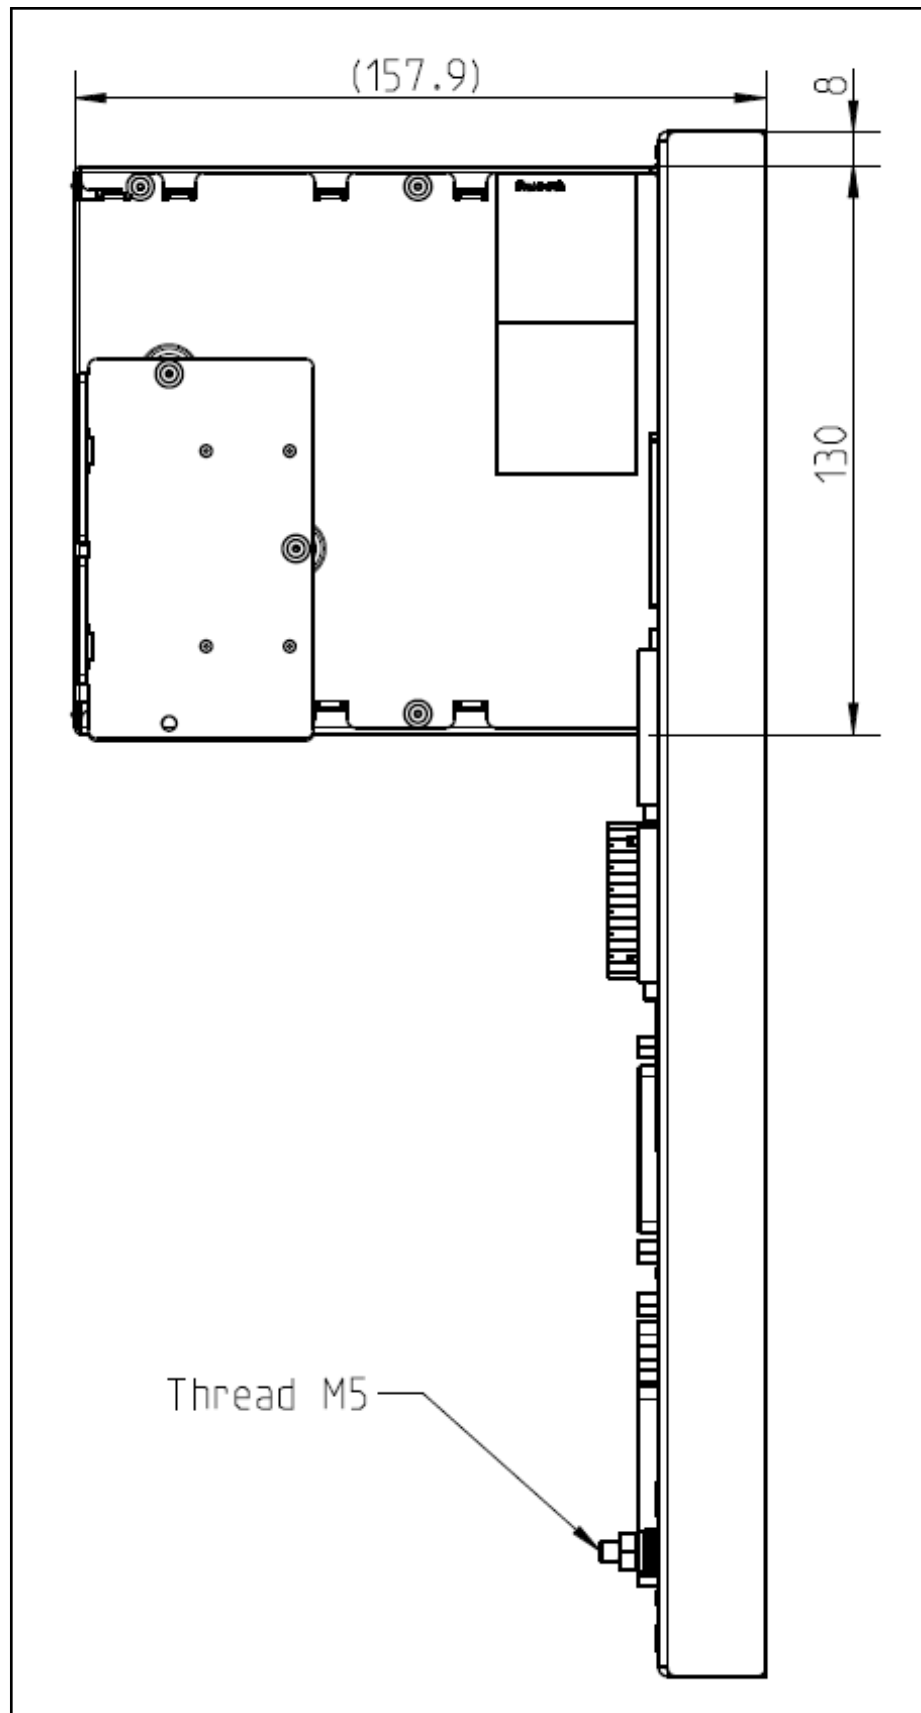


Fig. 6-5: NY4033 system housing side view dimensions

NY4033: 3 Drive Slot System Housing

System housing type code	Width	Height	Depth	Weight
NYS04.2-ST-03-ULNN-NY4033	183 mm	353.5 mm	157.9 mm	2250 gr

Tab. 6-3: NY4033 physical data

6.3 Connector Overview

This chapter gives an overview of all connections on the base plate of the system housing with links to the detailed information such as connector type, order code and pinout specification.

Text marking on base plate	Purpose	Detailed information
24V System	The 24 Volt System supply header is used by the MCU module to generate <ul style="list-style-type: none"> the logic supply voltages for the MCU and drive modules the supply voltage for all encoders connected to the drive modules. 	24V SYSTEM
SE	The Service Connection has two inputs. One input called "ServiceMode" is used to set the operation mode of the system to "service mode". The other input called "StopAxes" can be used to execute an as fast as possible stop of all axes connected to the system.	SERVICE
Fan	The Fan connector is a power supply header for the optional fan unit that can be installed underneath the module holder for forced cooling of the system.	FAN
CAP0 CAP1 CAP2	For every drive slot in the module holder is a dedicated external drive power capacitor header. Thus CAP0 is the capacitor associated with drive slot 0, and so on. A capacitor may only be needed if the drive module installed in a drive slot is an NY4120 or NY4140. No capacitor is needed if the drive slot contains an NY4130 drive module or NY4150 SERCOS III Master module.	CAP
DP 0 DP 1 DP 2	For every drive slot in the module holder is a dedicated external drive power supply header which is used if the drive slot contains an NY4120 or NY4140 drive module. Thus DP 0 is the drive power header associated with drive slot 0, and so on.	DP

NY4033: 3 Drive Slot System Housing

Text marking on base plate	Purpose	Detailed information
DP NY4130 0/1 DP NY4130 2	Separate external drive power supply headers are available on the base plate if the drive slot contains an NY4130 drive module. A drive power supply header for NY4130 drive modules can be allocated to a single drive slot, or to two drive slots. This is indicated in the last part of the name. Thus DP NY4130 0/1 is the drive power header associated with drive slot 0 and drive slot 1, DP NY4130 2 is the drive power header associated with drive slot 2.	DP NY4130
M0.0 M0.1 M1.0 M1.1 M2.0 M2.1	For every drive slot in the module holder are two motor headers, one header for each axis. Mx.0 is the motor header for axis 0 if the drive module of that slot contains an NY4120, NY4130, or NY4140. Mx.1 is the motor header for axis 1 if the drive module of that slot contains an NY4120, NY4130. Note: pinout of Mx.0 and Mx.1 are different.	MOTOR
E0.0 E0.1 E1.0 E1.1 E2.0 E2.1	For every drive slot in the module holder are two encoder headers, one header for each axis. Ex.0 is the encoder header for axis 0. Ex.1 is the encoder header for axis 1. Note: pinout of Ex.0 and Ex.1 are different.	ENCODER
FDIG0 FDIG1 FDIG2	For every drive slot in the module holder is one headers for the Fast Digital I/O connections.Thus FDIG0 is the Fast Digital I/O header associated with drive slot 0, and so on.	FDIG I/O
DIG0 DIG1 DIG2	For every drive slot in the module holder is one headers for the Digital I/O connections.Thus DIG0 is the Digital I/O header associated with drive slot 0, and so on.	DIG I/O
AN0 AN1 AN2	For every drive slot in the module holder is one headers for the Analog I/O connections.Thus AN0 is the Analog I/O header associated with drive slot 0, and so on.	AN I/O
PE	Protective earth connection	PE

Tab. 6-4: Connection overview

6.4 Field diagnostics

No diagnosis is available for the system housing.

The system housing does not contain any replaceable or wear parts. In case of failure, the entire system housing must be replaced.

7 NY4043: 4 Drive Slot System Housing

7.1 Product Identification

The NY4043 system housing has five slots, one slot for the MCU and four slots for drive modules. Part number is R911172906, ordering code is NYS04.2-ST-04-ULNN-NY4043.

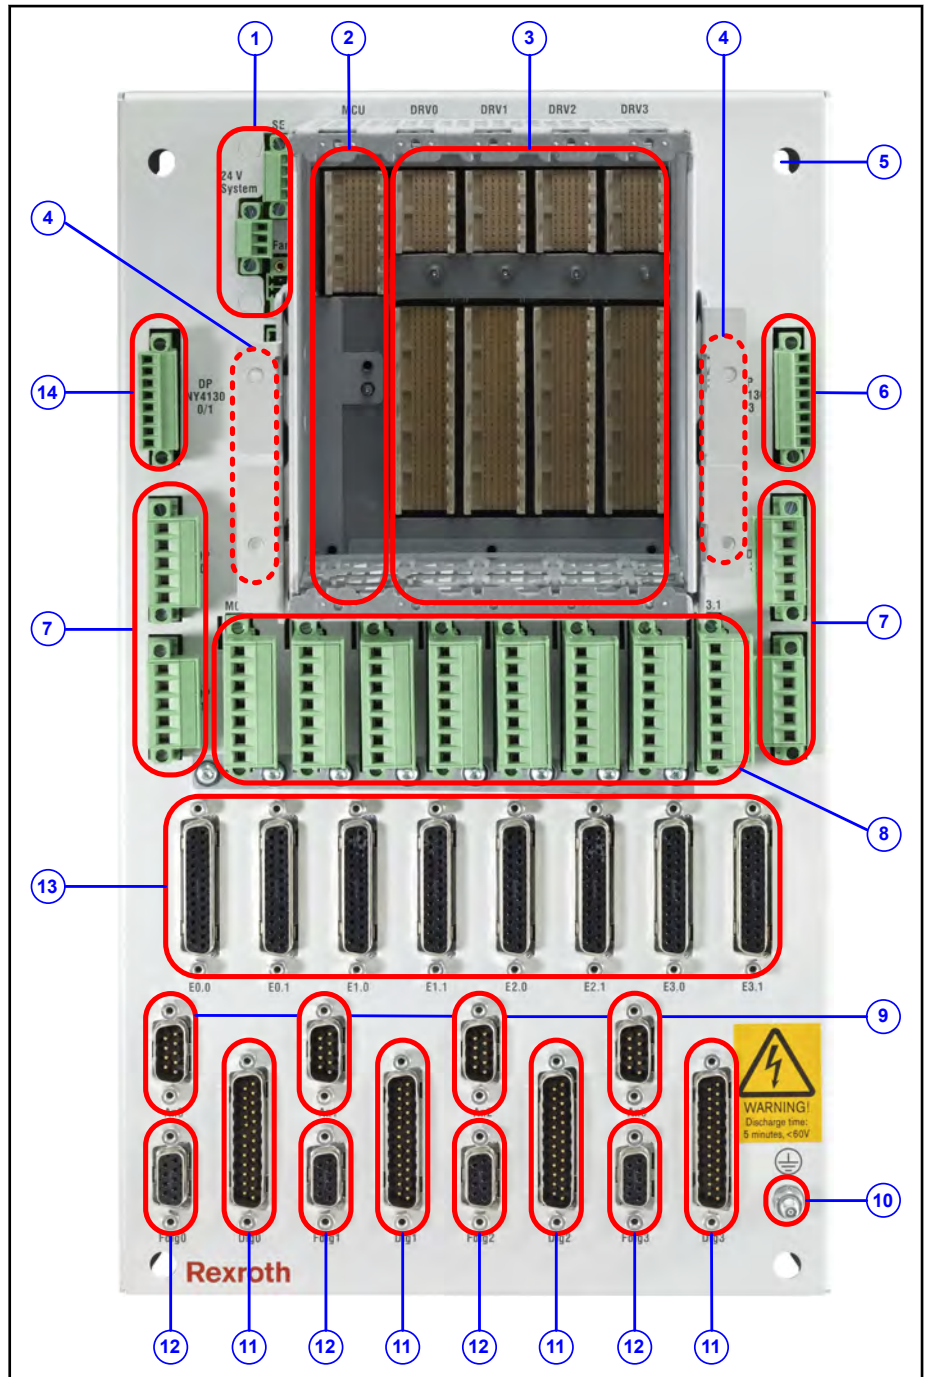


Fig. 7-1: NY4043 system housing

NY4043: 4 Drive Slot System Housing

Identifier number	Description
1	24V System, SE and Fan connectors
2	Motion Control Unit slot
3	Drive module slots (4)
4	Capacitor connectors (1 per drive slot)
5	Mounting screw opening (4)
6	NY4130 drive power connector (slot DRV2 and slot DRV3)
7	NY4120 / NY4140 drive power connectors (1 per drive slot)
8	Motor connectors (2 per drive slot)
9	Analog I/O connectors (1 per drive slot)
10	Protective Earth post
11	Digital I/O connectors (1 per drive slot)
12	Fast digital I/O connectors (1 per drive slot)
13	Encoder connectors (2 per drive slot)
14	NY4130 drive power connector (slot DRV0 and slot DRV1)

Tab. 7-1: NY4043 system housing identification legend

The discharge warning label warns the technician to observe a 5 minute discharge time delay to be certain that voltages are below 60 V, before undertaking any actions with the product.



Fig. 7-2: Discharge warning label on the system housing

The Power Marking label at the right side of the module holder indicates the rating of the system housing and other information.

NY4043: 4 Drive Slot System Housing

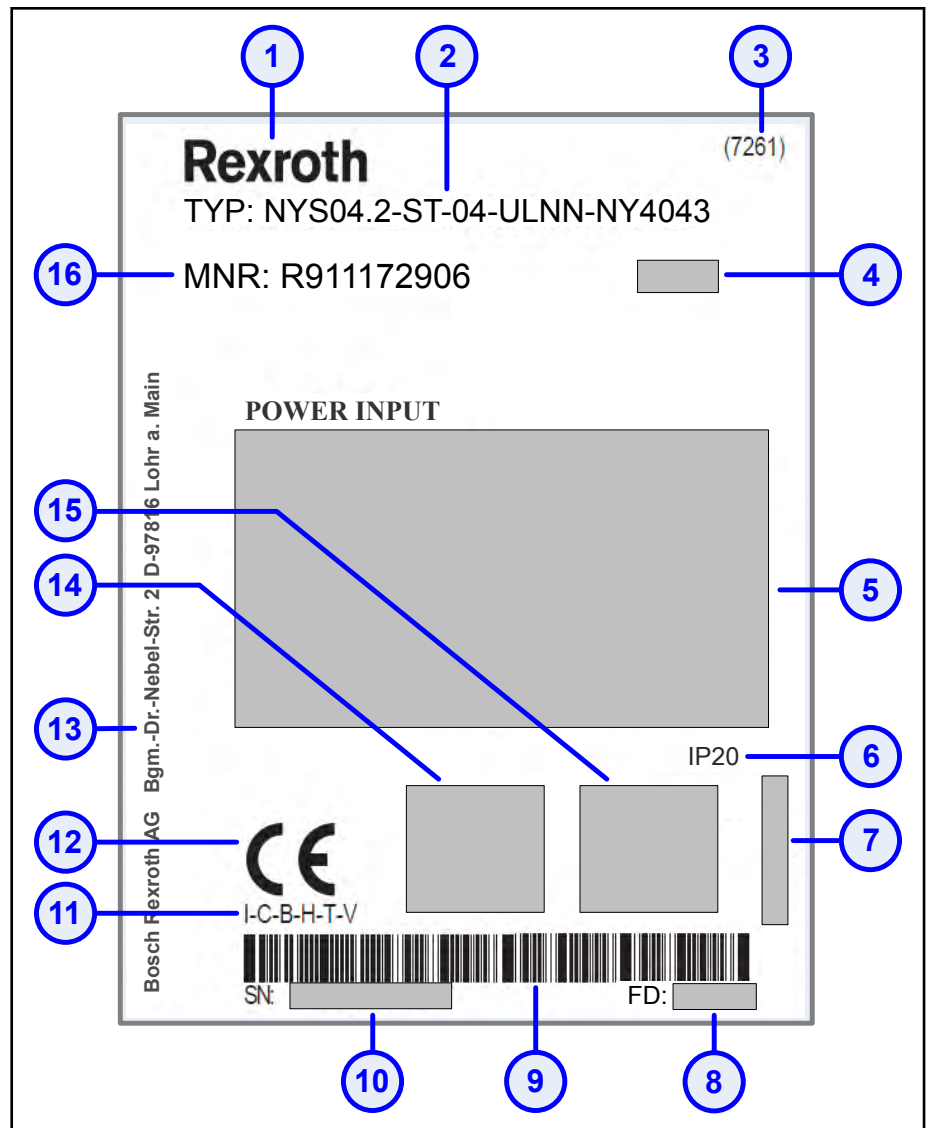


Fig. 7-3: Power Marking label on the module holder

Identifier number	Description
1	Logo type
2	Type code
3	Division number / plant number
4	Change index
5	Rated voltages and currents
6	Degrees of protection provided by enclosure (IP code)
7	Designation of origin
8	Date of manufacture (yyWww)
9	Rexroth bar code
10	Serial number

NY4043: 4 Drive Slot System Housing

Identifier number	Description
11	Test marking
12	CE marking
13	Company address
14	UL marking
15	Consult documentation marking
16	Material number

Tab. 7-2: Power Marking legend

NY4043: 4 Drive Slot System Housing

7.2 System Housing Dimensions

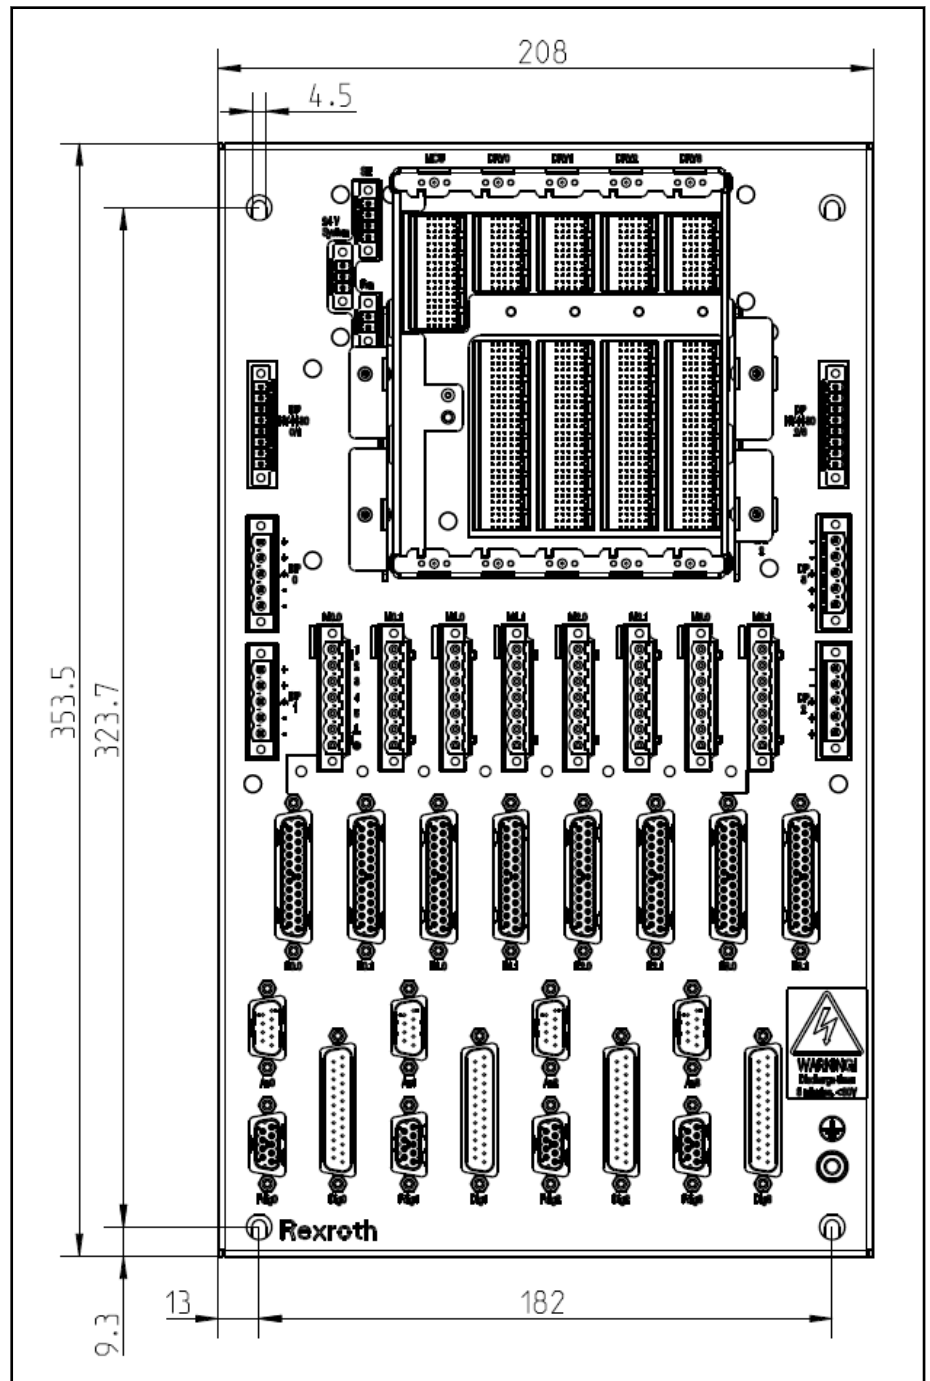


Fig. 7-4: NY4043 system housing front view dimensions

NY4043: 4 Drive Slot System Housing

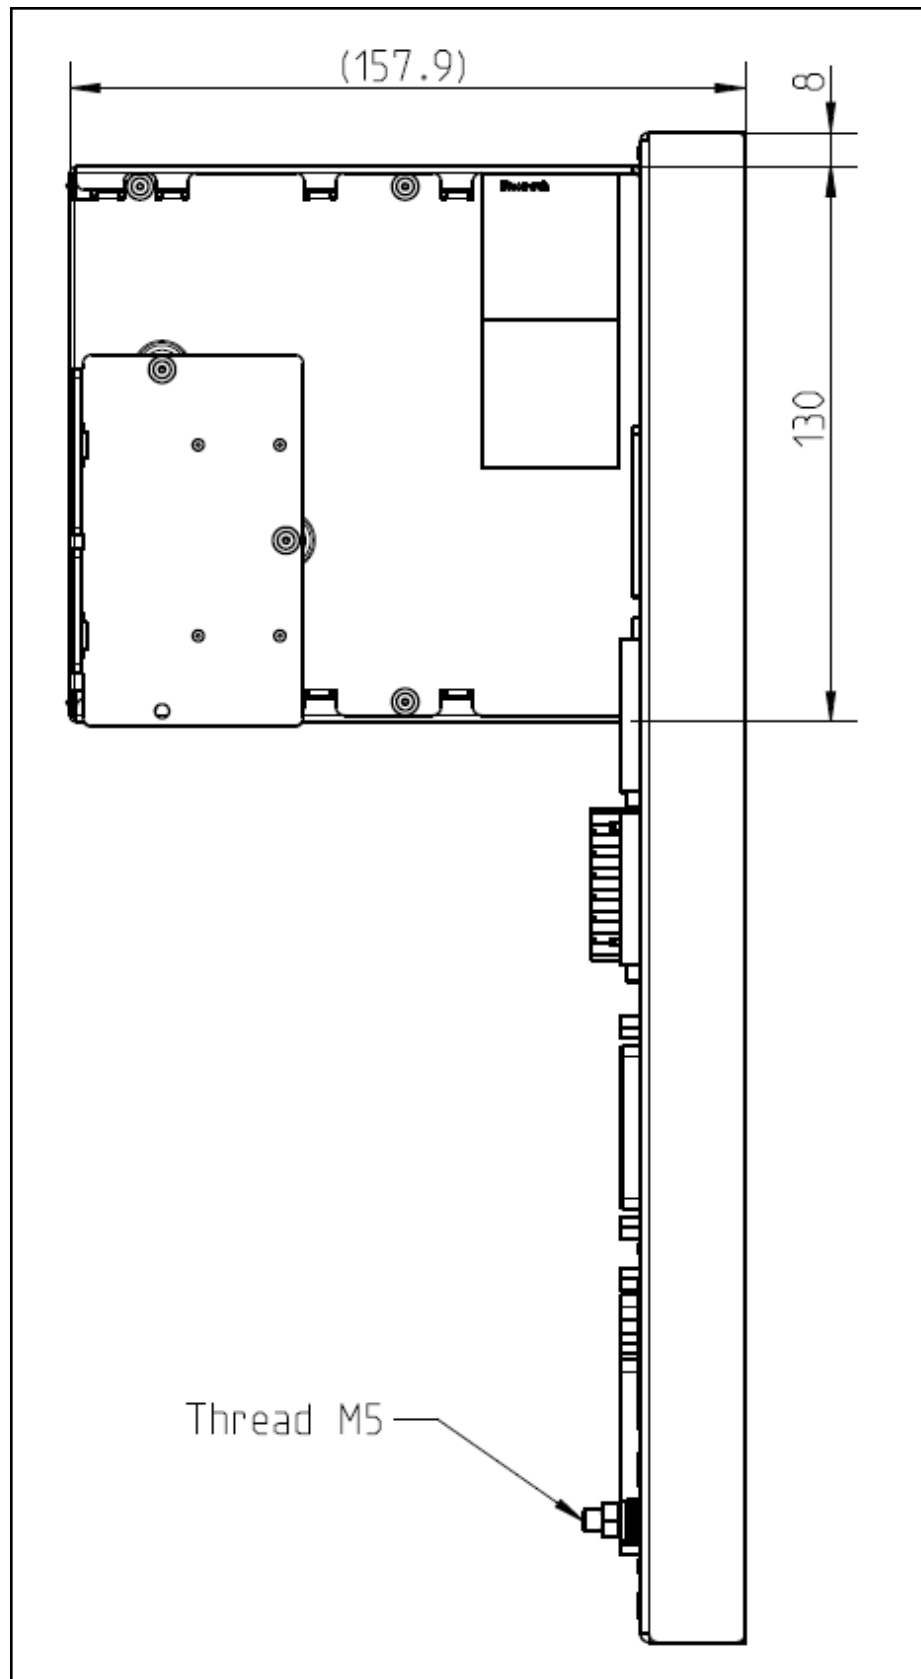


Fig. 7-5: NY4043 system housing side view dimensions

NY4043: 4 Drive Slot System Housing

System housing type code	Width	Height	Depth	Weight
NYS04.2-ST-04-ULNN-NY4043	208 mm	353.5 mm	157.9 mm	2500 gr

Tab. 7-3: NY4043 physical data

7.3 Connector Overview

This chapter gives an overview of all connections on the base plate of the system housing with links to the detailed information such as connector type, order code and pinout specification.

Text marking on base plate	Purpose	Detailed information
24V System	The 24 Volt System supply header is used by the MCU module to generate <ul style="list-style-type: none"> the logic supply voltages for the MCU and drive modules the supply voltage for all encoders connected to the drive modules. 	24V SYSTEM
SE	The Service Connection has two inputs. One input called "ServiceMode" is used to set the operation mode of the system to "service mode". The other input called "StopAxes" can be used to execute an as fast as possible stop of all axes connected to the system.	SERVICE
Fan	The Fan connector is a power supply header for the optional fan unit that can be installed underneath the module holder for forced cooling of the system.	FAN
CAP0 CAP1 CAP2 CAP3	For every drive slot in the module holder is a dedicated external drive power capacitor header. Thus CAP0 is the capacitor associated with drive slot 0, and so on. A capacitor may only be needed if the drive module installed in a drive slot is an NY4120 or NY4140. No capacitor is needed if the drive slot contains an NY4130 drive module or NY4150 SERCOS III Master module.	CAP
DP 0 DP 1 DP 2 DP 3	For every drive slot in the module holder is a dedicated external drive power supply header which is used if the drive slot contains an NY4120 or NY4140 drive module. Thus DP 0 is the drive power header associated with drive slot 0, and so on.	DP

NY4043: 4 Drive Slot System Housing

Text marking on base plate	Purpose	Detailed information
DP NY4130 0/1 DP NY4130 2/3	Separate external drive power supply headers are available on the base plate if the drive slot contains an NY4130 drive module. A drive power supply header for NY4130 drive modules can be allocated to a single drive slot, or to two drive slots. This is indicated in the last part of the name. Thus DP NY4130 0/1 is the drive power header associated with drive slot 0 and drive slot 1, DP NY4130 2/3 is the drive power header associated with drive slot 2 and drive slot 3.	DP NY4130
M0.0 M0.1 M1.0 M1.1 M2.0 M2.1 M3.0 M3.1	For every drive slot in the module holder are two motor headers, one header for each axis. Mx.0 is the motor header for axis 0 if the drive module of that slot contains an NY4120, NY4130, or NY4140. Mx.1 is the motor header for axis 1 if the drive module of that slot contains an NY4120, NY4130. Note: pinout of Mx.0 and Mx.1 are different.	MOTOR
E0.0 E0.1 E1.0 E1.1 E2.0 E2.1 E3.0 E3.1	For every drive slot in the module holder are two encoder headers, one header for each axis. Ex.0 is the encoder header for axis 0. Ex.1 is the encoder header for axis 1. Note: pinout of Ex.0 and Ex.1 are different.	ENCODER
FDIG0 FDIG1 FDIG2 FDIG3	For every drive slot in the module holder is one headers for the Fast Digital I/O connections.Thus FDIG0 is the Fast Digital I/O header associated with drive slot 0, and so on.	FDIG I/O
DIG0 DIG1 DIG2 DIG3	For every drive slot in the module holder is one headers for the Digital I/O connections.Thus DIG0 is the Digital I/O header associated with drive slot 0, and so on.	DIG I/O
AN0 AN1 AN2 AN3	For every drive slot in the module holder is one headers for the Analog I/O connections.Thus AN0 is the Analog I/O header associated with drive slot 0, and so on.	AN I/O
PE	Protective earth connection	PE

Tab. 7-4: Connection overview

7.4 Field diagnostics

No diagnosis is available for the system housing.

The system housing does not contain any replaceable or wear parts. In case of failure, the entire system housing must be replaced.

NY4053: 5 Drive Slot System Housing

8 NY4053: 5 Drive Slot System Housing

8.1 Product Identification

The NY4053 system housing has six slots, one slot for the MCU and five slots for drive modules. Part number is R911172907, ordering code is NYS04.2-ST-05-ULNN-NY4053.

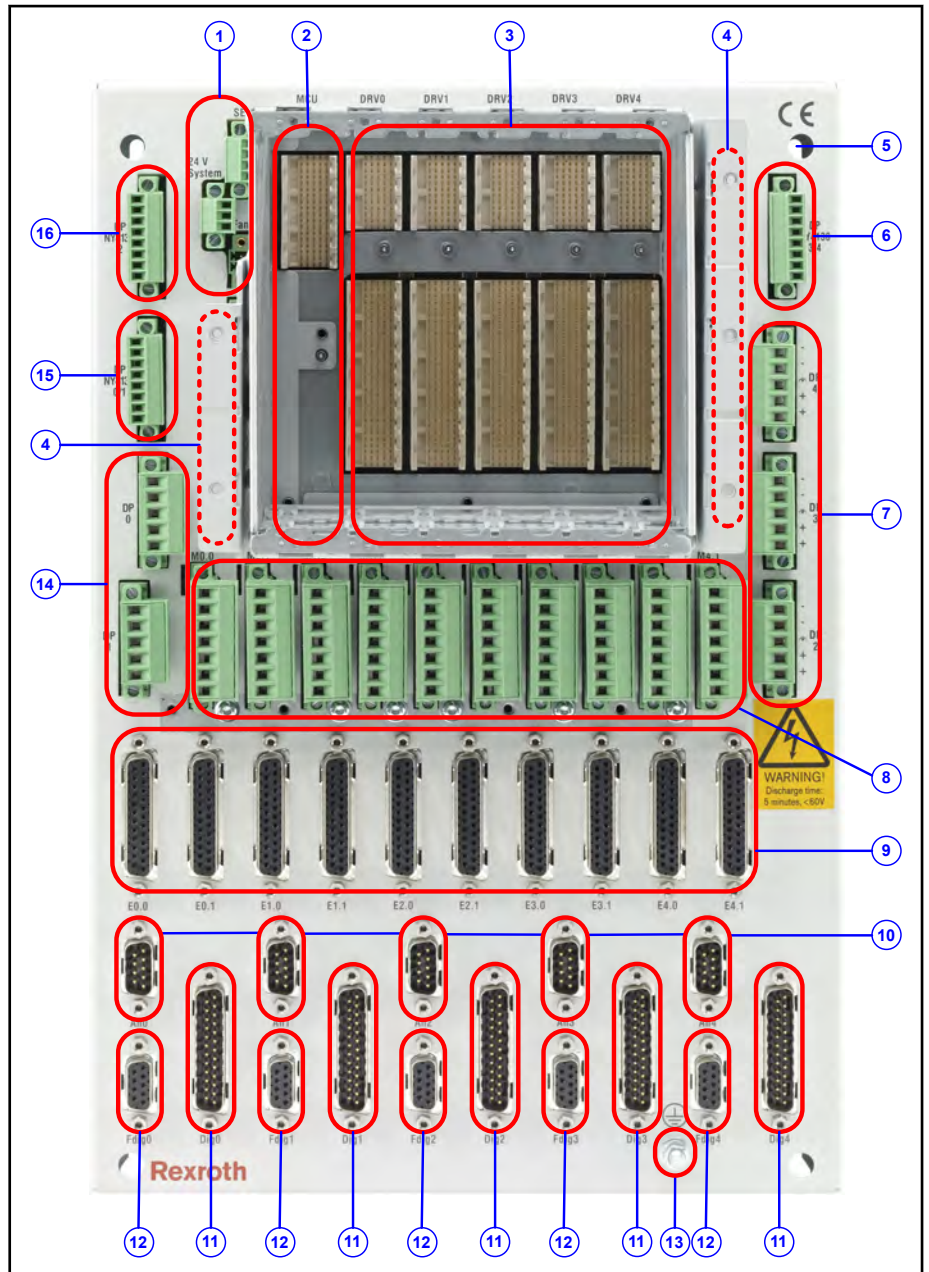


Fig. 8-1: NY4053 system housing

NY4053: 5 Drive Slot System Housing

Identifier number	Description
1	24V System, SE and Fan connectors
2	Motion Control Unit slot
3	Drive module slots (5)
4	Capacitor connectors (1 per drive slot)
5	Mounting screw opening (4)
6	NY4130 drive power connector (slot DRV3 and slot DRV4)
7	NY4120 / NY4140 drive power connectors (slot DRV2, DRV3, DRV4)
8	Motor connectors (2 per drive slot)
9	Encoder connectors (2 per drive slot)
10	Analog I/O connectors (1 per drive slot)
11	Digital I/O connectors (1 per drive slot)
12	Fast digital I/O connector (1 per drive slot)
13	Protective Earth post
14	NY4120 / NY4140 drive power connectors (slot DRV0, DRV1)
15	NY4130 drive power connector (slot DRV0 and slot DRV1)
16	NY4130 drive power connector (slot DRV2)

Tab. 8-1: NY4053 system housing identification legend

The discharge warning label warns the technician to observe a 5 minute discharge time delay to be certain that voltages are below 60 V, before undertaking any actions with the product.



Fig. 8-2: Discharge warning label on the system housing

The Power Marking label at the right side of the module holder indicates the rating of the system housing and other information.

NY4053: 5 Drive Slot System Housing

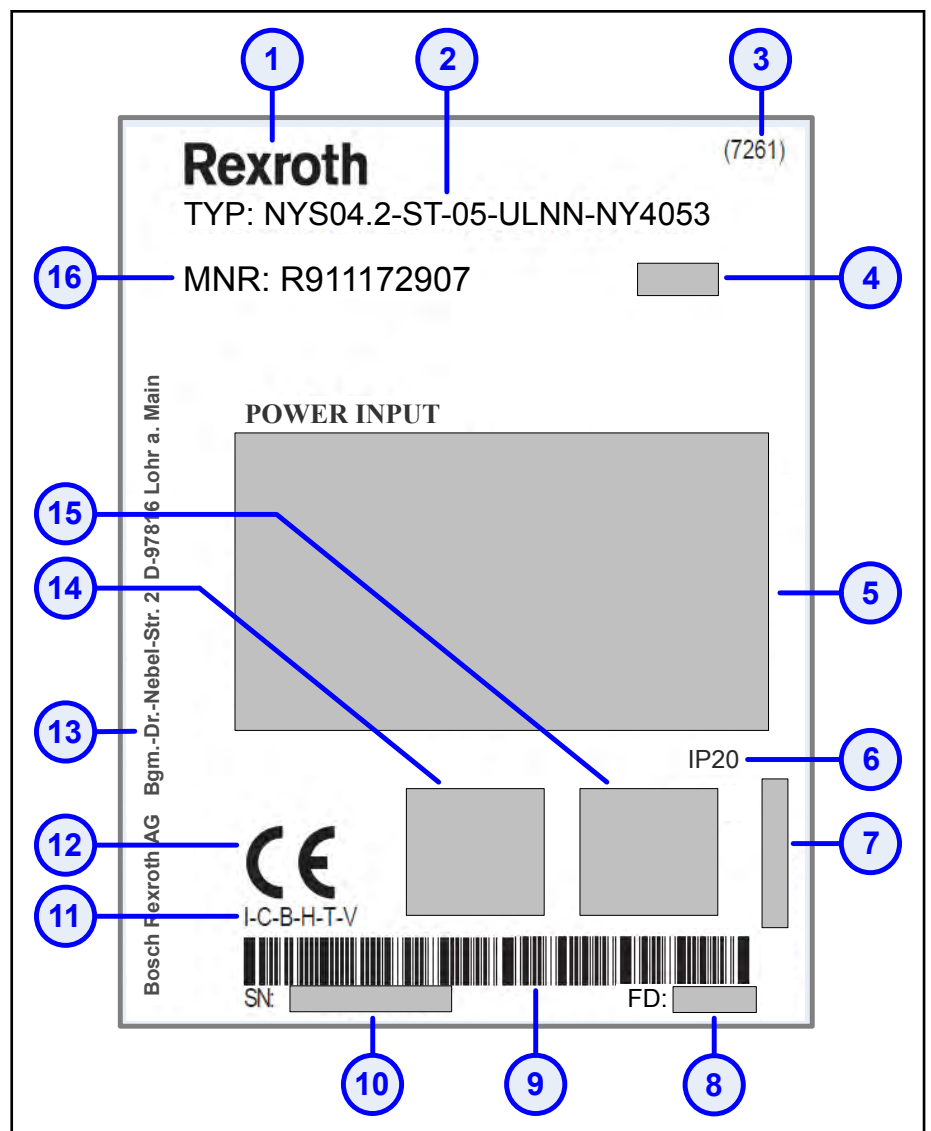


Fig. 8-3: Power Marking label on the module holder

Identifier number	Description
1	Logo type
2	Type code
3	Division number / plant number
4	Change index
5	Rated voltages and currents
6	Degrees of protection provided by enclosure (IP code)
7	Designation of origin
8	Date of manufacture (yyWww)
9	Rexroth bar code
10	Serial number

NY4053: 5 Drive Slot System Housing

Identifier number	Description
11	Test marking
12	CE marking
13	Company address
14	UL marking
15	Consult documentation marking
16	Material number

Tab. 8-2: Power Marking legend

8.2 System Housing Dimensions

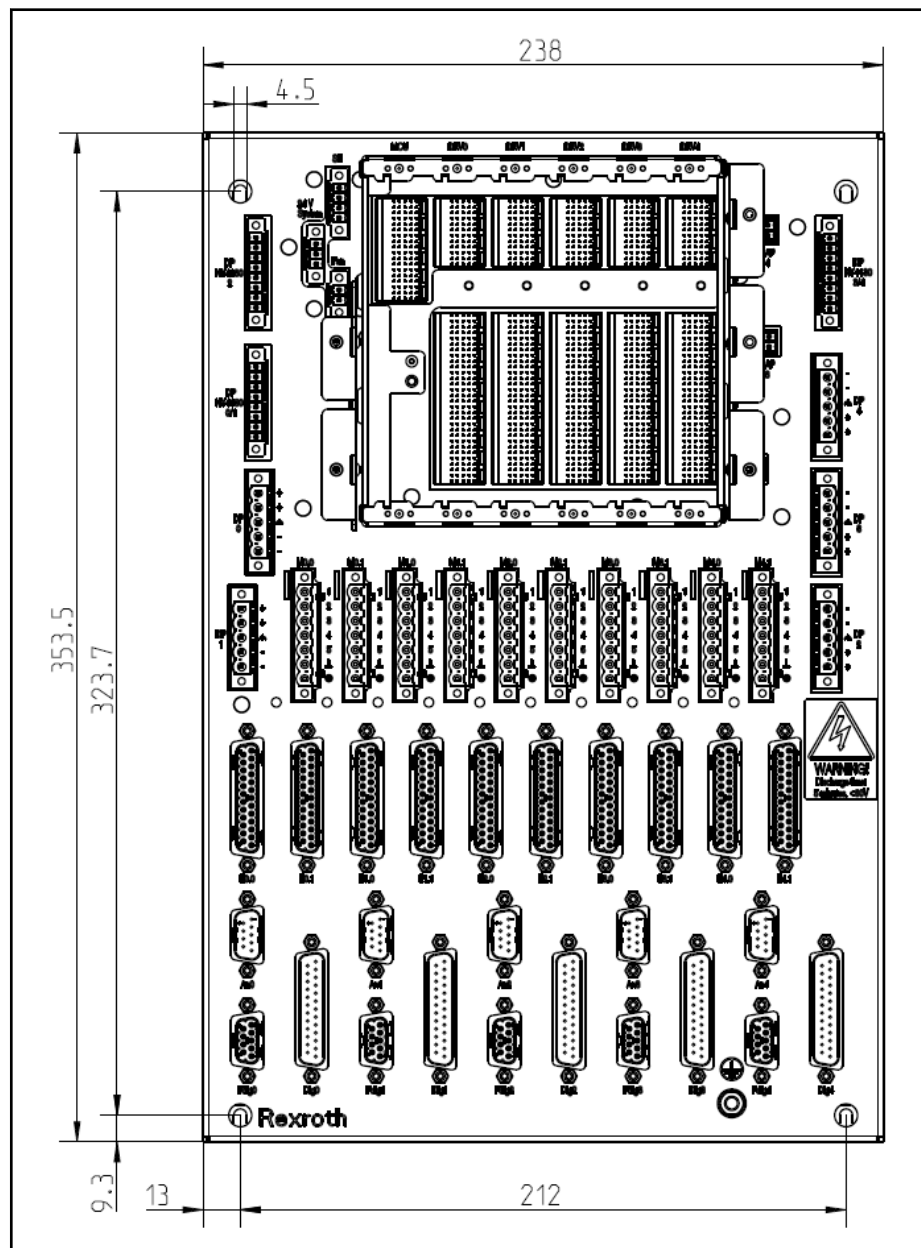


Fig. 8-4: NY4053 system housing front view dimensions

NY4053: 5 Drive Slot System Housing

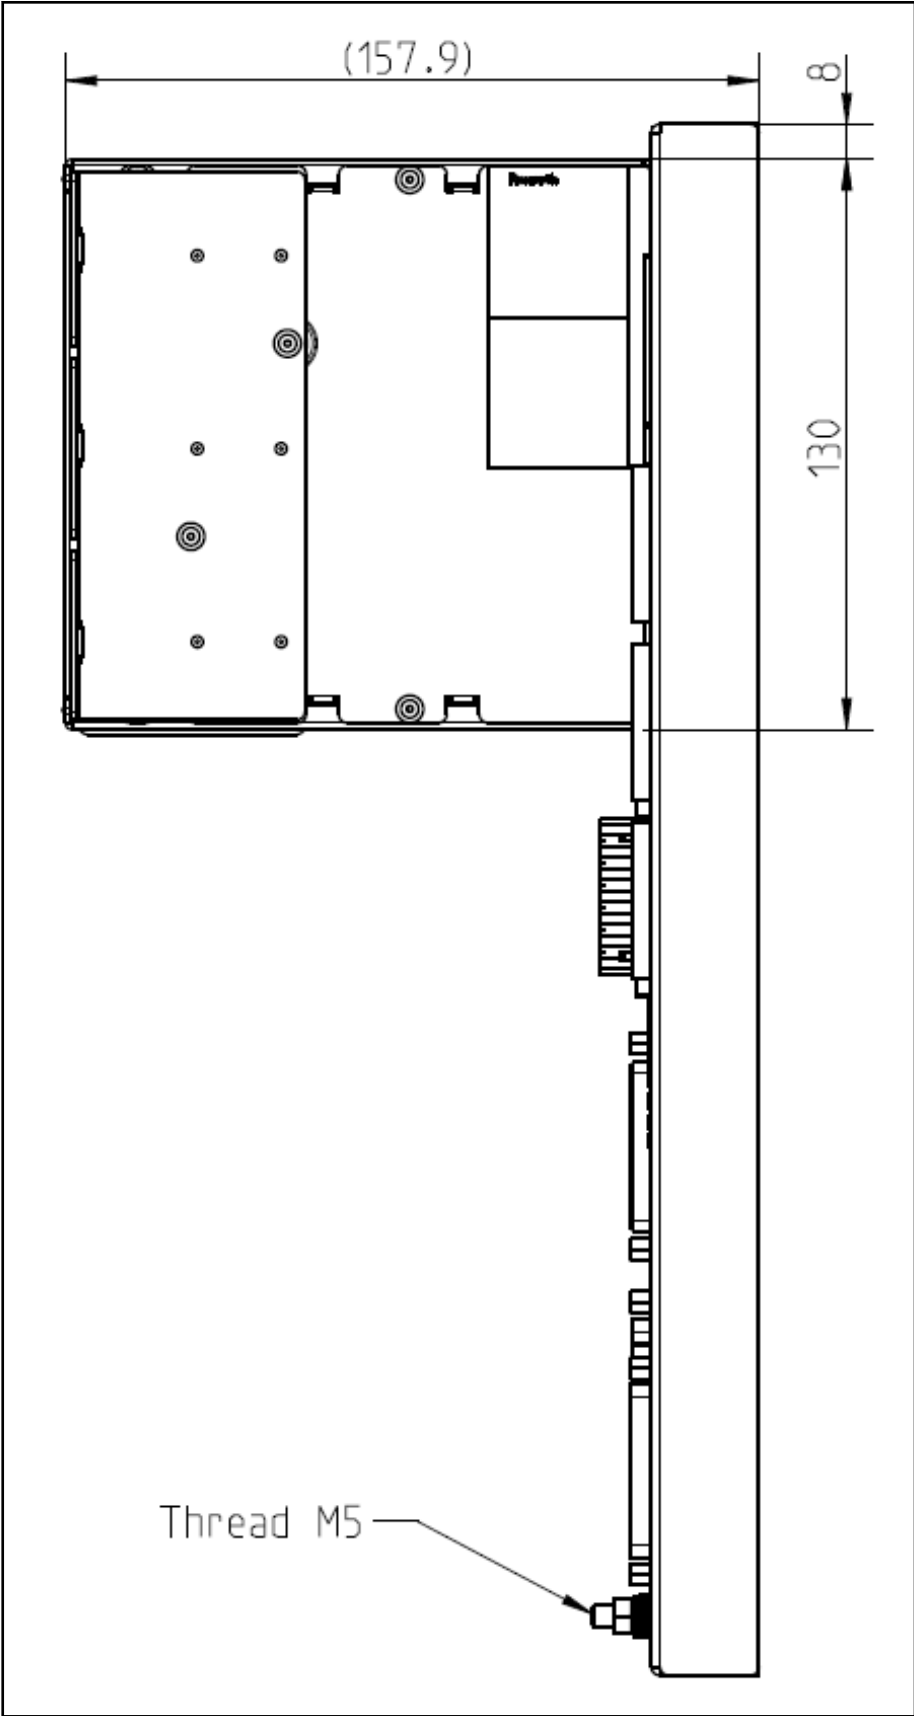


Fig. 8-5: NY4053 system housing side view dimensions

NY4053: 5 Drive Slot System Housing

System housing type code	Width	Height	Depth	Weight
NYS04.2-ST-05-ULNN-NY4053	238 mm	353.5 mm	157.9 mm	3600 gr

Tab. 8-3: NY4053 physical data

8.3 Connector Overview

This chapter gives an overview of all connections on the base plate of the system housing with links to the detailed information such as connector type, order code and pinout specification.

Text marking on base plate	Purpose	Detailed information
24V System	The 24 Volt System supply header is used by the MCU module to generate <ul style="list-style-type: none"> the logic supply voltages for the MCU and drive modules the supply voltage for all encoders connected to the drive modules. 	24V SYSTEM
SE	The Service Connection has two inputs. One input called "ServiceMode" is used to set the operation mode of the system to "service mode". The other input called "StopAxes" can be used to execute an as fast as possible stop of all axes connected to the system.	SERVICE
Fan	The Fan connector is a power supply header for the optional fan unit that can be installed underneath the module holder for forced cooling of the system.	FAN
CAP0 CAP1 CAP2 CAP3 CAP4	For every drive slot in the module holder is a dedicated external drive power capacitor header. Thus CAP0 is the capacitor associated with drive slot 0, and so on. A capacitor may only be needed if the drive module installed in a drive slot is an NY4120 or NY4140. No capacitor is needed if the drive slot contains an NY4130 drive module or NY4150 SERCOS III Master module.	CAP
DP 0 DP 1 DP 2 DP 3 DP 4	For every drive slot in the module holder is a dedicated external drive power supply header which is used if the drive slot contains an NY4120 or NY4140 drive module. Thus DP 0 is the drive power header associated with drive slot 0, and so on.	DP

NY4053: 5 Drive Slot System Housing

Text marking on base plate	Purpose	Detailed information
DP NY4130 0/1 DP NY4130 2 DP NY4130 3/4	Separate external drive power supply headers are available on the base plate if the drive slot contains an NY4130 drive module. A drive power supply header for NY4130 drive modules can be allocated to a single drive slot, or to two drive slots. This is indicated in the last part of the name. Thus DP NY4130 0/1 is the drive power header associated with drive slot 0 and drive slot 1, DP NY4130 2 is the drive power header associated with drive slot 2, and so on.	DP NY4130
M0.0 M0.1 M1.0 M1.1 M2.0 M2.1 M3.0 M3.1 M4.0 M4.1	For every drive slot in the module holder are two motor headers, one header for each axis. Mx.0 is the motor header for axis 0 if the drive module of that slot contains an NY4120, NY4130, or NY4140. Mx.1 is the motor header for axis 1 if the drive module of that slot contains an NY4120, NY4130. Note: pinout of Mx.0 and Mx.1 are different.	MOTOR
E0.0 E0.1 E1.0 E1.1 E2.0 E2.1 E3.0 E3.1 E4.0 E4.1	For every drive slot in the module holder are two encoder headers, one header for each axis. Ex.0 is the encoder header for axis 0. Ex.1 is the encoder header for axis 1. Note: pinout of Ex.0 and Ex.1 are different.	ENCODER
FDIG0 FDIG1 FDIG2 FDIG3 FDIG4	For every drive slot in the module holder is one headers for the Fast Digital I/O connections.Thus FDIG0 is the Fast Digital I/O header associated with drive slot 0, and so on.	FDIG I/O
DIG0 DIG1 DIG2 DIG3 DIG4	For every drive slot in the module holder is one headers for the Digital I/O connections.Thus DIG0 is the Digital I/O header associated with drive slot 0, and so on.	DIG I/O
AN0 AN1 AN2 AN3 AN4	For every drive slot in the module holder is one headers for the Analog I/O connections.Thus AN0 is the Analog I/O header associated with drive slot 0, and so on.	AN I/O
PE	Protective earth connection	PE

Tab. 8-4: Connection overview

NY4053: 5 Drive Slot System Housing

8.4 Field diagnostics

No diagnosis is available for the system housing.

The system housing does not contain any replaceable or wear parts. In case of failure, the entire system housing must be replaced.

NY4063: 3 Drive Slot System Housing with NY4125

9 NY4063: 3 Drive Slot System Housing with NY4125

9.1 Product Identification

The NY4063 system housing is specifically designed to support the NY4125 drive module. Drive slot 0 is reserved exclusively for the NY4125 drive module. Drive slot 1 and drive slot 2 support the NY4120 and NY4140 drive module. Due to software constraints, drive slot 1 and drive slot 2, if used, must contain identical drive modules. This constraint will be solved in a future software release.

Part number is R911172218, ordering code is NYS04.1-ST-03-4125-NY4063.

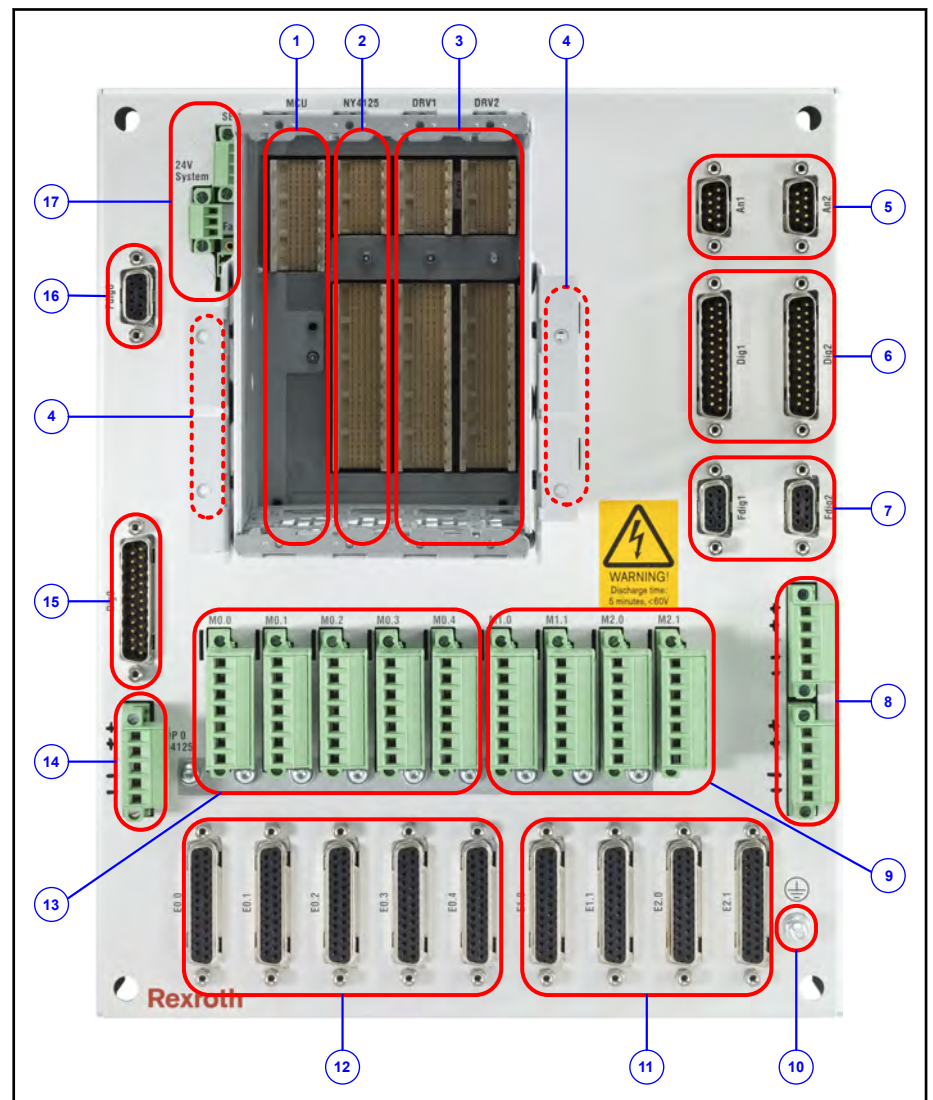


Fig. 9-1: NY4063 system housing

Identifier number	Description
1	Motion Control Unit slot
2	NY4125 drive module slot

NY4063: 3 Drive Slot System Housing with NY4125

Identifier number	Description
3	NY4120 / NY4140 drive module slots
4	Capacitor connectors (1 per drive slot)
5	Analog I/O connectors (slot DRV1, slot DRV2)
6	Digital I/O connectors (slot DRV1, slot DRV2)
7	Fast digital I/O connectors (slot DRV1, slot DRV2)
8	Drive power connectors (slot DRV1, slot DRV2)
9	Motor connectors (2 for slot DRV1, 2 for slot DRV2)
10	Protective Earth post
11	Encoder connectors (2 for slot DRV1, 2 for slot DRV2)
12	Encoder connectors (5 for slot NY4125)
13	Motor connectors (5 for slot NY4125)
14	Drive power connector (slot NY4125)
15	Digital I/O connector (slot NY4125)
16	Fast digital I/O connector (slot NY4125)
17	24V System, SE and Fan connectors

Tab. 9-1: NY4063 system housing identification legend

The discharge warning label warns the technician to observe a 5 minute discharge time delay to be certain that voltages are below 60 V, before undertaking any actions with the product.



Fig. 9-2: Discharge warning label on the system housing

The Power Marking label at the right side of the module holder indicates the rating of the system housing and other information.

NY4063: 3 Drive Slot System Housing with NY4125

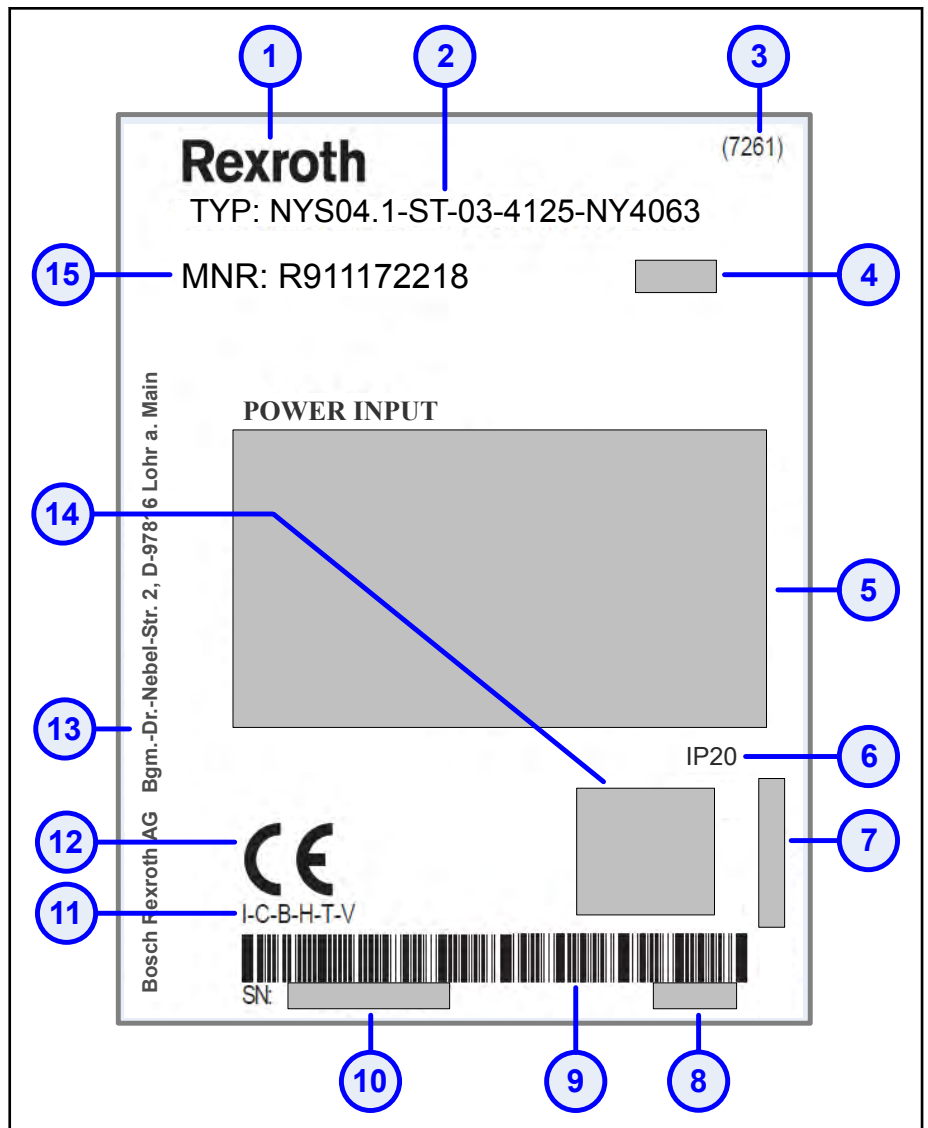


Fig. 9-3: Power Marking label on the module holder

Identifier number	Description
1	Logo type
2	Type code
3	Division number / plant number
4	Change index
5	Rated voltages and currents
6	Degrees of protection provided by enclosure (IP code)
7	Designation of origin
8	Date of manufacture (yyWww)
9	Rexroth bar code
10	Serial number

NY4063: 3 Drive Slot System Housing with NY4125

Identifier number	Description
11	Test marking
12	CE marking
13	Company address
14	Consult documentation marker
15	Material number

Tab. 9-2: Power Marking legend

9.2 System Housing Dimensions

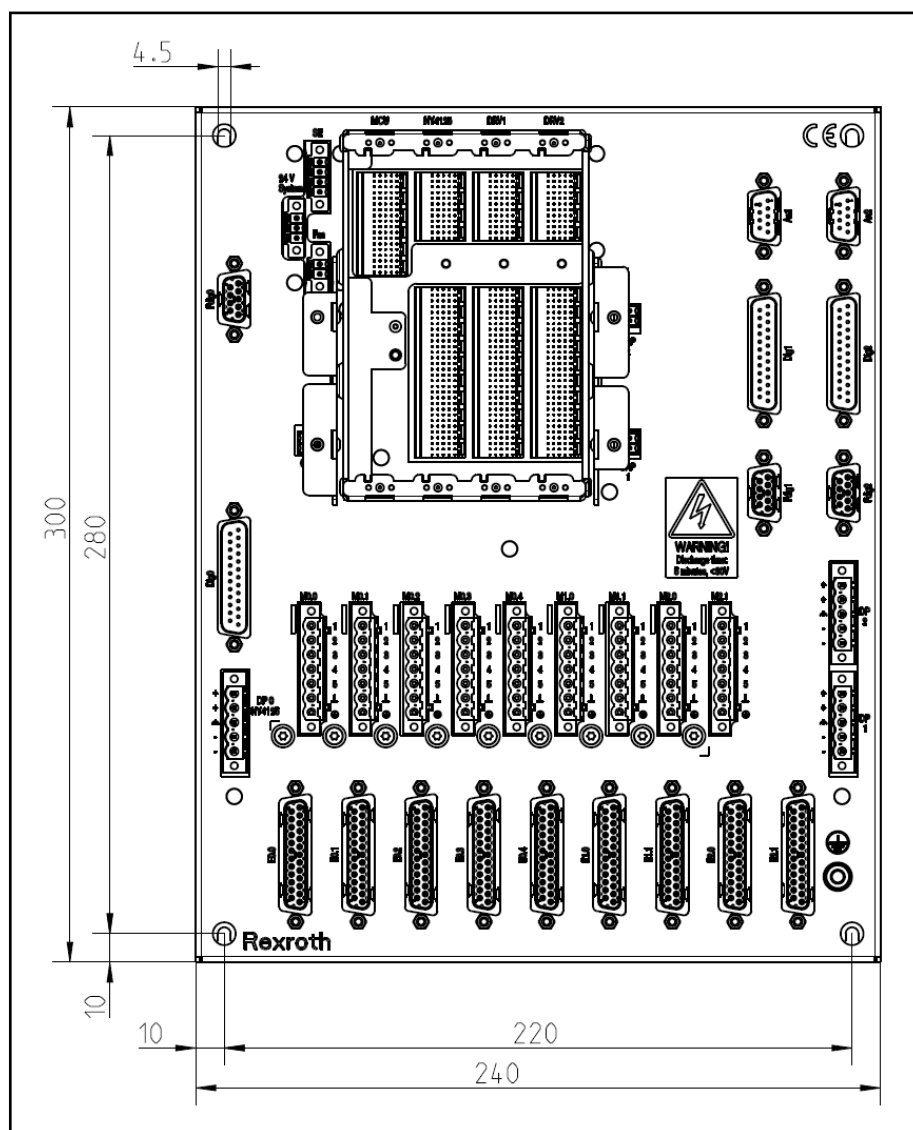


Fig. 9-4: NY4063 system housing front view dimensions

NY4063: 3 Drive Slot System Housing with NY4125

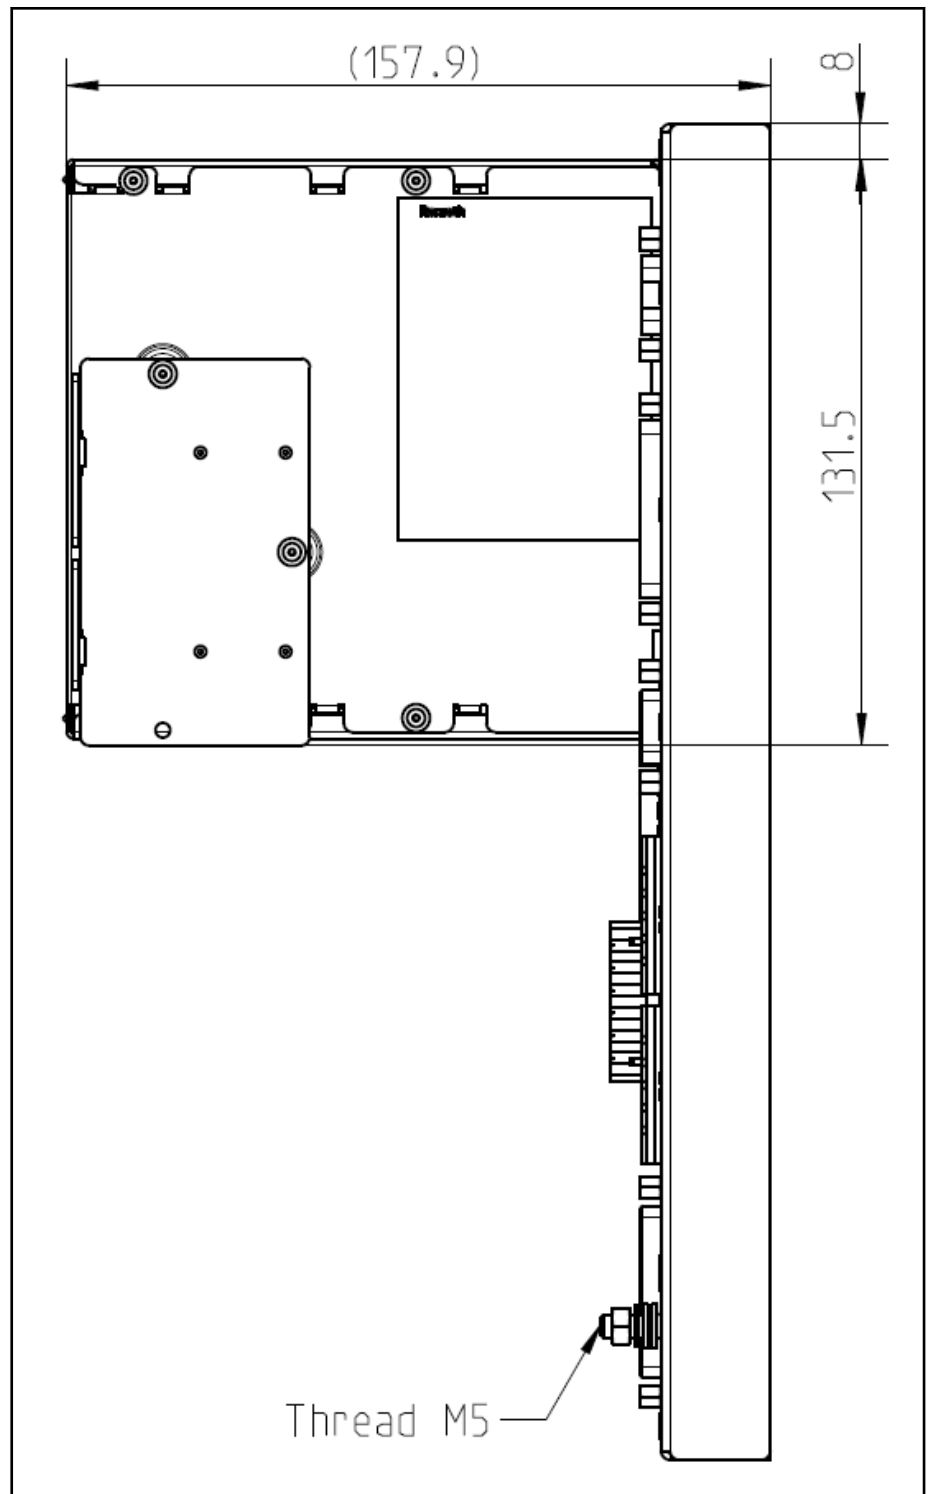


Fig. 9-5: NY4063 system housing side view dimensions

System housing type code	Width	Height	Depth	Weight
NYS04.1-ST-03-4125-NY4063	240 mm	300 mm	157.9 mm	3300 gr

Tab. 9-3: NY4063 physical data

NY4063: 3 Drive Slot System Housing with NY4125

9.3 Connector Overview

9.3.1 Introduction

This chapter gives an overview of all connections on the base plate of the system housing with links to the detailed information such as connector type, order code and pinout specification. In case of system housing specific connections all detailed information is given in the sub-chapters.

9.3.2 Common System Housing Connectors

Text marking on base plate	Purpose	Detailed information
24V System	The 24 Volt System supply header is used by the MCU module to generate <ul style="list-style-type: none"> the logic supply voltages for the MCU and drive modules the supply voltage for all encoders connected to the drive modules. 	24V SYSTEM
SE	The Service Connection has two inputs. One input called "ServiceMode" is used to set the operation mode of the system to "service mode". The other input called "StopAxes" can be used to execute an as fast as possible stop of all axes connected to the system.	SERVICE
Fan	The Fan connector is a power supply header for the optional fan unit that can be installed underneath the module holder for forced cooling of the system.	FAN
CAP0 CAP1 CAP2	For every drive slot in the module holder is a dedicated external drive power capacitor header. Thus CAP0 is the capacitor associated with drive slot 0, and so on.	CAP
AN1 AN2	For the drive module in slot 1 and slot 2 in the module holder is one header for the Analog I/O connections. Thus AN1 is the Analog I/O header associated with drive slot 1, and AN2 is the Analog I/O header associated with drive slot 2. Note that drive slot 0 has no Analog I/O header.	AN I/O
PE	Protective earth connection	PE

Tab. 9-4: Connection overview

9.3.3 NY4063 Drive Power Connections

The drive power headers used to connect the drive power supply are identical for all three slots. For each drive module a separate drive power header is available.

- DP 0 NY4125 : drive power header for drive module slot 0
- DP 1 : drive power header for drive module slot 1
- DP 2 : drive power header for drive module slot 2

NY4063: 3 Drive Slot System Housing with NY4125

See [chapter 12.5 "DP – NY4120 / NY4125 / NY4140 Drive Power Connections"](#) on page 117 for detailed information of the drive power header pinout.

⚠ WARNING	Voltage on the pins of the DP header can be higher than 60V DC. When the connector is unplugged a high voltage can remain present for 5 minutes after disconnection. If a drive slot has an accompanying capacitor installed and the drive module is not installed in that slot, you must wait 30 minutes.
------------------	--

Do not touch the pins of the DP connector.

NOTICE	The system housing has no provisions against wrong polarity connection of the DP drive power supply.
---------------	--

Observe the polarity of the drive power supply connections.

Drive power supply characteristics

Characteristic	Maximum rating per DP header
Drive power voltage and input current	DP 0 NY4125: 36V / 10A DP 1: 75V / 12A or 150V / 6A DP 2: 75V / 12A or 150V / 6A

Tab. 9-5: DP drive power input characteristics per DP header

The headers can be keyed to prevent wrong drive power cable connection. It is the responsibility of the customer to put key fingers accordingly on the drive power plugs. A key on the DP header implies no finger on the DP plug for that pin. See [chapter 19.3 "Keying Fingers for Drive Power and Motor Connectors"](#) on page 149 for more information.

Pin	DP 0 NY4125	DP 1	DP 2
1	key	no key	no key
2	no key	key	no key
3	no key	no key	key
4	no key	no key	no key
5	no key	no key	no key

Tab. 9-6: Example of drive power header keying

9.3.4 NY4063 Motor Connections - General Information

Each motor has its own motor connector. Note that the pin assignment of the motor connectors for slot 0, slot 1 and slot 2 are different.

NY4063: 3 Drive Slot System Housing with NY4125

Header type on the backplane: female, 7 pins, Phoenix Contact, ICV 2,5/ 7-G-5,08.

Mating plug on the cable: Phoenix Contact, IC 2,5/ 7-STF-5,08, order code 1825365. The cables plugs are supplied with the system housing.

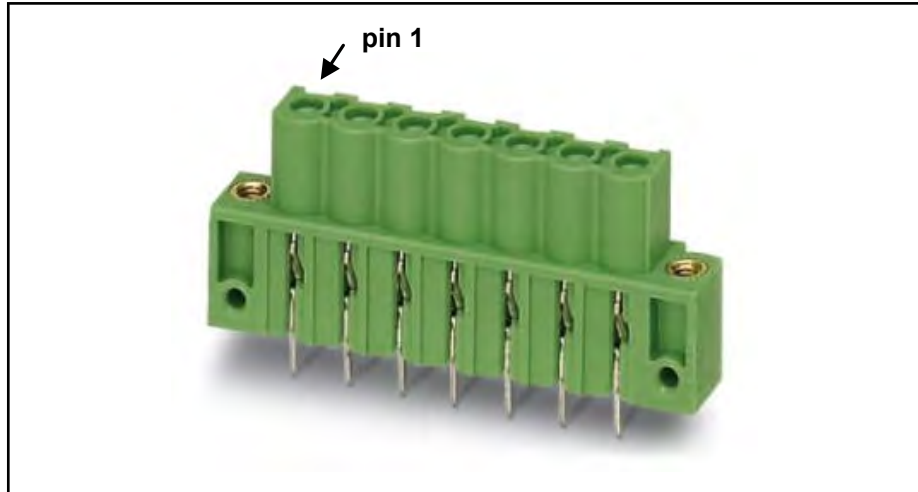


Fig. 9-6: Motor header (backplane) pinout

Cable Characteristics

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	Depends on drive current and installed fuse in the drive power supply connection. See also chapter 29.10.4 "Drive Power Supply" on page 220.
Maximum cable length	15 m

Tab. 9-7: Motor cable specification

9.3.5 NY4063 Motor Connections - Drive Slot 0 (NY4125)

The NY4125 drive module has five motor headers, one header for each axis.

The following motor headers for slot 0 are available on the backplane.

- M0.0 : drive module slot 0 motor 0 header
- M0.1 : drive module slot 0 motor 1 header
- M0.2 : drive module slot 0 motor 2 header
- M0.3 : drive module slot 0 motor 3 header
- M0.4 : drive module slot 0 motor 4 header

Pin	Pin name	BLAC motor NY4125	DC motor NY4125
1		Not connected.	Not connected.
2	HB_1	U	
3	HB_2	V	+V _{DCmotor}
4	HB_3	W	-V _{DCmotor}

NY4063: 3 Drive Slot System Housing with NY4125

Pin	M0.0	M0.1	M0.2	M0.3	M0.4	M1.0	M1.1	M2.0	M2.1
4	no key	no key	no key	key	no key	no key	no key	no key	no key
5	no key	no key	no key	no key	key	no key	no key	key	key
6	no key	no key	no key	no key	no key	key	key	no key	no key
7	key	key	key	key	key	no key	no key	no key	no key

Tab. 9-10: Example of NY4063 motor header keying for all axes

9.3.8 Encoder Connections - General Information

Each motor has its own encoder header. Note that the pin assignment of the encoder headers for slot 0 are different when compared with the encoder headers of slot 1 and slot 2.

The same encoder cable of an quadrature, EnDat2.2, MSM and Sanyo Denki encoder can be used on any encoder header. The quadrature encoder is also known as A/B encoder, S0S90 encoder and 3-channel digital incremental encoder.

Header type on the backplane: female, 25 pins sub-D, with 4-40 UNC nut.

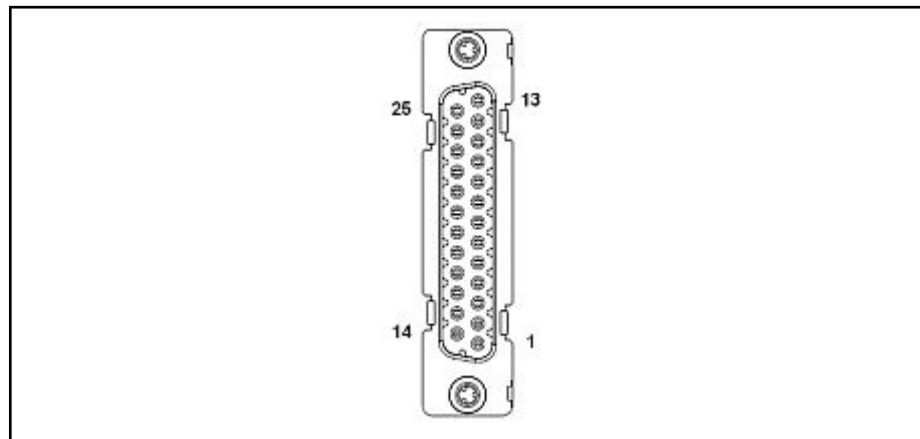


Fig. 9-7: Encoder header (backplane) pinout



- Connect the shield of the cable to the metal housing of the sub-D plug.
- Use twisted pair cabling for the differential signals.

9.3.9 Encoder Connections - Slot 0

The following encoder headers for slot 0 are available on the backplane.

- E0.0 : drive module slot 0 encoder 0 header
- E0.1 : drive module slot 0 encoder 1 header
- E0.2 : drive module slot 0 encoder 2 header
- E0.3 : drive module slot 0 encoder 3 header
- E0.4 : drive module slot 0 encoder 4 header

The connector pin assignment for the encoder header E0.y (y = 0 ... 4) for the axes of slot 0 is given in [tab. 9-11 "Slot 0 encoder headers E0.y pinout \(y = 0 ... 4\)"](#) on page 83.

NY4063: 3 Drive Slot System Housing with NY4125

Pin	Pin name	Function of encoder connections for axes of slot 0 (header E0.y)				
		EnDat2.2	MSM	Sanyo Denki	Quadrature	TTL input
1	Enc5V	+5 Volt	+5 Volt	+5 Volt	+5 Volt	+5 Volt
2	EncVref				EncVref	
3	EncQuadA+				QuadA+	
4	EncQuadB+				QuadB+	
5	EncIndex+				Index+	
6	EncQuadA+	Clock+				
7						
8	EncQuadB+	Data+	Data+	ES+		
9						
10						
11						
12						
13						
14	EncGND	0 Volt	0 Volt	0 Volt	0 Volt	
15	EncQuadA-				QuadA-	
16	EncQuadB-				QuadB-	
17	EncIndex-				Index-	
18	EncQuadA-	Clock-				
19						
20	EncQuadB-	Data-	Data-	ES-		
21						
22						
23						
24	TTLIn	TTL input	TTL input	TTL input	TTL input	TTL input
25	EncGND	0 Volt	0 Volt	0 Volt	0 Volt	0 Volt

Tab. 9-11: Slot 0 encoder headers E0.y pinout (y = 0 ... 4)



- Connect the shield of the cable to the metal housing of the sub-D plug.
- Use twisted pair cabling for the differential signals Clock+/Clock-, Data+/Data-, ES+/ES-, Index+/Index-, QuadA+/QuadA-, QuadB+/QuadB-.

Slot 0 Encoder Cable Characteristics

NY4063: 3 Drive Slot System Housing with NY4125

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	AWG 24 / 0.24 mm ² (1A)
Maximum cable length	15 m for encoder signals 5 m for TTL input signals

Tab. 9-12: Slot 0 encoder cable specification

9.3.10 Encoder Connections - Slot 1 and Slot 2

The following encoder headers for slot 1 and slot 2 are available on the backplane.

- E1.0 and E1.1 : drive module slot 1 encoder 0 and encoder 1 header
- E2.0 and E2.1 : drive module slot 2 encoder 0 and encoder 1 header

See [chapter 12.9 "E – Encoder Connections"](#) on page 127 for detailed information of the pin assignment for the encoder header E1.0 and E2.0 for axis 0 and E1.1 and E2.1 for axis 1.

9.3.11 Fast Digital I/O Connections - General Information

The fast digital I/O header (FDIGx) is available for each drive module.

Note that the pin assignment of the fast digital I/O header for slot 0 is different when compared with the fast digital I/O headers of slot 1 and slot 2.

Header type on the backplane: female, 9 pins sub-D, with 4-40 UNC nut.

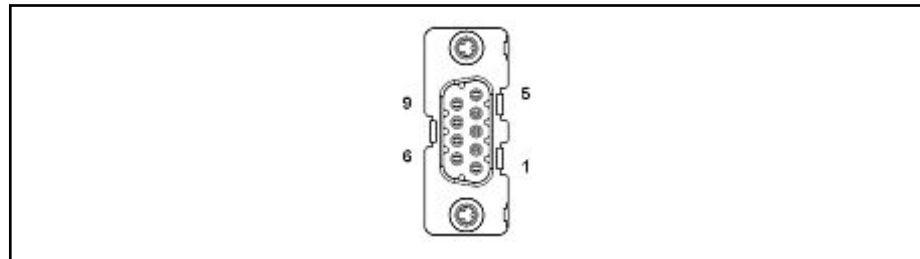


Fig. 9-8: Fast digital I/O header (backplane) pinout

NOTICE

The system housing has no provisions against wrong polarity connection of the 24V I/O power supply.

Observe the polarity of the power supply connections.



- Connect the shield of the cable to the metal housing of the sub-D plug.
- The GND wire of the signal wire must always be included in the cable.
- GND_DIO and 24V_DIO pins of the FDIGx headers are also connected to GND_DIO and 24V_DIO pins of the DIGx headers.

NY4063: 3 Drive Slot System Housing with NY4125

Fast digital I/O power supply characteristics

Characteristic	Description
Power supply voltage	24V +/-6V
Power supply current	< 4.5A

Tab. 9-13: Fast digital I/O power supply characteristics

Fast Digital Input Characteristics

Characteristic	Description
Permitted input voltage	0V ... 30V
Input high level	15V ... 30V
Input low level	0V ... 5V
Input current @ 24V	Nominal 15 mA

Tab. 9-14: Fast digital Input characteristics

The fast digital inputs only support high-side switching.

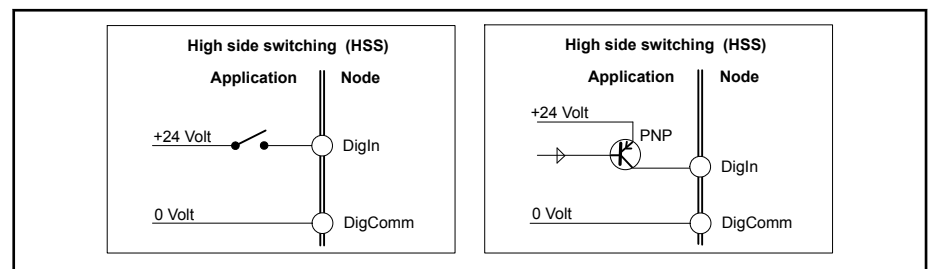


Fig. 9-9: High-side switching fast digital inputs

Fast Digital Output Characteristics

Characteristic	Description
Output voltage	24V ±6V
Output current	0.4 mA ... 100 mA, typical 50 mA

Tab. 9-15: Fast digital output characteristics

Cable Characteristics

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	AWG 24 / 0.24 mm ² (1A) minimum Use cables with wires of correct rating
Maximum cable length	15 m

Tab. 9-16: Fast Digital I/O cable specification

NY4063: 3 Drive Slot System Housing with NY4125

9.3.12 Fast Digital I/O Connections - Slot 0

The following fast digital I/O header is available for slot 0 on the backplane.

- Fdig0 : drive module slot 0 fast digital I/O header

The connector pin assignment for the drive module in slot 0 is given in [tab. 9-17 "Fast digital I/O headers pinout for slot 0"](#) on page 86.

Pin	Pin name	Function
1	GND_DIO	Ground for digital I/O.
2	FastOut0	Fast 24 Volt Output 0.
3	FastOut1	Fast 24 Volt Output 1.
4	FastIn0	+ Fast 24 Volt Input 0.
5	StopAlarm	+ Fast 24 Volt Input 1. Reserved for stop alarm input for all axes.
6	24V_DIO	24 Volt I/O supply.
7	24V_DIO	24 Volt I/O supply.
8	GND_DIO	Ground for digital I/O.
9	GND_DIO	Ground for digital I/O.

Tab. 9-17: Fast digital I/O headers pinout for slot 0

9.3.13 Fast Digital I/O Connections - Slot 1 and Slot 2

The following fast digital I/O headers are available for slot 1 and slot 2 on the backplane.

- Fdig1 : drive module slot 1 fast digital I/O header
- Fdig2 : drive module slot 2 fast digital I/O header

See [chapter 12.10 "Fdig – Fast Digital I/O Connections"](#) on page 130 for detailed information of the pin assignment for the fast digital I/O headers Fdig1 and Fdig2.

9.3.14 Digital I/O Connections - General Information

The digital I/O header (DIGx) is available for each drive module.

Note that the pin assignment of the digital I/O header for slot 0 is different when compared with the digital I/O headers of slot 1 and slot 2.

Header type on the backplane: male, 25 pins sub-D, with 4-40 UNC nut.

NY4063: 3 Drive Slot System Housing with NY4125

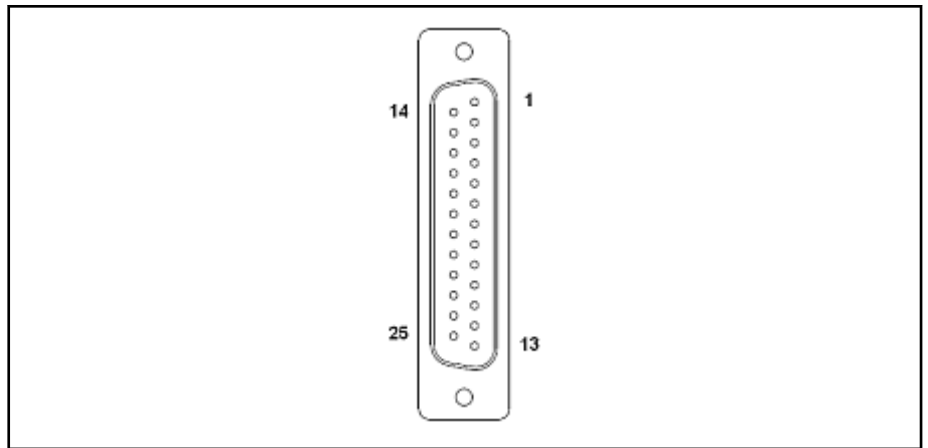


Fig. 9-10: Digital I/O header (backplane) pinout

NOTICE

The system housing has no provisions against wrong polarity connection of the 24V I/O power supply.

Observe the polarity of the power supply connections.



- Connect the shield of the cable (if shielded cable is used) to the metal housing of the sub-D plug.
- The GND wire of the signal wire must always be included in the cable.
- Each pin is rated for a load of 1 A. Connect pin # 22, 23, 24, and 25 to match the total load connected to the digital output pins.
- GND_DIO and 24V_DIO pins of the DIGx headers are also connected to GND_DIO and 24V_DIO pins of the FDIGx headers.

Digital I/O power supply characteristics

Characteristic	Description
Power supply voltage	24V +/-6V
Power supply current	< 4.5A

Tab. 9-18: Digital I/O power supply characteristics

Digital Input Characteristics

Characteristic	Description
Permitted input voltage	0V ... 30V
Input high level	15V ... 30V
Input low level	0V ... 5V
Input current @ 24V	Nominal 3.5 mA

Tab. 9-19: Digital Input characteristics

NY4063: 3 Drive Slot System Housing with NY4125

The digital inputs support high-side switching and low-side switching.

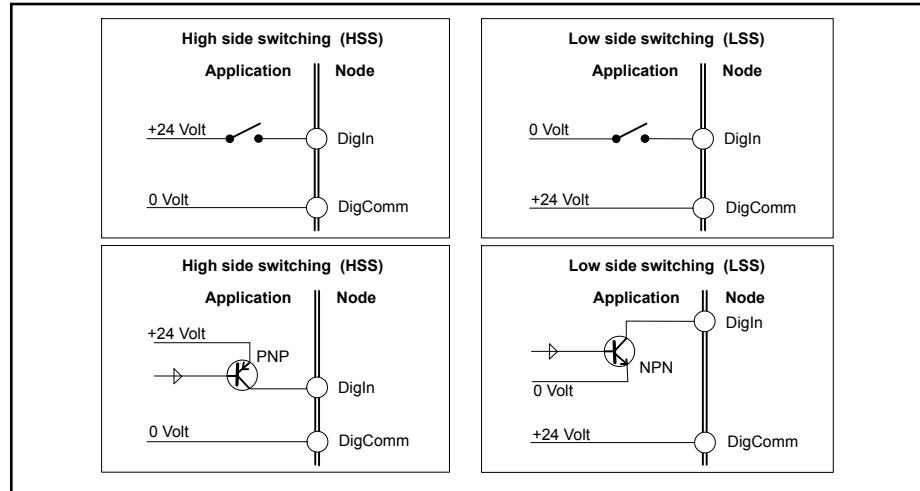


Fig. 9-11: High-side switching and low-side switching digital inputs

Digital Output Characteristics

Characteristic	Description
Output voltage	24V \pm 6V
Output current	0.02A ... 1A, 2A peak (max. 50 ms)

Tab. 9-20: Digital output characteristics

Cable Characteristics

Characteristic	Description
Type of cable	Shielded or unshielded cable
Wire gauge / cross section	AWG 24 / 0.24 mm ² (1A) minimum Use cables with wires of correct rating
Maximum cable length	15 m

Tab. 9-21: Digital I/O cable specification

9.3.15 Digital I/O Connections - Slot 0

The following digital I/O header for slot 0 is available on the backplane.

- Dig0 : drive module slot 0 digital I/O header

The connector pin assignment is given in [tab. 9-22 "Digital I/O headers pinout for slot 0" on page 88](#).

Pin	Pin name	Function
1	DigIn0	Digital Input in group 0.
2	DigIn1	Digital Input in group 0.

NY4063: 3 Drive Slot System Housing with NY4125

Pin	Pin name	Function
3	DigIn2	Digital Input in group 0.
4	DigIn3	Digital Input in group 0.
5	DigIn4	Digital Input in group 1.
6	DigIn5	Digital Input in group 1.
7	DigIn6	Digital Input in group 1.
8	DigIn7	Digital Input in group 1.
9	GND_DIO	Ground for digital Output, connected to power supply.
10	DigOut0	Digital Output.
11	DigOut1	Digital Output.
12	DigOut2	Digital Output.
13	DigOut3	Digital Output.
14	DigComm0	Common for digital Input group 0, may be ground or 24V.
15	DigIn8	Digital Input in group 2.
16	DigIn9	Digital Input in group 2.
17	DigIn10	Digital Input in group 2.
18	DigIn11	Digital Input in group 2.
19	DigComm2	Common for digital Input group 2, may be ground or 24V.
20	DigComm1	Common for digital Input group 1, may be ground or 24V.
21	GND_DIO	Ground for digital Output, connected to power supply.
22	24V_DIO	24 Volt digital Output supply.
23	24V_DIO	24 Volt digital Output supply.
24	24V_DIO	24 Volt digital Output supply.
25	24V_DIO	24 Volt digital Output supply.

Tab. 9-22: Digital I/O headers pinout for slot 0

9.3.16 Digital I/O Connections - Slot 1 and Slot 2

The following digital I/O headers for slot 1 and slot 2 are available on the backplane.

- Dig1 : drive module slot 1 digital I/O header
- Dig2 : drive module slot 2 digital I/O header

See [chapter 12.11 "Dig – Digital I/O Connections"](#) on page 132 for detailed information of the pin assignment for the digital I/O headers Dig1 and Dig2.

9.4 Field diagnostics

No diagnosis is available for the system housing.

The system housing does not contain any replaceable or wear parts. In case of failure, the entire system housing must be replaced.

NY4074: LMS System Housing for 2 drive modules

10 NY4074: LMS System Housing for 2 drive modules

10.1 Product Identification

The NY4074 system housing has three slots, one slot for the MCU and two slots for NY4120/10 drive modules. Part number is R911378504, ordering code is NYS04.2-ST-02-LMSN-NY4074.

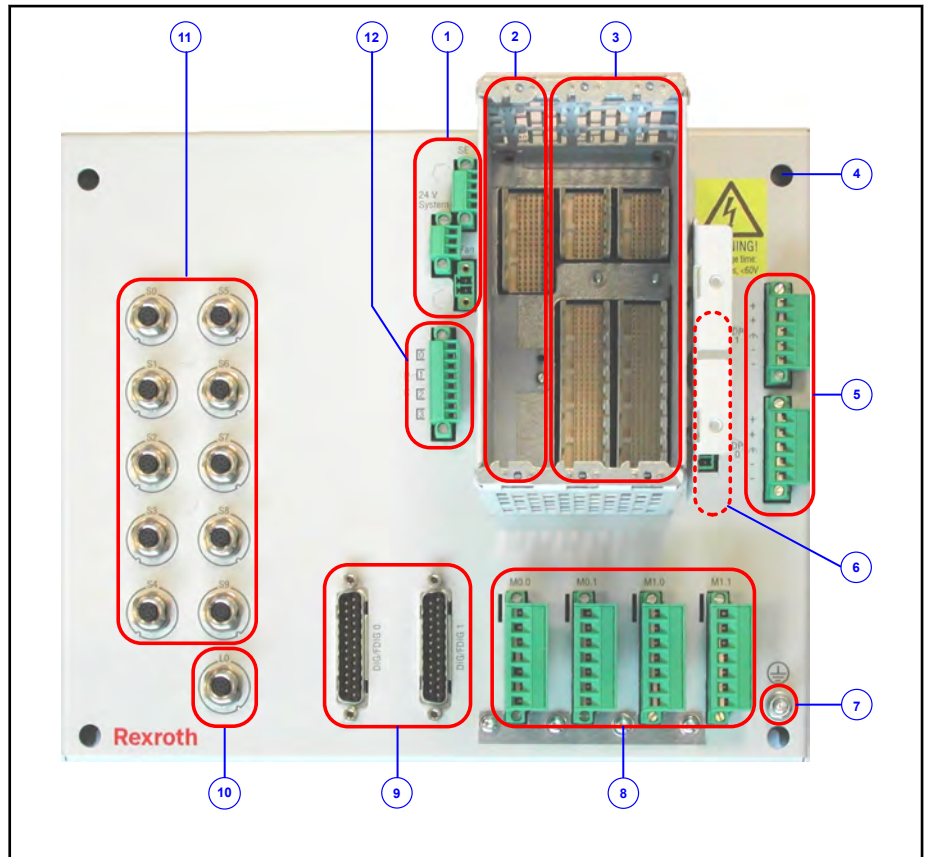


Fig. 10-1: NY4074 system housing

Identifier number	Description
1	24V System, SE and Fan connectors
2	Motion Control Unit slot
3	NY4120/10 drive module slots
4	Mounting screw opening (4)
5	Drive power connectors (1 per drive slot)
6	Capacitor connectors (1 per drive slot)
7	Protective Earth post
8	Motor connectors (2 for each drive slot)
9	Digital I/O and Fast digital I/O connectors (1 per drive slot)
10	Shared sensor connector

NY4074: LMS System Housing for 2 drive modules

Identifier number	Description
11	LMS sensor connector (10)
12	PTC connector

Tab. 10-1: NY4074 system housing identification legend

The discharge warning label warns the technician to observe a 5 minute discharge time delay to be certain that voltages are below 60 V, before undertaking any actions with the product.



Fig. 10-2: Discharge warning label on the system housing

The Power Marking label at the right side of the module holder indicates the rating of the system housing and other information.

NY4074: LMS System Housing for 2 drive modules

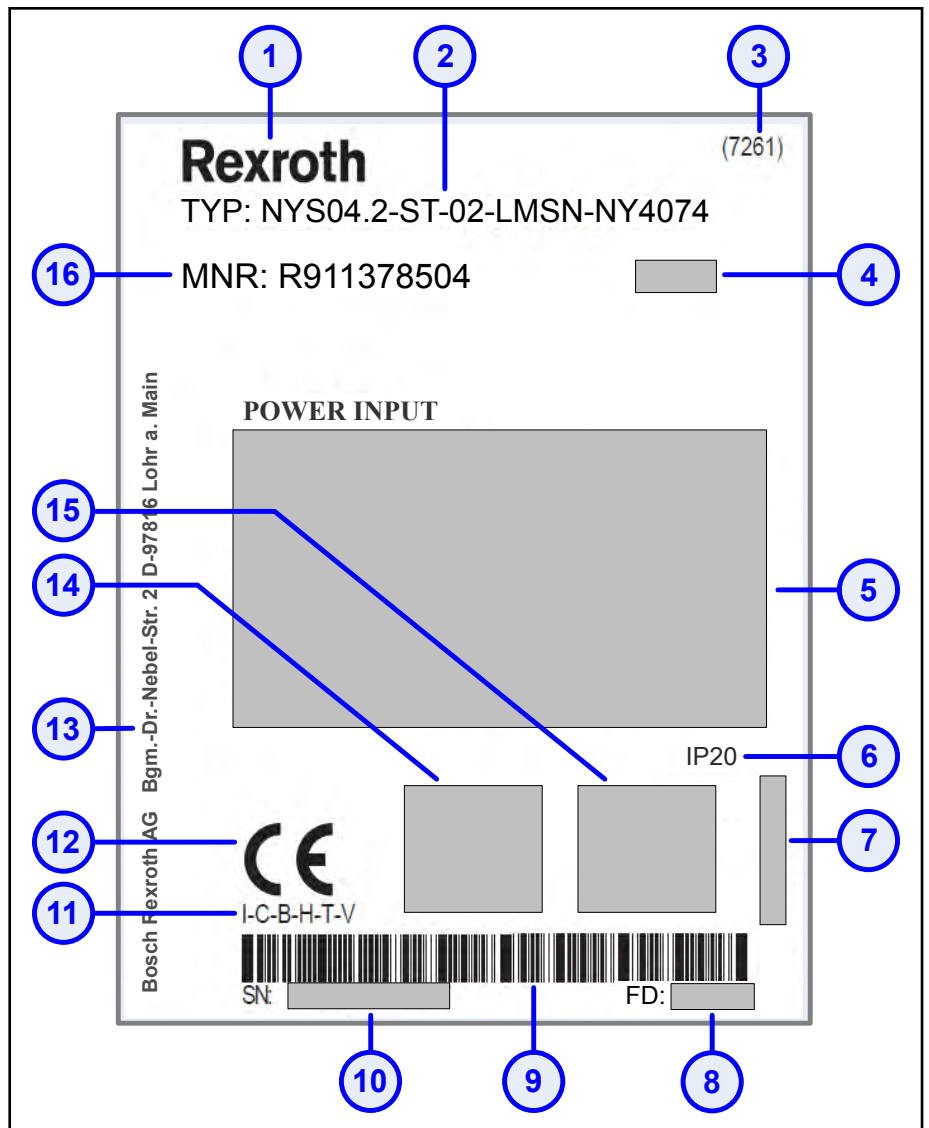


Fig. 10-3: Power Marking label on the module holder

Identifier number	Description
1	Logo type
2	Type code
3	Division number / plant number
4	Change index
5	Rated voltages and currents
6	Degrees of protection provided by enclosure (IP code)
7	Designation of origin
8	Date of manufacture (yyWww)
9	Rexroth bar code
10	Serial number

NY4074: LMS System Housing for 2 drive modules

Identifier number	Description
11	Test marking
12	CE marking
13	Company address
14	UL marking
15	Consult documentation marking
16	Material number

Tab. 10-2: Power Marking legend

10.2 System Housing Dimensions

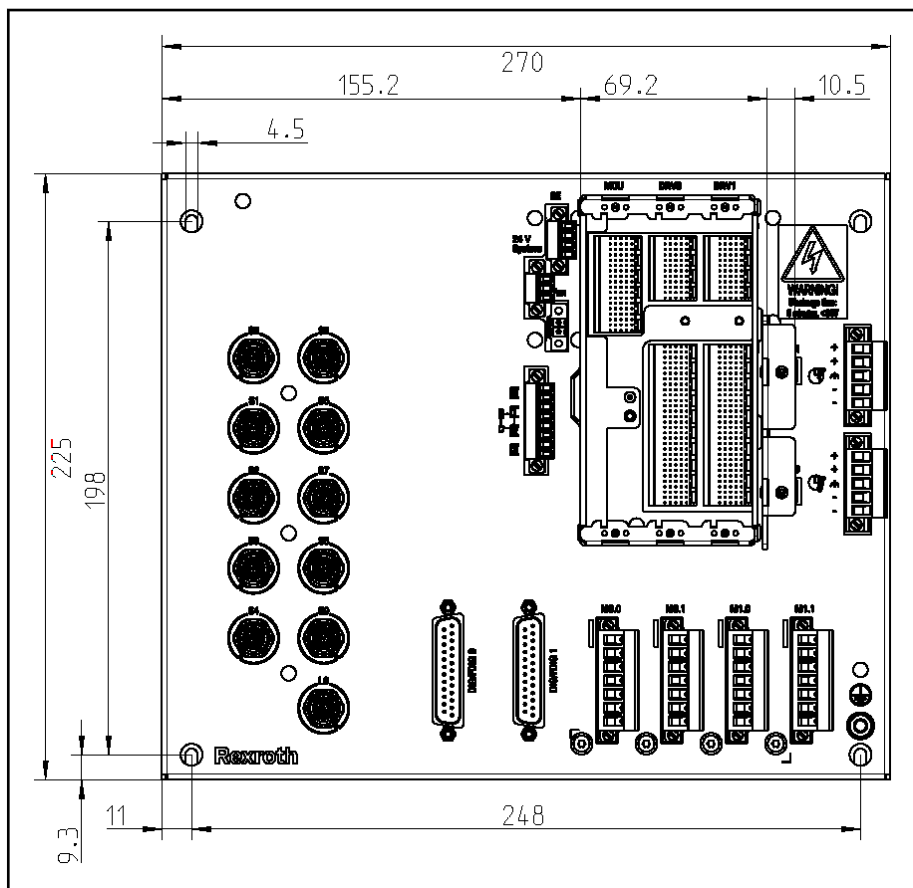


Fig. 10-4: NY4074 system housing front view dimensions

NY4074: LMS System Housing for 2 drive modules

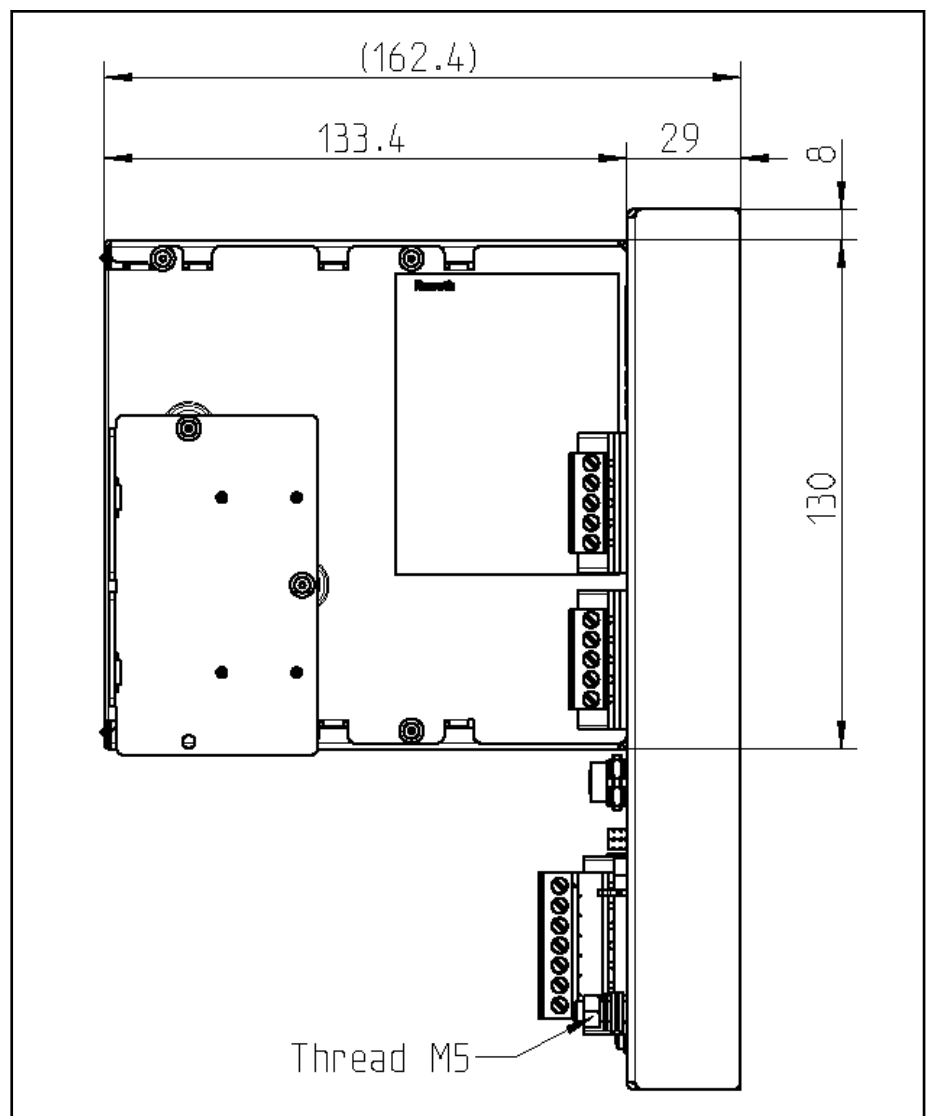


Fig. 10-5: NY4074 system housing side view dimensions

System housing type code	Width	Height	Depth	Weight
NYS04.2-ST-02-LMSN-NY4074	270 mm	225 mm	162.4 mm	1980 gr

Tab. 10-3: NY4074 physical data

10.3 Connector Overview

10.3.1 Introduction

This chapter gives an overview of all connections on the base plate of the system housing with links to the detailed information such as connector type, order code and pinout specification. In case of system housing specific connections all detailed information is given in the sub-chapters.

NY4074: LMS System Housing for 2 drive modules

10.3.2 Common System Housing Connectors

Text marking on base plate	Purpose	Detailed information
24V System	The 24 Volt System supply header is used by the MCU module to generate <ul style="list-style-type: none"> the logic supply voltages for the MCU and drive modules 	24V SYSTEM
SE	The Service Connection has two inputs. One input called "ServiceMode" is used to set the operation mode of the system to "service mode". The other input called "StopAxes" can be used to execute an as fast as possible stop of all axes connected to the system.	SERVICE
Fan	The Fan connector is a power supply header for the optional fan unit that can be installed underneath the module holder for forced cooling of the system.	FAN
CAP0 CAP1	For every drive slot in the module holder is a dedicated external drive power capacitor header. Thus CAP0 is the capacitor associated with drive slot 0, and so on.	CAP
DP 0 DP 1	For every drive slot in the module holder is a dedicated external drive power supply header is available. Thus DP 0 is the drive power header associated with drive slot 0, and DP 1 is the drive power header associated with drive slot 1.	DP
PE	Protective earth connection	PE

Tab. 10-4: Connection overview

10.3.3 Motor connectors

Each drive slot has two motor headers, one header for each axis.

Header type on the backplane: female, 7 pins, Phoenix Contact, ICV 2,5/ 7-GF-5,08.

Mating plug on the cable: Phoenix Contact, IC 2,5/ 7-STF-5,08, order code 1825365. The cable plugs are supplied with the system housing.

The following motor headers are available on the backplane.

- M0.0 and M0.1 : drive module slot 0 motor 0 and motor 1 header
- M1.0 and M1.1 : drive module slot 1 motor 0 and motor 1 header

NY4074: LMS System Housing for 2 drive modules

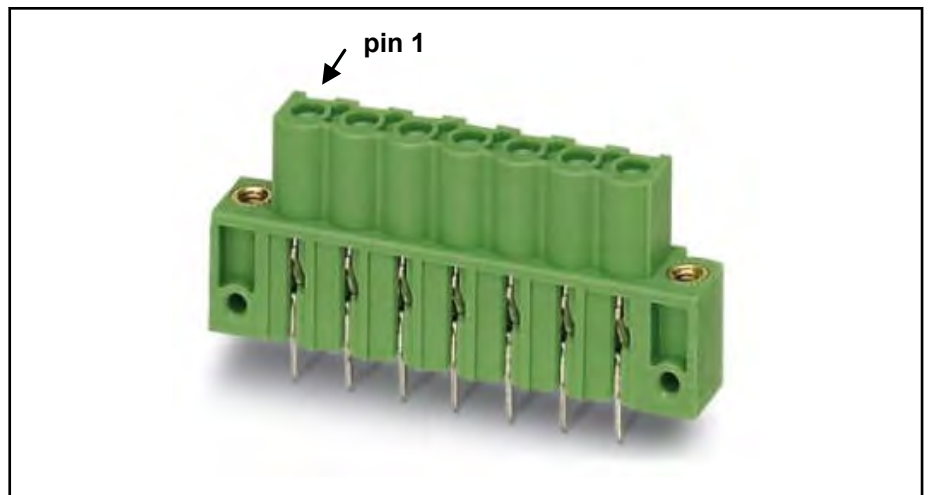


Fig. 10-6: Motor header (backplane) pinout

The connector pin assignment for the coils (motors) is given in [tab. 10-5 "Motor header pinout" on page 97](#).

The shield of the motor cables must be connected via the NY4910 Motor Cable Shield and Support bracket, see [chapter 14 "NY4910: Motor Cable Shield and Support" on page 139](#).

Pin	Pin name	Coil (motor)
1	HB1+	
2	HB1-	U - coil wire black "1"
3	HB2+	V - coil wire black "2"
4	HB2-	W - coil wire black "3"
5	HB3-	
6	DR_GND	
7	PE	Protective earth of motor.

Tab. 10-5: Motor header pinout

⚠ WARNING Voltage on the pins of the M header can be higher than 60V DC.

Do not touch the pins of the M connector.

Cable Characteristics

NY4074: LMS System Housing for 2 drive modules

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	depends on drive current and installed fuse in the drive power supply connection. See also chapter 29.10.4 "Drive Power Supply" on page 220.
Maximum cable length	15 m

Tab. 10-6: Motor cable specification

Connector data

IC 2,5/ 7-STF-5,08	minimum	maximum
Tightening torque	4,43 lbs*inch (0,5 Nm)	5,31 lbs*inch (0,6 Nm)
Wire	24 AWG (0,24 mm ²)	12 AWG (4,0 mm ²)

Tab. 10-7: Motor connector data

Motor supply characteristics

Characteristic	Coil (motor)
U _{out}	3x AC 0V ... 150V
I _{out}	0 ... 7A rms

Tab. 10-8: Motor supply characteristics

Keying of the Motor Headers and Plugs

To prevent wrong motor cable connection the motor headers can be keyed. It is the responsibility of the customer to put key fingers accordingly on the motor plugs. A key on the motor header implies no finger on the motor plug for that pin. See [chapter 19.3 "Keying Fingers for Drive Power and Motor Connectors"](#) on page 149 for more information.

Pin	M0.0	M0.1	M1.0	M1.1
1	no key	no key	key	no key
2	no key	key	no key	key
3	key	key	no key	no key
4	no key	no key	no key	no key
5	no key	no key	no key	no key
6	key	no key	key	key
7	no key	no key	no key	no key

Tab. 10-9: Example of motor header keying for all axes

10.3.4 LMS sensor connectors

Each drive slot has 5 LMS sensor inputs for the NY4980 Hall sensor module or the NY4981 MR sensor module.

NY4074: LMS System Housing for 2 drive modules

Connector type on the backplane: female, 8 pins M8.

The following LMS sensor connectors are available on the backplane.

- S0, S1, S2, S3, S4 : drive module slot 0 LMS sensor inputs
- S5, S6, S7, S8, S9 : drive module slot 1 LMS sensor inputs

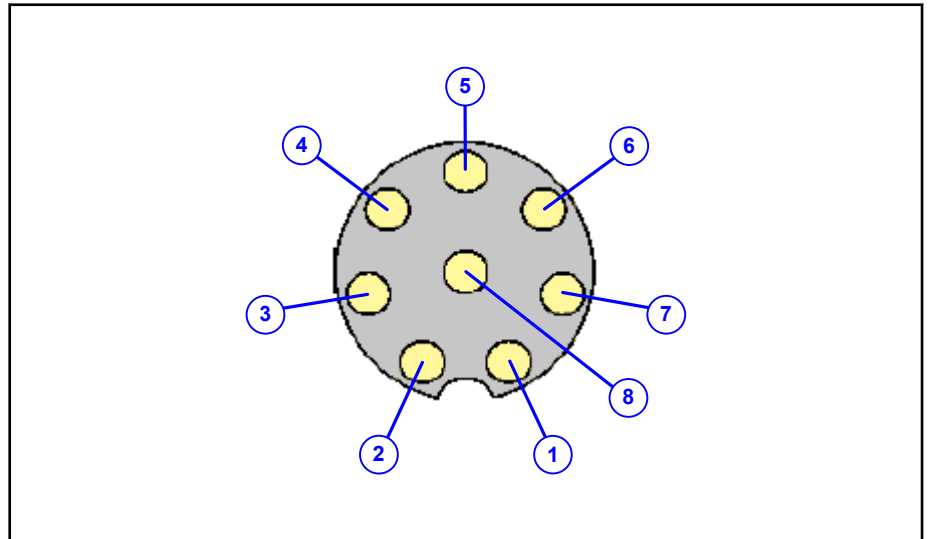


Fig. 10-7: LMS sensor input connector (backplane) pinout

The connector pin assignment is given in [tab. 10-10 "LMS sensor connection pinout" on page 99](#).

Pin	LMS sensor connections
1	sine +
2	sine -
3	cosine +
4	cosine -
5	+5V
6	GND
7	-5V
8	GND
housing	cable shielding

Tab. 10-10: LMS sensor connection pinout

Tightening torque of the M8 connector is 0.2 Nm.

Cable Characteristics

NY4074: LMS System Housing for 2 drive modules

Characteristic	Description
Type of cable	NY4951/x0 (where x is 0, 1, 2, 3, 4) See chapter 23 "NY4951: LMS sensor and shared sensor cables" on page 171
Maximum cable length	10 m

Tab. 10-11: Sensor connection cable specification

10.3.5 Shared sensor connector

The system housing has one shared sensor connection.

Connector type on the backplane: female, 8 pins M8.

The shared sensor connector is indicated by the text "L0".



The connector "L0" is internally connected to connector "S9" and is used to connect the sensor connected to "S9" also to the next system housing.

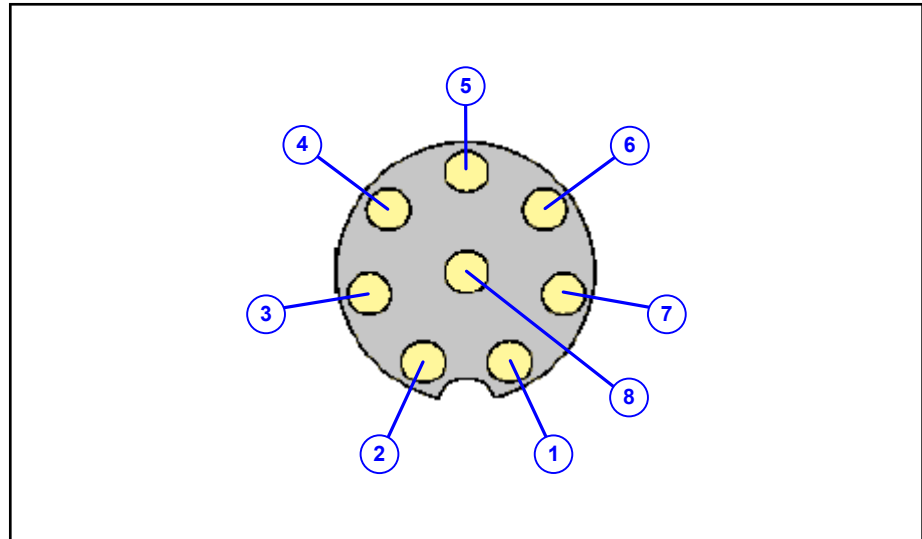


Fig. 10-8: Shared sensor connector (backplane) pinout

The connector pin assignment is given in [tab. 10-12 "Shared sensor connection pinout"](#) on page 100.

Pin	Shared sensor connections
1	peer output sine +
2	peer output sine -
3	peer output cosine +
4	peer output cosine -
5	not connected
6	peer out GND
7	not connected

NY4074: LMS System Housing for 2 drive modules

Pin	Shared sensor connections
8	peer out GND
housing	cable shielding

Tab. 10-12: Shared sensor connection pinout

Tightening torque of the M8 connector is 0.2 Nm.

Cable Characteristics

Characteristic	Description
Type of cable	NY4951/70 See chapter 23 "NY4951: LMS sensor and shared sensor cables" on page 171
Maximum cable length	10 m

Tab. 10-13: Shared sensor connection cable specification



If the distance between NY4074 system housings is too large for the NY4951/70 shared sensor cable, you can extend the length with a suitable LMS sensor extension cable, see [chapter 23.1 "LMS sensor extension cables"](#) on page 171.

10.3.6 Digital / Fast Digital I/O Connectors

The digital and fast digital I/O header (DIG/FDIGx) is available for each drive module.

Header type on the backplane: male, 25 pins sub-D.

The following digital I/O headers are available on the backplane.

- DIG/FDIG0 : drive module slot 0 digital and fast digital I/O header
- DIG/FDIG1 : drive module slot 1 digital and fast digital I/O header

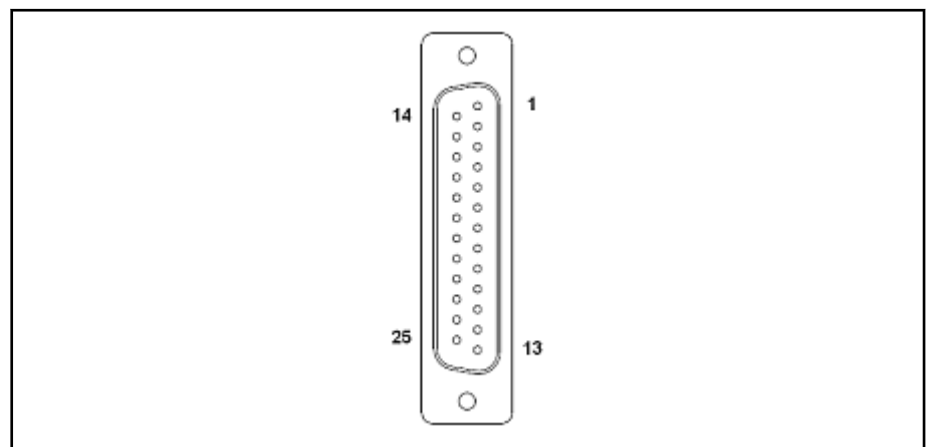


Fig. 10-9: Digital and fast digital I/O header (backplane) pinout

NY4074: LMS System Housing for 2 drive modules

The connector pin assignment is given in [tab. 10-14 "Digital and fast digital I/O header pinout"](#) on page 102.

Pin	Pin name	Function
1	DigIn0	Digital Input 0 in group 0.
2	DigIn1	Digital Input 1 in group 0.
3	DigIn2	Digital Input 2 in group 0.
4	DigIn3	Digital Input 3 in group 0.
5		Not connected.
6		Not connected.
7	FastIn0	Fast digital input 0.
8	FastIn1	Fast digital input 1.
9	GND_DIO	Ground for digital output and fast digital input,connected to power supply.
10	DigOut0	Digital Output.
11	DigOut1	Digital Output.
12	DigOut2	Digital Output.
13	DigOut3	Digital Output.
14	DigComm0	Common for digital Input group 0, may be ground or 24V.
15		Not connected.
16		Not connected.
17	FastOut0	Fast digital output 0.
18	FastOut1	Fast digital output 1.
19		Not connected.
20		Not connected.
21	GND_DIO	Ground for digital output and fast digital input,connected to power supply.
22	24V_DIO	24 Volt digital (fast) output supply.
23	24V_DIO	24 Volt digital (fast) output supply.
24	24V_DIO	24 Volt digital (fast) output supply.
25	24V_DIO	24 Volt digital (fast) output supply.

Tab. 10-14: Digital and fast digital I/O header pinout

NOTICE

The system housing has no provisions against wrong polarity connection of the 24V I/O power supply.

Observe the polarity of the power supply connections.

NY4074: LMS System Housing for 2 drive modules

- ☞ • Connect the shield of the cable to the metal housing of the sub-D plug.
- Each pin is rated for a load of 1 A. Connect pin # 22, 23, 24, and 25 to match the total load connected to the digital output pins.

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	AWG 24 / 0.24 mm ² (1A) Use cables with wires of correct rating
Maximum cable length	15 m

Tab. 10-15: Digital and Fast Digital I/O cable specification

10.3.7 PTC connector

The system housing has one connection for the PTC sensors of the coils.
 Header type on the backplane: male, 8 pins, Phoenix Contact, MCV 1,5/ 8-GF-3,5.

Mating plug on the cable: Phoenix Contact, MC 1,5/ 8-STF-3,5, order code 1847181. The cable plug is supplied with the system housing.

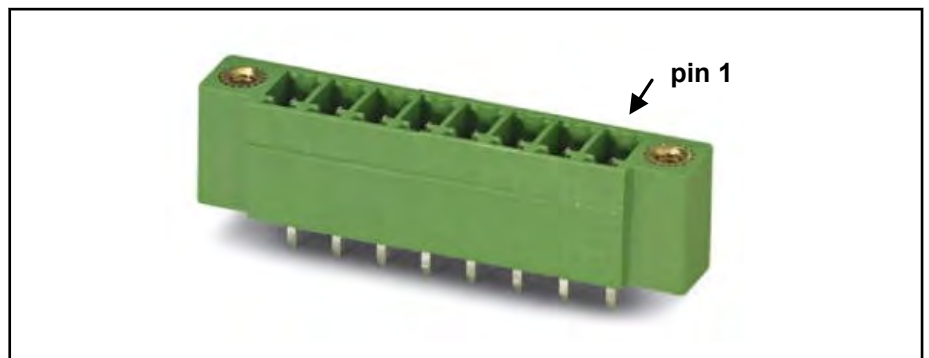


Fig. 10-10: PTC header (backplane) pinout

Pin	Pin name	Function	Connected to
1	MX-P3+	PTC input coil number 3+	DRV1 - DigIn7
2	MX-P3-	PTC input coil number 3-	DRV1 - DigIn7
3	MX-P2+	PTC input coil number 2+	DRV1 - DigIn6
4	MX-P2-	PTC input coil number 2-	DRV1 - DigIn6
5	MX-P1+	PTC input coil number 1+	DRV0 - DigIn7
6	MX-P1-	PTC input coil number 1-	DRV0 - DigIn7
7	MX-P0+	PTC input coil number 0+	DRV0 - DigIn6
8	MX-P0-	PTC input coil number 0-	DRV0 - DigIn6

Tab. 10-16: PTC header pinout

NY4074: LMS System Housing for 2 drive modules

Cable Characteristics

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	AWG 26 / 0.14 mm ²
Maximum cable length	15 m

Tab. 10-17: PTC cable specification

Connector data

MC 1,5/ 8-STF-3,5	minimum	maximum
Tightening torque	1,95 lbs*inch (0,22 Nm)	2,21 lbs*inch (0,25 Nm)
Wire	30 AWG (0,06 mm ²)	14 AWG (2,5 mm ²)

Tab. 10-18: PTC connector data

10.4 Field diagnostics

No diagnosis is available for the system housing.

The system housing does not contain any replaceable or wear parts. In case of failure, the entire system housing must be replaced.

10.5 System Housing power requirements

The NY4074 system housing requires additional power from the 24V System, because this system housing includes electronic circuits on the backplane.

System housing power supply	Voltage and current
Nominal voltage	24V DC \pm 5%
Maximum supply current	1.6 A
Typical supply current (no sensors, I/O, drive power connected)	0.5 A

Tab. 10-19: NY4074 power requirements

NY4079: LMS System Housing for 4 SERCOS axes

11 NY4079: LMS System Housing for 4 SERCOS axes

11.1 Product Identification

The NY4079 system housing has two slots, one slot for the MCU and one slot for the SERCOS III Master module. Part number is R911378505, ordering code is NYS04.1-ST-01-LMS-SERCOS-NY4079.

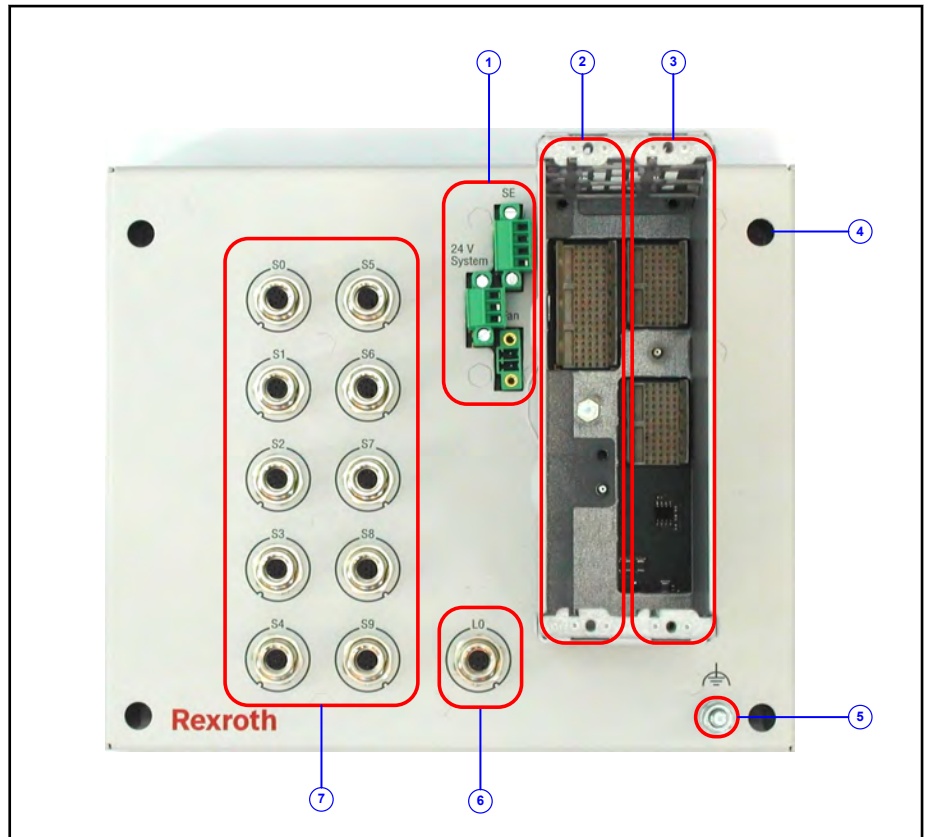


Fig. 11-1: NY4079 system housing

Identifier number	Description
1	24V System, SE and Fan connectors
2	Motion Control Unit slot
3	NY4150 SERCOS III Master module slot
4	Mounting screw opening (4)
5	Protective Earth post
6	Shared sensor connector
7	LMS sensor connector (10)

Tab. 11-1: NY4079 system housing identification legend

The Power Marking label at the right side of the module holder indicates the rating of the system housing and other information.

NY4079: LMS System Housing for 4 SERCOS axes

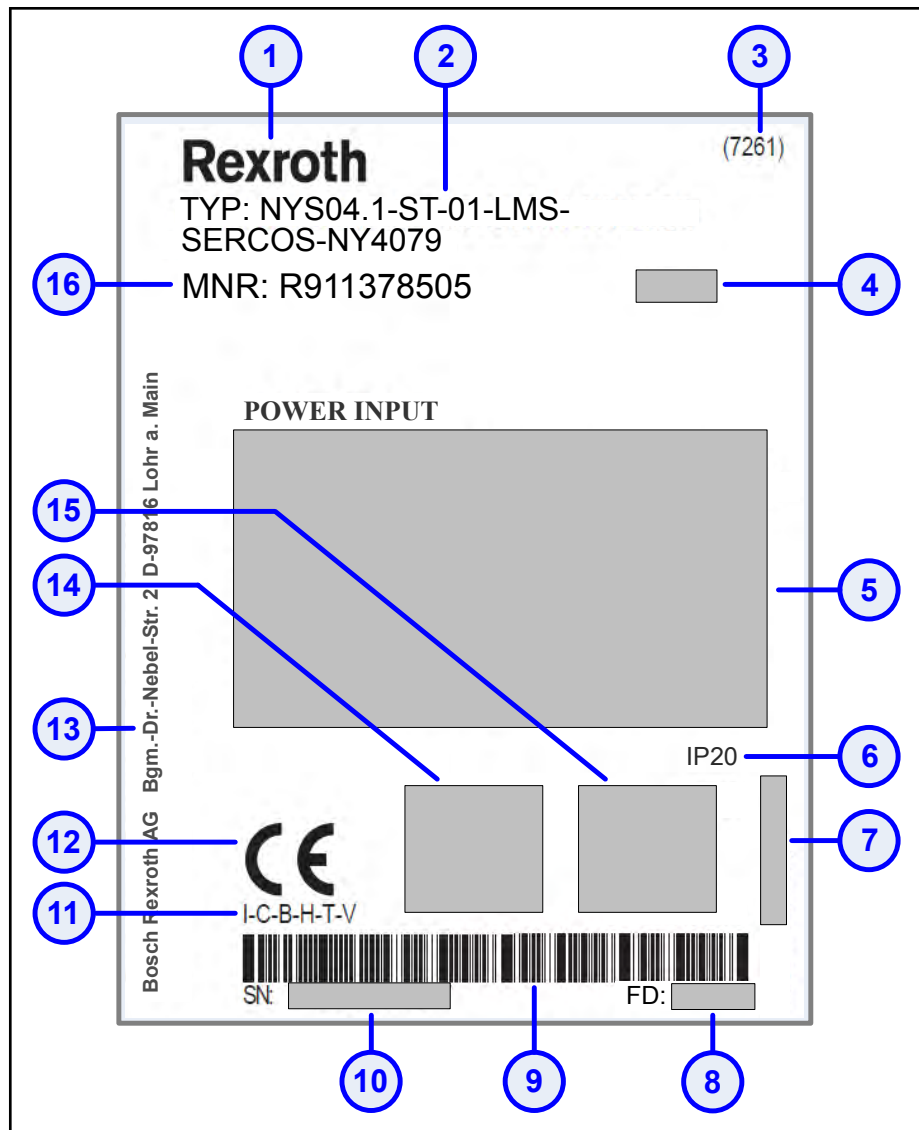


Fig. 11-2: Power Marking label on the module holder

Identifier number	Description
1	Logo type
2	Type code
3	Division number / plant number
4	Change index
5	Rated voltages and currents
6	Degrees of protection provided by enclosure (IP code)
7	Date of manufacture (yyWww)
8	Designation of origin
9	Rexroth bar code
10	Serial number

NY4079: LMS System Housing for 4 SERCOS axes

Identifier number	Description
11	Company address
12	Test marking
13	CE marking
14	UL marking
15	Consult documentation marking
16	Material number

Tab. 11-2: Power Marking legend

11.2 System Housing Dimensions

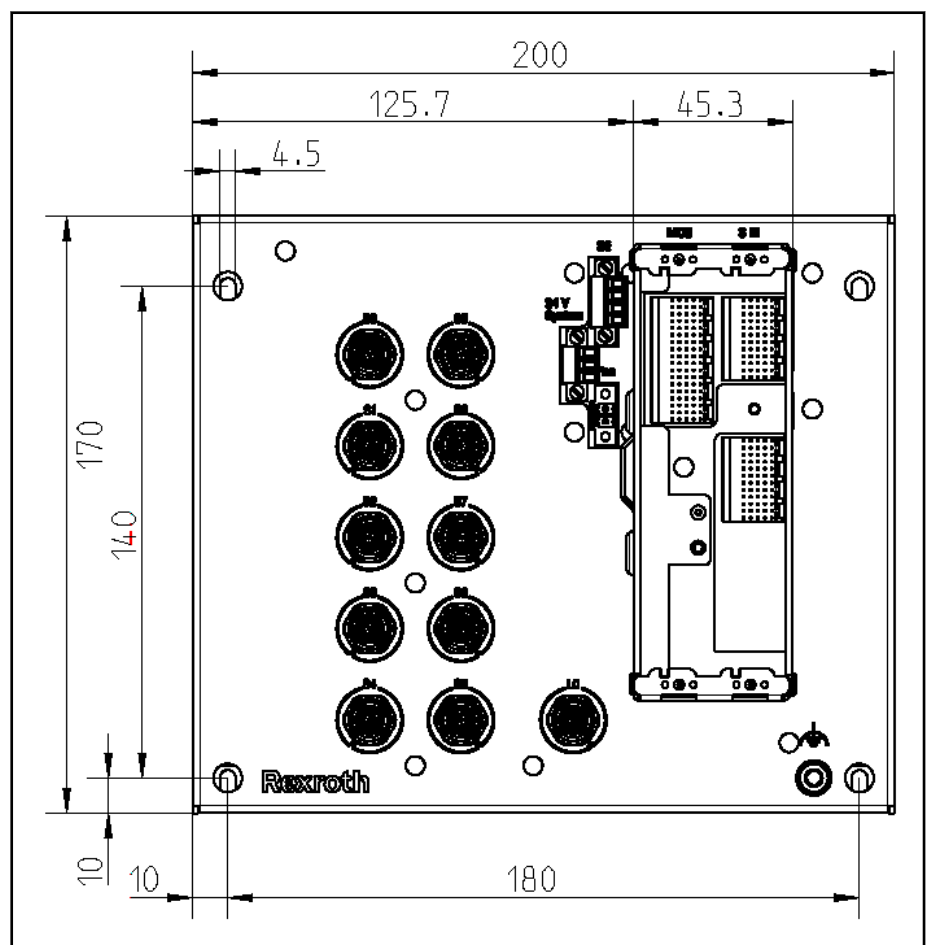


Fig. 11-3: NY4079 system housing front view dimensions

NY4079: LMS System Housing for 4 SERCOS axes

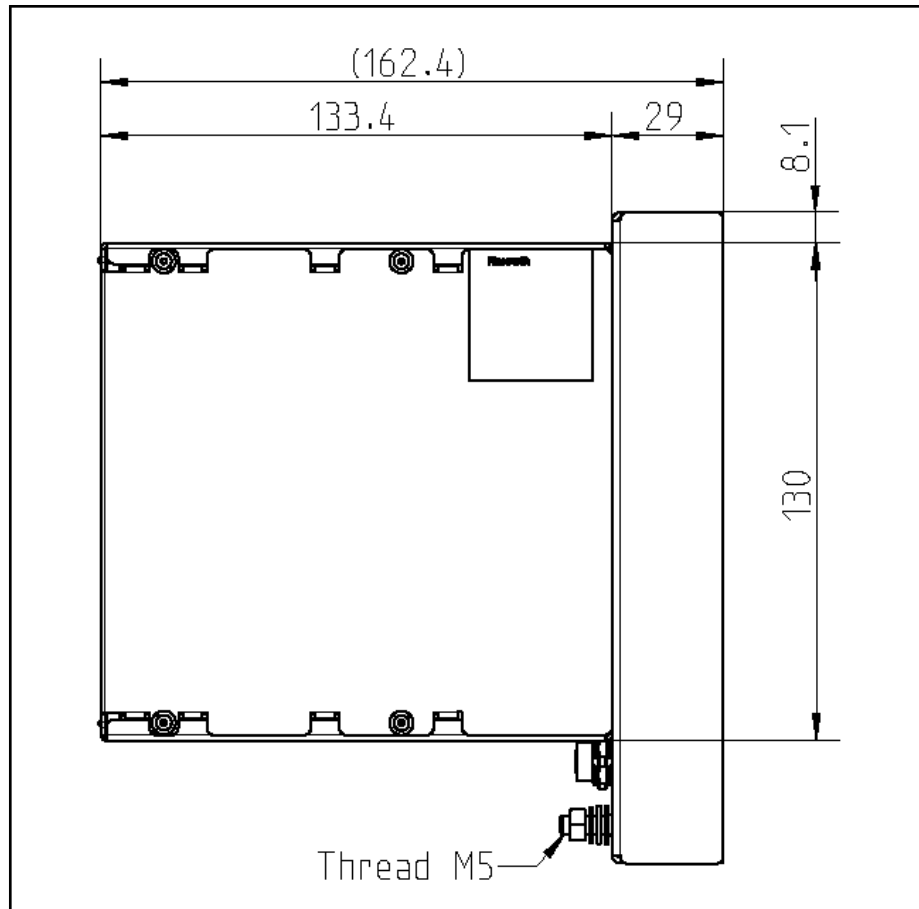


Fig. 11-4: NY4079 system housing side view dimensions

System housing type code	Width	Height	Depth	Weight
NYS04.1-ST-01-LMS-SERCOS-NY4079	200 mm	170 mm	162.4 mm	1280 gr

Tab. 11-3: NY4079 physical data

11.3 Connector overview

11.3.1 Introduction

This chapter gives an overview of all connections on the base plate of the system housing with links to the detailed information such as connector type, order code and pinout specification. In case of system housing specific connections all detailed information is given in the sub-chapters.

NY4079: LMS System Housing for 4 SERCOS axes

11.3.2 Common System Housing Connectors

Text marking on base plate	Purpose	Detailed information
24V System	The 24 Volt System supply header is used by the MCU module to generate <ul style="list-style-type: none"> the logic supply voltages for the MCU and SERCOS III Master module 	24V SYSTEM
SE	The Service Connection has two inputs. One input called "ServiceMode" is used to set the operation mode of the system to "service mode". The other input called "StopAxes" can be used to execute an as fast as possible stop of all axes connected to the system.	SERVICE
Fan	The Fan connector is a power supply header for the optional fan unit that can be installed underneath the module holder for forced cooling of the system.	FAN
PE	Protective earth connection	PE

Tab. 11-4: Connection overview

11.3.3 LMS sensor connectors

The NY4079 system housing has 10 LMS sensor inputs for the NY4980 Hall sensor module or the NY4981 MR sensor module.

Connector type on the backplane: female, 8 pins M8.

The LMS sensor connectors are identified by the text S0, S1, S2, S3, S4, S5, S6, S7, S8, S9.

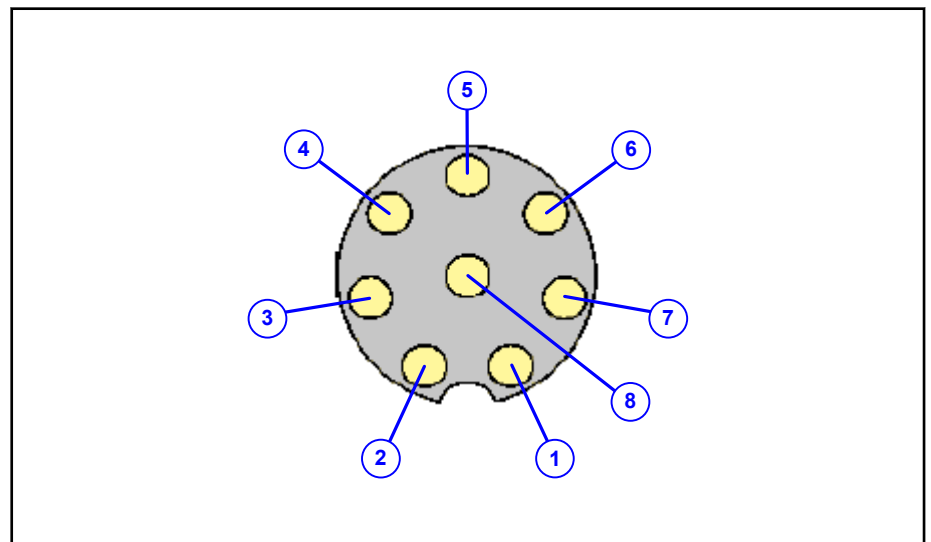


Fig. 11-5: LMS sensor input connector (backplane) pinout

The connector pin assignment is given in [tab. 11-5 "LMS sensor connection pinout"](#) on page 110.

NY4079: LMS System Housing for 4 SERCOS axes

Pin	LMS sensor connections
1	sine +
2	sine -
3	cosine +
4	cosine -
5	+5V
6	GND
7	-5V
8	GND
housing	cable shielding

Tab. 11-5: LMS sensor connection pinout

Tightening torque of the M8 connector is 0.2 Nm.

Cable Characteristics

Characteristic	Description
Type of cable	NY4951/x0 (where x is 0, 1, 2, 3, 4) See chapter 23 "NY4951: LMS sensor and shared sensor cables" on page 171
Maximum cable length	10 m

Tab. 11-6: Sensor connection cable specification

11.3.4 Shared sensor connector

The system housing has one shared sensor connection.

Connector type on the backplane: female, 8 pins M8.

The shared sensor connector is indicated by the text "L0".



The connector "L0" is internally connected to connector "S9" and is used to connect the sensor connected to "S9" also to the next system housing.

NY4079: LMS System Housing for 4 SERCOS axes

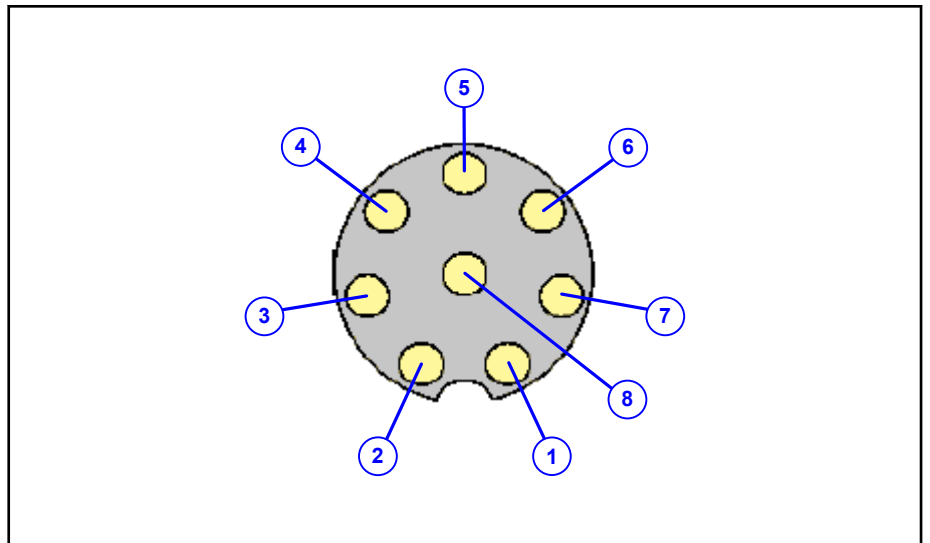


Fig. 11-6: Shared sensor connector (backplane) pinout

The connector pin assignment is given in tab. 11-7 "Shared sensor connection pinout" on page 111.

Pin	Shared sensor connections
1	peer output sine +
2	peer output sine -
3	peer output cosine +
4	peer output cosine -
5	not connected
6	peer out GND
7	not connected
8	peer out GND
housing	cable shielding

Tab. 11-7: Shared sensor connection pinout

Tightening torque of the M8 connector is 0.2 Nm.

Cable Characteristics

Characteristic	Description
Type of cable	NY4951/70 See chapter 23 "NY4951: LMS sensor and shared sensor cables" on page 171
Maximum cable length	10 m

Tab. 11-8: Shared sensor connection cable specification

NY4079: LMS System Housing for 4 SERCOS axes



If the distance between NY4074 system housings is too large for the NY4951/70 shared sensor cable, you can extend the length with a suitable LMS sensor extension cable, see [chapter 23.1 "LMS sensor extension cables"](#) on page 171.

11.4 Field diagnostics

No diagnosis is available for the system housing.

The system housing does not contain any replaceable or wear parts. In case of failure, the entire system housing must be replaced.

11.5 System Housing power requirements

The NY4079 system housing requires additional power from the 24V System, because this system housing includes electronic circuits on the backplane.

System housing power supply	Voltage and current
Nominal voltage	24V DC \pm 5%
Maximum supply current	1.5 A
Typical supply current (no sensors connected)	0.4 A

Tab. 11-9: NY4079 power requirements

12 Detailed Connection Information of Common Connectors

12.1 Introduction

This chapter specifies the connection pins of the connectors common on the base plate of the system housings. See the NYCe 4000 Hardware System Manual for circuit specific details, such as encoder input circuits, digital I/O input and output circuits, and specifications of maximum voltage and current, etc.

12.2 24V System – System Power Connection

The 24V System supply header is used by the MCU module to generate

- logic power supply voltages for the MCU module and drive modules installed in the system housing
- power supply voltage for all encoders connected to drive modules installed in the system housing

Header type on the backplane: male, 3 pins, Phoenix Contact, MCV 1,5/ 3-GF-3,5.

Mating plug on the cable: Phoenix Contact, MC 1,5/ 3-STF-3,5, order code 1847068. The cable plug is supplied with the system housing.

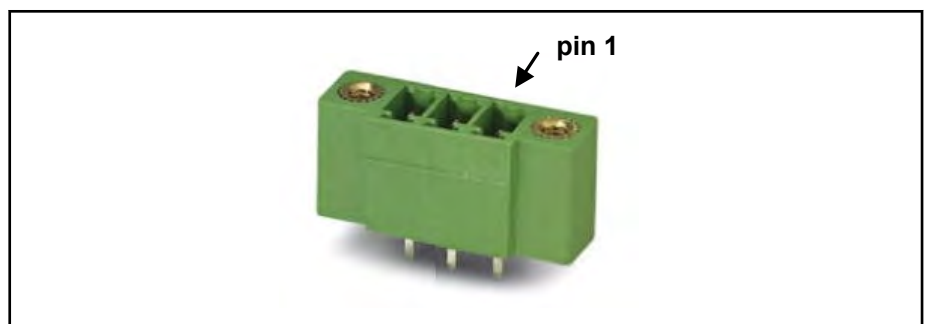


Fig. 12-1: 24V System header (backplane) pinout

The connector pin assignment is given in [tab. 12-1 "24V System header pinout" on page 113](#).

Pin	Pin name	Function
1	24V_GND	24V common.
2	+24V	System power (24 Volt DC).
3	SHIELD	Cable shield.

Tab. 12-1: 24V System header pinout

NOTICE

The system housing has no provisions against wrong polarity connection of the 24V System power supply.

Observe the polarity of the power supply connections.

Detailed Connection Information of Common Connectors



24V_GND must be connected to the same potential as SHIELD (safety ground), not at the system housing side of the cable, but at the power supply.

The connection includes an auto-resettable fuse on the system backplane, see [fig. 12-2 "24V System connection diagram with auto-resettable fuse" on page 114](#).

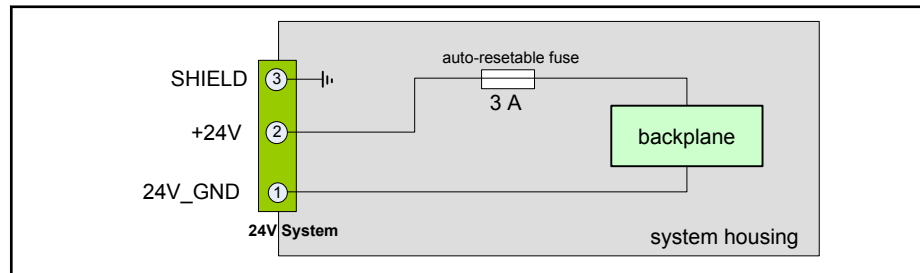


Fig. 12-2: 24V System connection diagram with auto-resettable fuse

24V power supply characteristics

Characteristic	Description
Input voltage	+24 V \pm 5%
Current	<ul style="list-style-type: none"> Minimum: supply required power for all components Maximum current 3A (inrush 6A for 10 ms)

Tab. 12-2: System power supply

When you calculate the system power supply requirements of the 24V power supply, you must take into account that the external power supply must be able to deliver this power at a voltage lower than the nominal voltage of 24V. The minimum level at which the DC-DC converter on the MCU module switches on is 16.2V. This means that the external power supply should be able to deliver at least 1.5 times the nominal current at 24V required for the node without encoders. The chosen external system power supply must be able to fulfill this current requirement, and must support inrush currents of 3A (6A/ms) to prevent startup problems.

Cable Characteristics

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	AWG 18 / 1.0 mm ² (4A) minimum
Maximum cable length	15 m

Tab. 12-3: 24V System cable specification

Connector data

Detailed Connection Information of Common Connectors

MC 1,5/ 3-STF-3,5	minimum	maximum
Tightening torque	1,95 lbs*inch (0,22 Nm)	2,21 lbs*inch (0,25 Nm)
Wire	30 AWG (0,06 mm ²)	14 AWG (2,5 mm ²)

Tab. 12-4: 24V System connector data

12.3 SE – Service Mode Input Connection

Header type on the backplane: male, 4 pins, Phoenix Contact, MCV 1,5/ 4-GF-3,5.

Mating plug on the cable: Phoenix Contact, MC 1,5/ 4-STF-3,5, order code 1847071. The cable plug is supplied with the system housing.

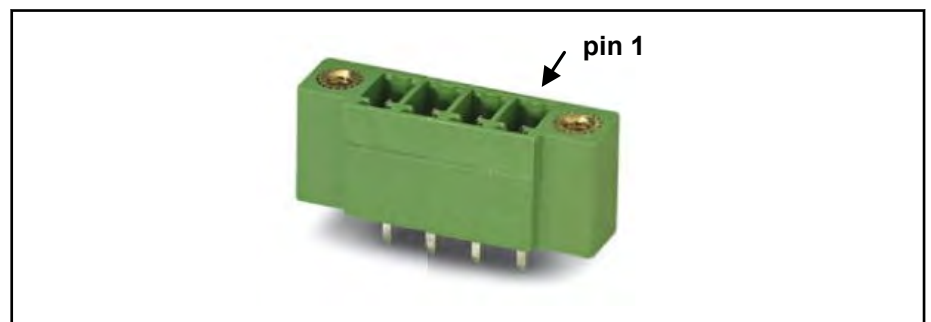


Fig. 12-3: SE header (backplane) pinout

The connector pin assignment is given in [tab. 12-5 "SE header pinout"](#) on [page 115](#).

Pin	Pin name	Function
1	SHIELD	Cable shield.
2	INP_COMMON	Input common.
3	INP_Service_Mode	24 Volt input service mode to MCU.
4	INP_Stop_Axes	24 Volt input stop axes to MCU.

Tab. 12-5: SE header pinout

Input Characteristics

Characteristic	Description
Permitted input voltage	-30V ... 30V
Input high level	15V ... 30V -15V ... -30V
Input low level	-5V ... 5V
Input current @ 24V	Nominal 3.5 mA

Tab. 12-6: Input characteristics

Cable Characteristics

Detailed Connection Information of Common Connectors

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	AWG 26 / 0.14 mm ² minimum
Maximum cable length	15 m

Tab. 12-7: SE cable specification

Connector data

MC 1,5/ 4-STF-3,5	minimum	maximum
Tightening torque	1,95 lbs*inch (0,22 Nm)	2,21 lbs*inch (0,25 Nm)
Wire	30 AWG (0,06 mm ²)	14 AWG (2,5 mm ²)

Tab. 12-8: SE connector data

12.4 Fan – Fan Unit Connection

The Fan header is available as power supply connection for the optional fan unit. The optional fan unit is used for forced cooling of the modules in the module holder.

The connection includes an auto-resetable fuse, see [fig. 12-4 "Fan unit connection" on page 116](#).

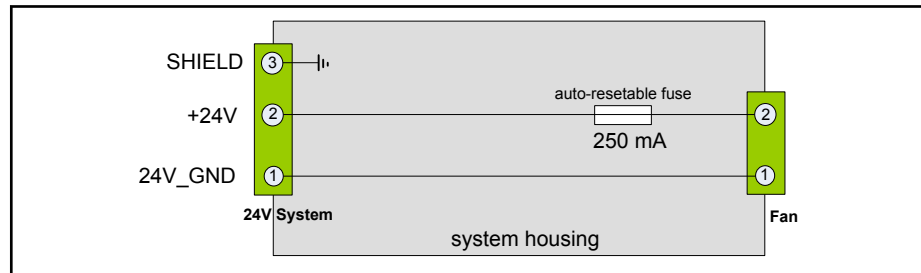


Fig. 12-4: Fan unit connection



The Fan header is only for connection of the fan unit. No other devices may be connected to the Fan header.

The following fan units are available.

Component name	Order number	Short name	Used on
NYA04.1-FAN-1DRV-NY4922/00	R911328062	NY4922/00	NY4013 NY4079
NYA04.1-FAN-2DRV-NY4922/10	R911325083	NY4922/10	NY4023 NY4074
NYA04.1-FAN-3DRV-NY4922/20	R911172220	NY4922/20	NY4033 NY4063

Detailed Connection Information of Common Connectors

Component name	Order number	Short name	Used on
NYA04.1-FAN-4DRV-NY4922/30	R911328063	NY4922/30	NY4043
NYA04.1-FAN-5DRV-NY4922/50	R911325084	NY4922/50	NY4053

Tab. 12-9: NYCe 4000 accessories: fan units

12.5 DP – NY4120 / NY4125 / NY4140 Drive Power Connections

The DP drive power headers are used to connect the drive power supply to NY4120, NY4125 and NY4140 drive modules installed in the module holder. For each drive slot a separate drive power supply header is available.

Header type on the backplane: male, 5 pins, Phoenix Contact, MSTBV 2,5/ 5-GF-5,08.

Mating plug on the cable: Phoenix Contact, MSTB 2,5/ 5-STF-5,08, order code 1778014. The cable plugs are supplied with the system housing.

The following DP drive power headers are available on the backplane (depending on the type of system housing).

- DP 0 : drive power supply header for drive module slot 0
- DP 0 NY4125 : drive power supply header for the NY4125 drive module
- DP 1 : drive power supply header for drive module slot 1
- DP 2 : drive power supply header for drive module slot 2
- DP 3 : drive power supply header for drive module slot 3
- DP 4 : drive power supply header for drive module slot 4

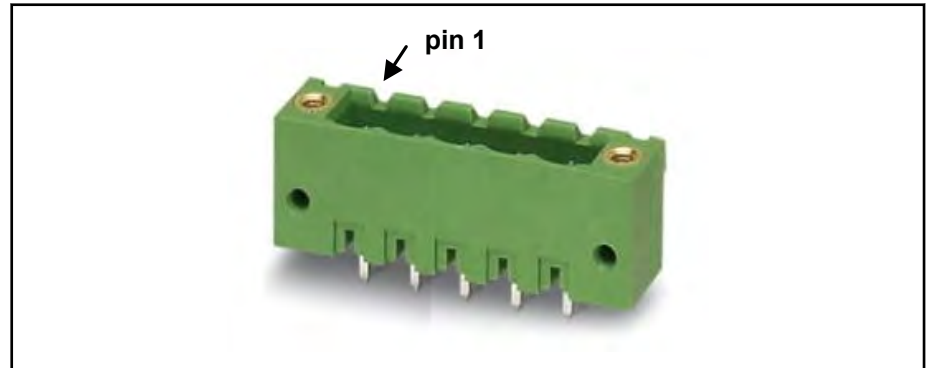


Fig. 12-5: DP drive power supply header (backplane) pinout

The connector pin assignment is given in [tab. 12-10 "DP drive power supply header pinout"](#) on page 117.



Note that the orientation of the headers at opposite sides of the module holder is 180° rotated.

Pin	Pin name	Function
1	DP_PWR+	+ Drive power supply module.
2	DP_PWR+	+ Drive power supply module.
3	SHIELD	Cable shield.

Detailed Connection Information of Common Connectors

Pin	Pin name	Function
4	DP_GND	Ground drive power supply module.
5	DP_GND	Ground drive power supply module.

Tab. 12-10: DP drive power supply header pinout

⚠ WARNING

Voltage on the pins of the DP header can be higher than 60V DC. When the connector is unplugged a high voltage can remain present for 5 minutes after disconnection. If the drive module is not installed in the slot which has an accompanying capacitor installed, you must wait 30 minutes.

Do not touch the pins of the DP connector.

NOTICE

The system housing has no provisions against wrong polarity connection of the DP drive power supply.

Observe the polarity of the drive power supply connections.



Shielding of the cable must be connected at the system housing side to the SHIELD pin of the connector. It is recommended to connect the shielding at the power supply unit side to the chassis of the power supply unit, not to the PE connection.

Drive power supply characteristics

Characteristic	Maximum rating per DP header
Drive power voltage and input current for NY4120 and NY4120/10	DC +15 .. +75V 12,0A (forced cooling) 6,0A (convection cooling)
Drive power voltage and input current for NY4140	DC +48 .. +150V 6,0A (forced cooling) 2,5A (convection cooling)

Tab. 12-11: DP drive power input characteristics per DP header

Cable Characteristics

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	Depends on drive current and installed fuse
Maximum cable length	15 m

Tab. 12-12: DP Drive power cable specification

Detailed Connection Information of Common Connectors

Connector data

MSTB 2,5/ 5-STF-5,08	minimum	maximum
Tightening torque	4,43 lbs*inch (0,5 Nm)	5,31 lbs*inch (0,6 Nm)
Wire	26 AWG (0,14 mm ²)	12 AWG (4,0 mm ²)

Tab. 12-13: DP connector data



As you can see in [tab. 12-10 "DP drive power supply header pinout"](#) on page 117, there are two pins for DP_PWR+ and 2 pins for DP_GND. If the total current is higher than the current supported by one pin, you must connect wires of sufficient gauge to the other drive power connection pins. These wires must be connected directly to the drive power supply or connection blocks, if possible. See [fig. 12-6 "Four examples of correct DP drive power connections"](#) on page 119.

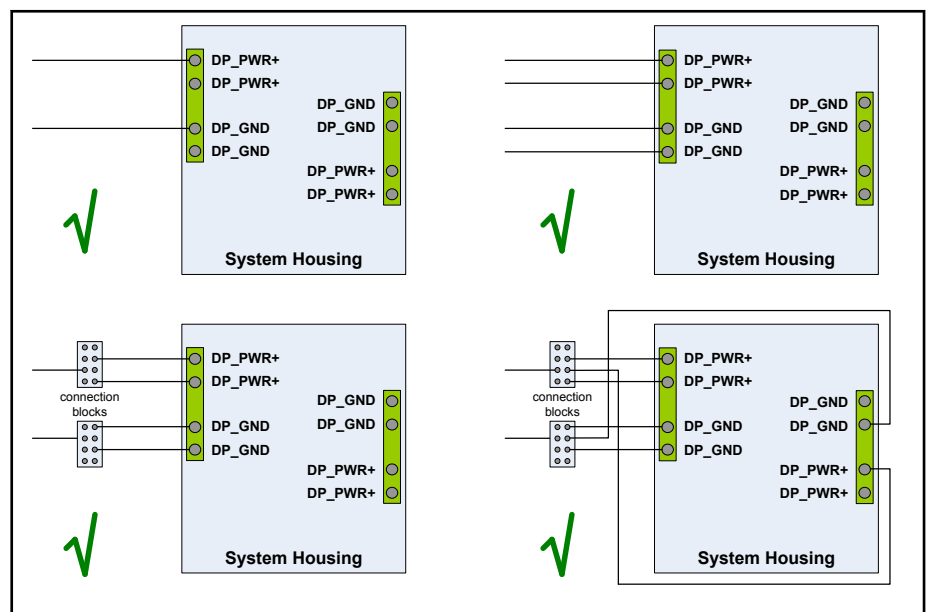


Fig. 12-6: Four examples of correct DP drive power connections



- It is not recommended to connect the power supply wires from a DP header on one system housing to a DP header on another system housing or from DP header to DP header on the same system housing, due to current rating of the pins or wire diameter.
- It is not recommended to use the second set of drive power supply pins (DP_PWR+ / DP_GND) as power supply connection to a DP header on another system housing, due to current rating.

See [fig. 12-7 "Four examples of not recommended DP drive power connections"](#) on page 120.

Detailed Connection Information of Common Connectors

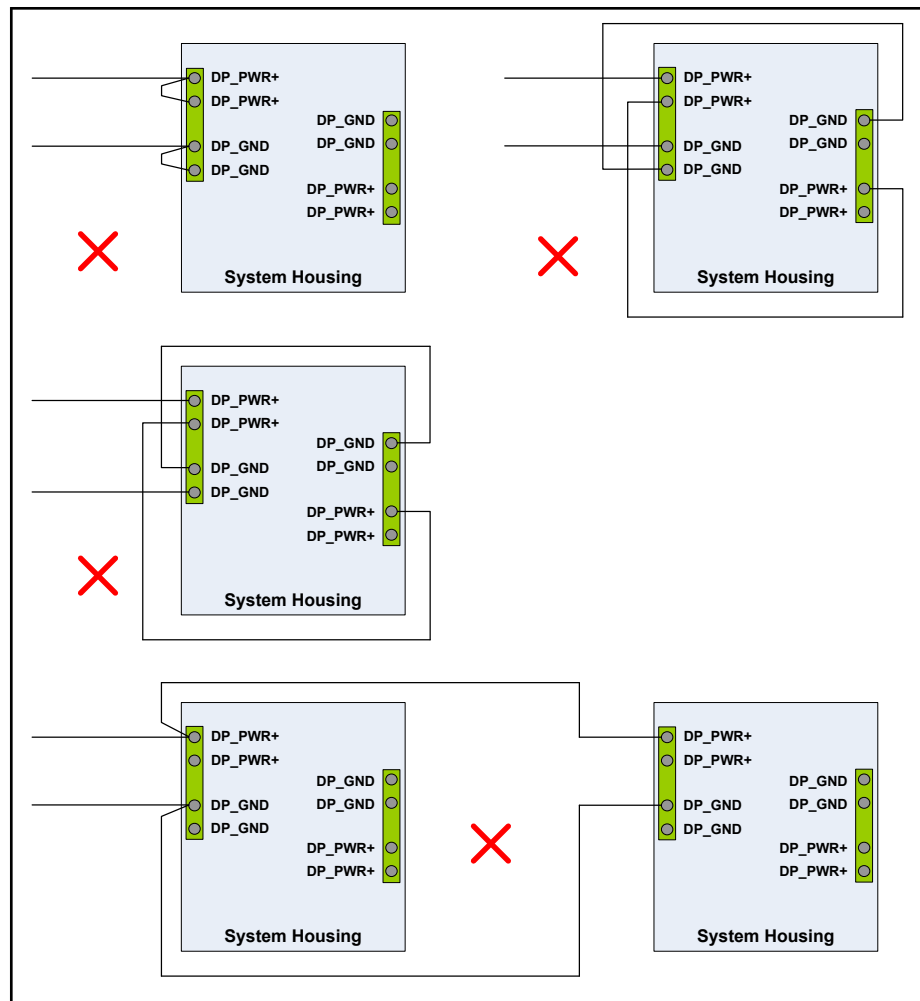


Fig. 12-7: Four examples of not recommended DP drive power connections

12.6 DP NY4130 – NY4130 Drive Power Connections

The DP NY4130 drive power supply headers are used to connect the drive power supply to NY4130 drive modules installed in the module holder.

Header type on the backplane: male, 8 pins, Phoenix Contact, MCV 1,5/ 8-GF-3,5.

Mating plug on the cable: Phoenix Contact, MC 1,5/ 8-STF-3,5, order code 1847181. The cable plugs are supplied with the system housing.

The following drive power headers are available on the backplane (depending on the type of system housing).

- DP NY4130 0 : drive power supply header for drive slot 0
- DP NY4130 0/1 : drive power supply header for drive slot 0 and 1
- DP NY4130 2 : drive power supply header for drive slot 2
- DP NY4130 2/3 : drive power supply header for drive slot 2 and 3
- DP NY4130 3/4 : drive power supply header for drive slot 3 and 4

Detailed Connection Information of Common Connectors

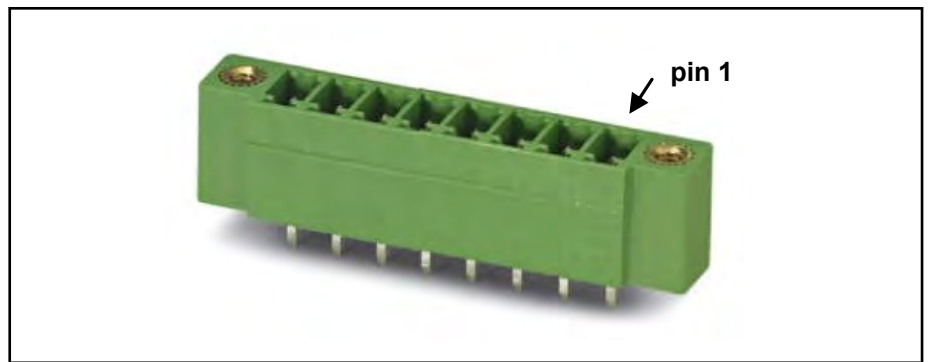


Fig. 12-8: DP NY4130 drive power supply header (backplane) pinout

The connector pin assignment is given in [tab. 12-14 "DP NY4130 drive power supply header pinout" on page 121](#).



Note that the orientation of the headers at opposite sides of the module holder is 180° rotated.

Pin	Pin name	Function
1	DRVPW+L0	+ Drive power supply for first drive module.
2	DRVPW-L0	- Drive power supply for first drive module.
3	DR_GND	Ground Drive power supply for first drive module.
4	SHIELD	Cable shield.
5	SHIELD	Cable shield.
6	DR_GND	Ground Drive power supply for second drive module.
7	DRVPW-L1	- Drive power supply module for second drive module.
8	DRVPW+L1	+ Drive power supply module for second drive module.

Tab. 12-14: DP NY4130 drive power supply header pinout

NOTICE

The system housing has no provisions against wrong polarity connection of the DP NY4130 drive power supply.

Observe the polarity of the drive power supply connections.



Shielding of the cable must be connected at the system housing side to the SHIELD pin of the connector. It is recommended to connect the shielding at the power supply unit side to the chassis of the power supply unit, not to the PE connection.

Drive power supply characteristics

Detailed Connection Information of Common Connectors

Characteristic	Maximum rating per DP NY4130 header
Drive power voltage and input current	+26V / -26V 1,0A (forced cooling) 0,5A (convection cooling)
	+15V / -15V 1,7A (forced cooling) 1,0A (convection cooling)

Tab. 12-15: DP NY4130 drive power input characteristics per DP NY4130 header

Cable Characteristics

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	depends on drive current and installed fuse
Maximum cable length	15 m

Tab. 12-16: DP NY4130 Drive power cable specification

Connector data

MC 1,5/ 8-STF-3,5	minimum	maximum
Tightening torque	1,95 lbs*inch (0,22 Nm)	2,21 lbs*inch (0,25 Nm)
Wire	30 AWG (0,06 mm ²)	14 AWG (2,5 mm ²)

Tab. 12-17: DP NY4130 connector data



As you can see in [tab. 12-14 "DP NY4130 drive power supply header pinout"](#) on [page 121](#), there are two sets of pins for drive power connection on the header, DRV PW+L0 / DRV PW-L0 / DR_GND for axis0 and DRV PW+L1 / DRV PW-L1 / DR_GND for axis1. You must use wires of sufficient gauge directly to the drive power supply or connection blocks, if possible. See [fig. 12-9 "Two examples of correct DP NY4130 drive power connections"](#) on [page 122](#).

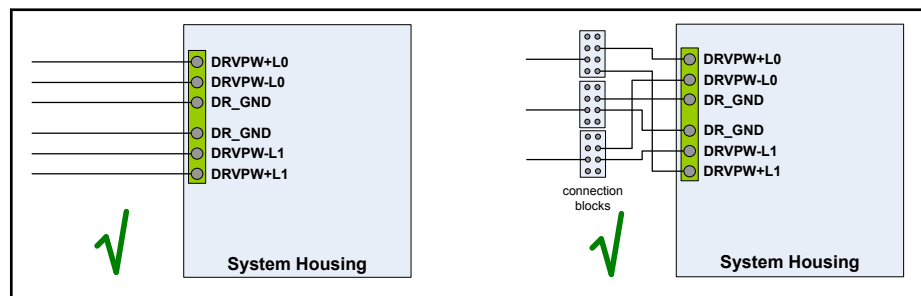


Fig. 12-9: Two examples of correct DP NY4130 drive power connections

Detailed Connection Information of Common Connectors



It is not recommended to connect the power supply wires from a DP NY4130 header on one system housing to a DP NY4130 header on another system housing or from DP NY4130 header to DP NY4130 header on the same system housing, due to the wire diameter. See [fig. 12-10 "Examples of not recommended DP NY4130 drive power connections"](#) on page 123.

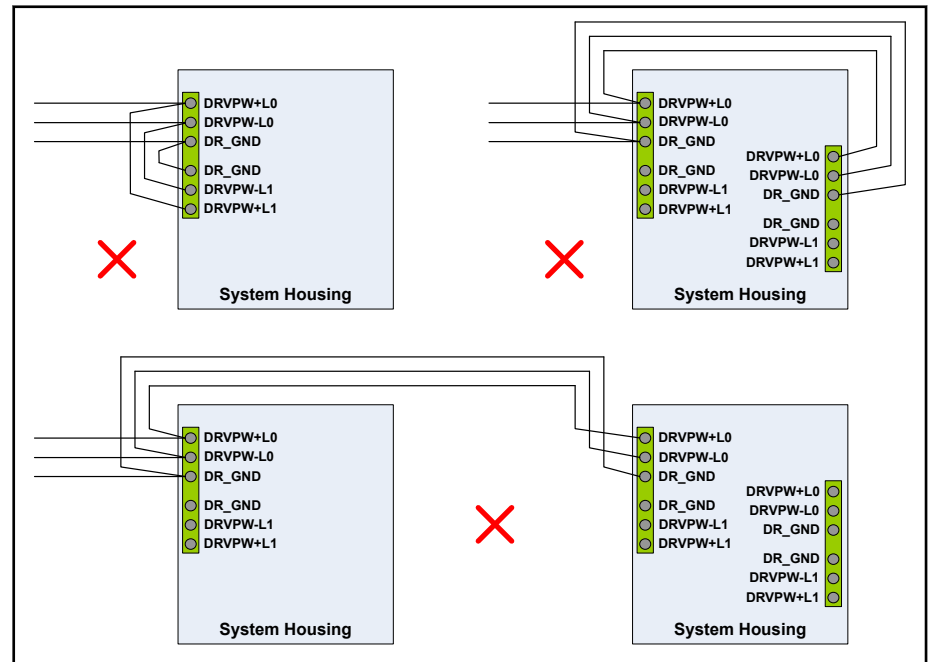


Fig. 12-10: Examples of not recommended DP NY4130 drive power connections

12.7 CAP – Capacitor Connections

The CAP header is available as connection for the optional capacitor kit. The following capacitor headers are available on the backplane (depending on the type of system housing).

- CAP0 : capacitor header for Drive Power 0 connection
- CAP1 : capacitor header for Drive Power 1 connection
- CAP2 : capacitor header for Drive Power 2 connection
- CAP3 : capacitor header for Drive Power 3 connection
- CAP4 : capacitor header for Drive Power 4 connection

The following capacitor kits are available.

Component name	Order number	Short name
NYA04.1-CAP-100V-NY4921	R911325079	NY4921
NYA04.1-CAP-200V-NY4921/10	R911325082	NY4921/10

Tab. 12-18: NYCe 4000 accessories: capacitor kits

Detailed Connection Information of Common Connectors

⚠ WARNING

Voltage on the pins of the CAP header can be higher than 60V DC.

Do not touch the pins of the CAP header.

NOTICE

Maximum drive power voltage for the installed drive module must be lower than the working voltage of the installed capacitor.

Observe the working voltage of the capacitor.

NOTICE

The system housing has no provisions against wrong polarity connection of the capacitor.

Observe the correct polarity of the connection of the DP drive power header.

12.8 M – Motor Connections

Each drive slot has two motor headers, one header for each axis.

Header type on the backplane: female, 7 pins, Phoenix Contact, ICV 2,5/ 7-GF-5,08.

Mating plug on the cable: Phoenix Contact, IC 2,5/ 7-STF-5,08, order code 1825365. The cable plugs are supplied with the system housing.

The following motor headers are available on the backplane (depending on the type of system housing).

- M0.0 and M0.1 : drive module slot 0 motor 0 and motor 1 header
- M1.0 and M1.1 : drive module slot 1 motor 0 and motor 1 header
- M2.0 and M2.1 : drive module slot 2 motor 0 and motor 1 header
- M3.0 and M3.1 : drive module slot 3 motor 0 and motor 1 header
- M4.0 and M4.1 : drive module slot 4 motor 0 and motor 1 header

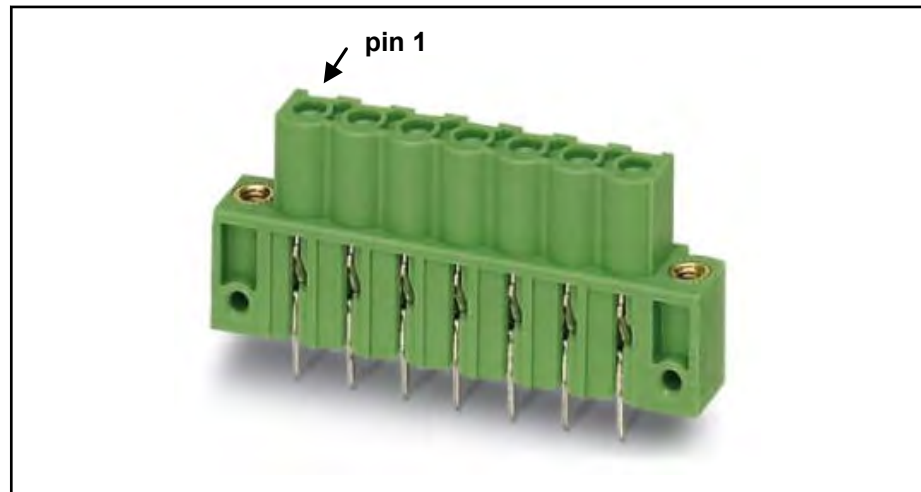


Fig. 12-11: Motor header (backplane) pinout



Motor connection to an NY4140 drive module differs from the motor connection to an NY4120 and NY4130 drive module.

Detailed Connection Information of Common Connectors

The connector pin assignment for motor 0 of the NY4120 and NY4130, and the high voltage motor of the NY4140 is given in [tab. 12-19 "Motor Mx.0 \(NY4120, NY4130, and NY4140\) header pinout" on page 125.](#)

The connector pin assignment for motor 1 of the NY4120 and NY4130 is given in [tab. 12-20 "Motor Mx.1 \(NY4120 and NY4130\) header pinout" on page 125.](#)

The shield of the motor cables must be connected via the NY4910 Motor Cable Shield and Support bracket, see [chapter 14 "NY4910: Motor Cable Shield and Support" on page 139.](#)

Pin	Pin name	Stepper motor NY4120	BLAC / BLDC motor NY4120	DC motor NY4120 NY4130	BLAC / BLDC / DC motor NY4140
1	HB1+	A+		+V _{DCmotor}	
2	HB1-	A-	U	-V _{DCmotor}	U
3	HB2+	B+	V		
4	HB2-	B-	W		V / +V _{DCmotor}
5	HB3-				W / -V _{DCmotor}
6	DR_GND			Used for unbalanced motor (only on NY4130).	
7	PE	Protective earth of motor.			

Tab. 12-19: Motor Mx.0 (NY4120, NY4130, and NY4140) header pinout

Pin	Pin name	stepper motor NY4120	BLAC / BLDC motor NY4120	DC motor NY4120 NY4130
1	HB3+	A+		+V _{DCmotor}
2	HB3-	A-	U	-V _{DCmotor}
3	HB4+	B+	V	
4	HB4-	B-	W	
5		Not used		
6	DR_GND			Used for unbalanced motor (only on NY4130).
7	PE	Protective earth of motor.		

Note: This header is not used in combination with an NY4140.

Tab. 12-20: Motor Mx.1 (NY4120 and NY4130) header pinout

Detailed Connection Information of Common Connectors

⚠ WARNING

Voltage on the pins of the M header can be higher than 60V DC.

Do not touch the pins of the M connector.

Cable Characteristics

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	depends on drive current and installed fuse in the drive power supply connection. See also chapter 29.10.4 "Drive Power Supply" on page 220.
Maximum cable length	15 m

Tab. 12-21: Motor cable specification

Connector data

IC 2,5/ 7-STF-5,08	minimum	maximum
Tightening torque	4,43 lbs*inch (0,5 Nm)	5,31 lbs*inch (0,6 Nm)
Wire	24 AWG (0,24 mm ²)	12 AWG (4,0 mm ²)

Tab. 12-22: Motor connector data

Motor supply characteristics

Characteristic	BLAC / BLDC	Stepper	DC
U _{out}	3x AC 0V ... 150V	2x 0V ... 75V	1x 0V ... 150V
I _{out}	0 ... 7A rms	0 ... 7A rms	0 ... 7A rms

Tab. 12-23: Motor supply characteristics

Keying of the Motor Headers and Plugs

To prevent wrong motor cable connection the motor headers can be keyed. It is the responsibility of the customer to put key fingers accordingly on the motor plugs. A key on the motor header implies no finger on the motor plug for that pin. See [chapter 19.3 "Keying Fingers for Drive Power and Motor Connectors"](#) on page 149 for more information.

Pin	M0.0	M0.1	M1.0	M1.1	M2.0	M2.1	M3.0	M3.1	M4.0	M4.1
1	no key	no key	key	no key	key	no key	key	no key	no key	no key
2	no key	key	no key	key	no key	key	no key	key	no key	no key
3	key	key	no key	no key	no key	no key	no key	no key	key	key

Detailed Connection Information of Common Connectors

Pin	M0.0	M0.1	M1.0	M1.1	M2.0	M2.1	M3.0	M3.1	M4.0	M4.1
4	no key	no key	no key	no key	no key	no key	key	key	no key	key
5	no key	no key	no key	no key	key	key	no key	no key	key	no key
6	key	no key	key	key	no key	no key	no key	no key	no key	no key
7	no key	no key	no key	no key	no key	no key	no key	no key	no key	no key

Tab. 12-24: Example of motor header keying for all axes

12.9 E – Encoder Connections

Each motor has its own encoder header.

Header type on the backplane: female, 25 pins sub-D, with 4-40 UNC nut.

The following encoder headers are available on the backplane (depending on the type of system housing).

- E0.0 and E0.1 : drive module slot 0 encoder 0 and encoder 1 header
- E1.0 and E1.1 : drive module slot 1 encoder 0 and encoder 1 header
- E2.0 and E2.1 : drive module slot 2 encoder 0 and encoder 1 header
- E3.0 and E3.1 : drive module slot 3 encoder 0 and encoder 1 header
- E4.0 and E4.1 : drive module slot 4 encoder 0 and encoder 1 header

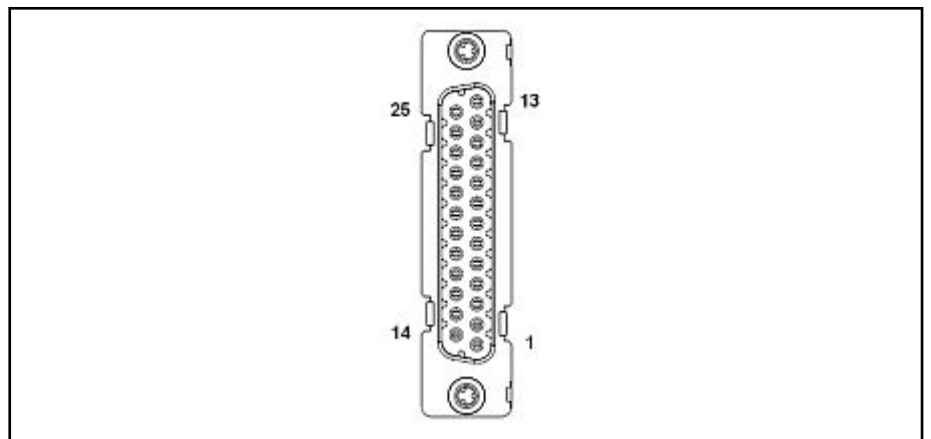


Fig. 12-12: Encoder Ex.0 and encoder Ex.1 header (backplane) pinout

The connector pin assignment for the encoder header Ex.0 for axis 0 is given in [tab. 12-25 "Axis 0 encoder header Ex.0 pinout" on page 128](#). The connector pin assignment for the encoder header Ex.1 for axis 1 is given in [tab. 12-26 "Axis 1 encoder header Ex.1 pinout" on page 128](#).

Detailed Connection Information of Common Connectors

Pin	Pin name	Function of connections for encoder on axis 0 (header Ex.0)						
		EnDat2.2	EnDat2.1	MSM	Hiperface	SinCos	Quadrature	Sanyo Denki
1	Enc5V0	+5 Volt	+5 Volt	+5 Volt		+5 Volt	+5 Volt	+5 Volt
2	EncVref						EncVref	
3	Enc0QuadA+						QuadA+	
4	Enc0QuadB+						QuadB+	
5	Enc0Index+						Index+	
6	Dig5VIn0a+	Clock+					Hall A+	
7	Dig5VIn0b+						Hall B+	
8	Dig5VIn0c+	Data+	Data+	Data+	Data+		Hall C+	ES+
9	Opt_0+		Sine+		Sine+	Sine+		
10	Opt_1+		Cosine+		Cosine+	Cosine+		
11	Opt_2+					Index+		
12	Dig5VIn0a+		Clock+					
13	Opt_2+				+8 Volt			
14	EncGND	0 Volt	0 Volt	0 Volt		0 Volt	0 Volt	0 Volt
15	Enc0QuadA-						QuadA-	
16	Enc0QuadB-						QuadB-	
17	Enc0Index-						Index-	
18	Dig5VIn0a-	Clock-					Hall A-	
19	Dig5VIn0b-						Hall B-	
20	Dig5VIn0c-	Data-	Data-	Data-	Data-		Hall C-	ES-
21	Opt_0-		Sine-		Sine-	Sine-		
22	Opt_1-		Cosine-		Cosine-	Cosine-		
23	Opt_2-					Index-		
24	Dig5VIn0a-		Clock-					
25	EncGND				0 Volt			

Tab. 12-25: Axis 0 encoder header Ex.0 pinout

Pin	Pin name	Function of connections for encoder on axis 1 (header Ex.1)						
		EnDat2.2	EnDat2.1	MSM	Hiperface	SinCos	Quadrature	Sanyo Denki
1	Enc5V1	+5 Volt	+5 Volt	+5 Volt		+5 Volt	+5 Volt	+5 Volt
2	EncVref						EncVref	
3	Enc1QuadA+						QuadA+	
4	Enc1QuadB+						QuadB+	
5	Enc1Index+						Index+	
6	Dig5VIn1a+	Clock+					Hall A+	

Detailed Connection Information of Common Connectors

Pin	Pin name	Function of connections for encoder on axis 1 (header Ex.1)						
		EnDat2.2	EnDat2.1	MSM	Hiperface	SinCos	Quadrature	Sanyo Denki
7	Dig5VIn1b+						Hall B+	
8	Dig5VIn1c+	Data+	Data+	Data+			Hall C+	ES+
9	Dig5VIn1a+		Sine+		Sine+	Sine+		
10	Dig5VIn1b+		Cosine+		Cosine+	Cosine+		
11	Dig5VIn1c+					Index+		
12	Dig5VIn0b+		Clock+		Data+			
13	Dig5VIn1c+				+8 Volt			
14	EncGND	0 Volt	0 Volt	0 Volt		0 Volt	0 Volt	0 Volt
15	Enc1QuadA-						QuadA-	
16	Enc1QuadB-						QuadB-	
17	Enc1Index-						Index-	
18	Dig5VIn1a-	Clock-					Hall A-	
19	Dig5VIn1b-						Hall B-	
20	Dig5VIn1c-	Data-	Data-	Data-			Hall C-	ES-
21	Dig5VIn1a-		Sine-		Sine-	Sine-		
22	Dig5VIn1b-		Cosine-		Cosine-	Cosine-		
23	Dig5VIn1c-					Index-		
24	Dig5VIn0b-		Clock-		Data-			
25	EncGND				0 Volt			

Tab. 12-26: Axis 1 encoder header Ex.1 pinout



- Connect the shield of the cable to the metal housing of the sub-D plug.
- Use twisted pair cabling for the differential signals Clock+/Clock-, Data+/Data-, Sine+/Sine-, Cosine+/Cosine-, Index+/Index-, Hall A+/Hall A-, Hall B+/Hall B-, Hall C+/Hall C-, QuadA+/QuadA-, QuadB+/QuadB-, ES+/ES-.

Encoder power supply characteristics

Characteristic	Description
Power supply voltage	5.25V \pm 0.05V (Quadrature ^① and SinCos encoders) 8V \pm 5% (Hiperface encoder)
Current	700 mA per module (Quadrature ^① and SinCos encoders) 400 mA per module (Hiperface encoder)

- ① The quadrature encoder is also known as A/B encoder, S0S90 encoder and 3-channel digital incremental encoder.

Tab. 12-27: Encoder power input characteristics

Detailed Connection Information of Common Connectors

Cable Characteristics

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	AWG 24 / 0.24 mm ² (1A) minimum
Maximum cable length	15 m

Tab. 12-28: Encoder cable specification

12.10 Fdig – Fast Digital I/O Connections

The fast digital I/O header (FDIGx) is available for each drive module.

Header type on the backplane: female, 9 pins sub-D, with 4-40 UNC nut.

The following fast digital I/O headers are available on the backplane (depending on the type of system housing).

- Fdig0 : drive module slot 0 fast digital I/O header
- Fdig1 : drive module slot 1 fast digital I/O header
- Fdig2 : drive module slot 2 fast digital I/O header
- Fdig3 : drive module slot 3 fast digital I/O header
- Fdig4 : drive module slot 4 fast digital I/O header

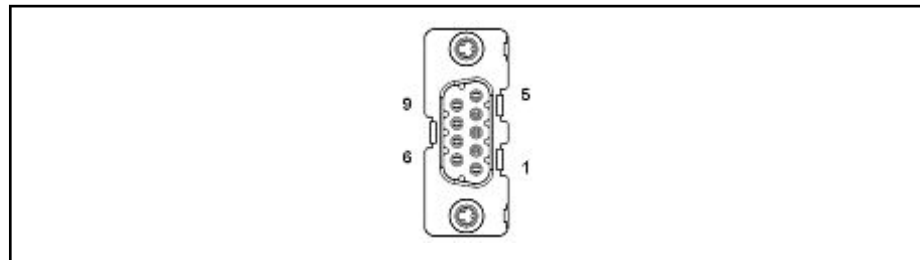


Fig. 12-13: Fast digital I/O header (backplane) pinout

The connector pin assignment is given in [tab. 12-29 "Fast digital I/O header pinout" on page 130](#).

Pin	Pin name	Function
1	GND_DIO	Ground for digital I/O.
2	FastOut0	Fast 24 Volt Output 0.
3	FastOut1	Fast 24 Volt Output 1.
4	FastIn0	+ Fast 24 Volt Input 0.
5	FastIn1	+ Fast 24 Volt Input 1.
6	24V_DIO	24 Volt I/O supply.
7	24V_DIO	24 Volt I/O supply.

Detailed Connection Information of Common Connectors

Pin	Pin name	Function
8	GND_DIO	Ground for digital I/O.
9	GND_DIO	Ground for digital I/O.

Tab. 12-29: Fast digital I/O header pinout

NOTICE The system housing has no provisions against wrong polarity connection of the 24V I/O power supply.

Observe the polarity of the power supply connections.



- Connect the shield of the cable to the metal housing of the sub-D plug.
- The GND wire of the signal wire must always be included in the cable.
- GND_DIO and 24V_DIO pins of the FDIGx headers are also connected to GND_DIO and 24V_DIO pins of the DIGx headers.

Fast Digital Input Characteristics

Characteristic	Description
Permitted input voltage	0V ... 30V
Input high level	15V ... 30V
Input low level	0V ... 5V
Input current @ 24V	Nominal 15 mA

Tab. 12-30: Fast digital Input characteristics

The fast digital inputs only support high-side switching.

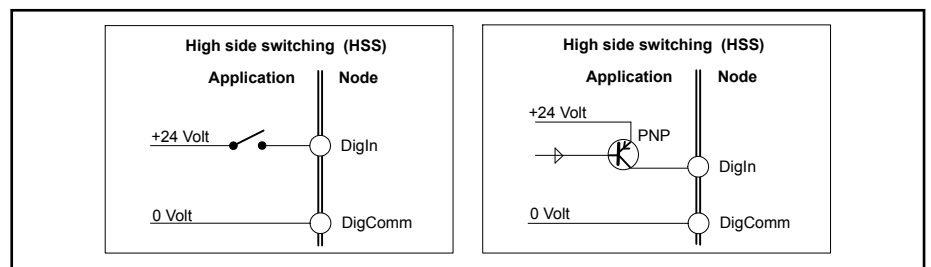


Fig. 12-14: High-side switching fast digital inputs

Fast Digital Output Characteristics

Characteristic	Description
Output voltage	24V ±6V
Output current	0.4 mA ... 100 mA, typical 50 mA

Tab. 12-31: Fast digital output characteristics

Detailed Connection Information of Common Connectors

Cable Characteristics

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	AWG 24 / 0.24 mm ² (1A) Use cables with wires of correct rating
Maximum cable length	15 m

Tab. 12-32: Fast Digital I/O cable specification

12.11 Dig – Digital I/O Connections

The digital I/O header (DIGx) is available for each drive module.

Header type on the backplane: male, 25 pins sub-D, with 4-40 UNC nut.

The following digital I/O headers are available on the backplane (depending on the type of system housing).

- Dig0 : drive module slot 0 digital I/O header
- Dig1 : drive module slot 1 digital I/O header
- Dig2 : drive module slot 2 digital I/O header
- Dig3 : drive module slot 3 digital I/O header
- Dig4 : drive module slot 4 digital I/O header

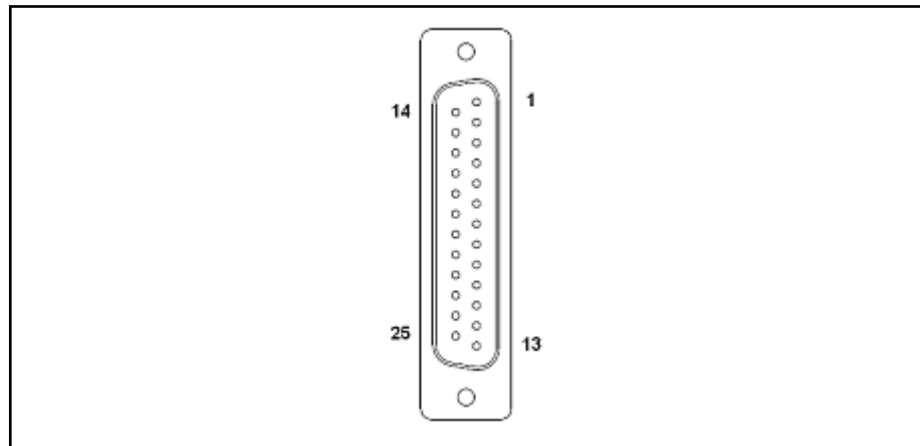


Fig. 12-15: Digital I/O header (backplane) pinout

The connector pin assignment is given in [tab. 12-33 "Digital I/O header pinout" on page 132](#).

Pin	Pin name	Function
1	DigIn0	Digital Input in group 0.
2	DigIn1	Digital Input in group 0.
3	DigIn2	Digital Input in group 0.
4	DigIn3	Digital Input in group 0.

Detailed Connection Information of Common Connectors

Pin	Pin name	Function
5	DigIn4	Digital Input in group 1.
6	DigIn5	Digital Input in group 1.
7	DigIn6	<ul style="list-style-type: none"> • Digital Input in group 1, or • Drive disable input for axis 0 in group 1. (only supported NY4120 and NY4140).
8	DigIn7	<ul style="list-style-type: none"> • Digital Input in group 1, or • Drive disable input for axis 1 in group 1. (only supported NY4120).
9	GND_DIO	Ground for digital Output, connected to power supply.
10	DigOut0	Digital Output.
11	DigOut1	Digital Output.
12	DigOut2	Digital Output.
13	DigOut3	Digital Output.
14	DigComm0	Common for digital Input group 0, may be ground or 24V.
15	DigIn8	Digital Input in group 2 (only supported NY4130).
16	DigIn9	Digital Input in group 2 (only supported NY4130).
17	DigIn10	Stop alarm input for axis 0 in group 2. (only supported NY4130).
18	DigIn11	Stop alarm input for axis 1 in group 2. (only supported NY4130).
19	DigComm2	Common for digital Input group 2, may be ground or 24V. (Note: connection to 24V only allowed if DigIn10 and DigIn11 are not used).
20	DigComm1	Common for digital Input group 1, may be ground or 24V.
21	GND_DIO	Ground for digital Output, connected to power supply.
22	24V_DIO	24 Volt digital Output supply.
23	24V_DIO	24 Volt digital Output supply.
24	24V_DIO	24 Volt digital Output supply.
25	24V_DIO	24 Volt digital Output supply.

Tab. 12-33: Digital I/O header pinout

NOTICE

The system housing has no provisions against wrong polarity connection of the 24V I/O power supply.

Observe the polarity of the power supply connections.

Detailed Connection Information of Common Connectors



- Connect the shield of the cable (if shielded cable is used) to the metal housing of the sub-D plug.
- The GND wire of the signal wire must always be included in the cable.
- Each pin is rated for a load of 1 A. Connect pin # 22, 23, 24, and 25 to match the total load connected to the digital output pins.
- GND_DIO and 24V_DIO pins of the DIGx headers are also connected to GND_DIO and 24V_DIO pins of the FDIGx headers.

Digital Input Characteristics

Characteristic	Description
Permitted input voltage	0V ... 30V
Input high level	15V ... 30V
Input low level	0V ... 5V
Input current @ 24V	Nominal 3.5 mA

Tab. 12-34: Digital Input characteristics

The digital inputs support high-side switching and low-side switching.

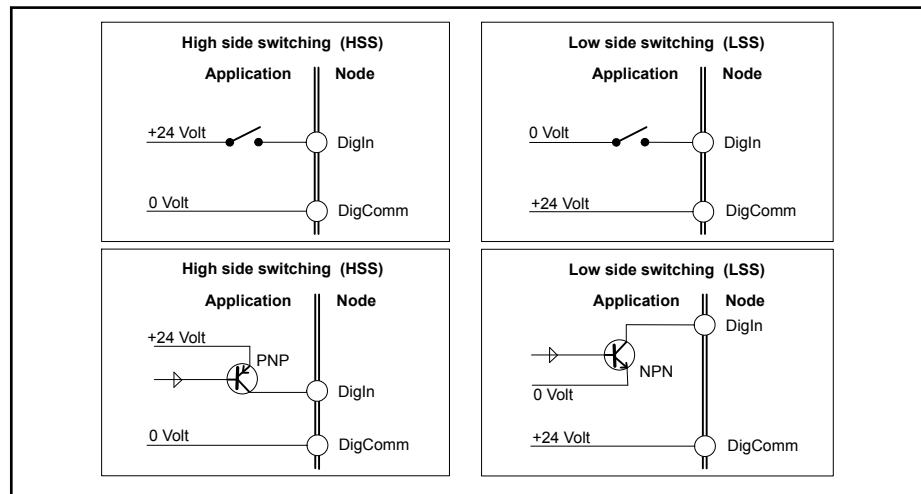


Fig. 12-16: High-side switching and low-side switching digital inputs

Digital Output Characteristics

Characteristic	Description
Output voltage	24V \pm 6V
Output current	0.02A ... 1A, 2A peak (max. 50 ms)

Tab. 12-35: Digital output characteristics

Cable Characteristics

Detailed Connection Information of Common Connectors

Characteristic	Description
Type of cable	Shielded or unshielded cable
Wire gauge / cross section	AWG 24 / 0.24 mm ² (1A) Use cables with wires of correct rating
Maximum cable length	15 m

Tab. 12-36: Digital I/O cable specification

12.12 An – Analog I/O Connections

For each drive module an analog I/O header is available.

Header type on the backplane: male, 9 pins sub-D, with 4-40 UNC nut.

The following analog I/O headers are available on the backplane (depending on the type of system housing).

- An0 : drive module slot 0 analog I/O header
- An1 : drive module slot 1 analog I/O header
- An2 : drive module slot 2 analog I/O header
- An3 : drive module slot 3 analog I/O header
- An4 : drive module slot 4 analog I/O header

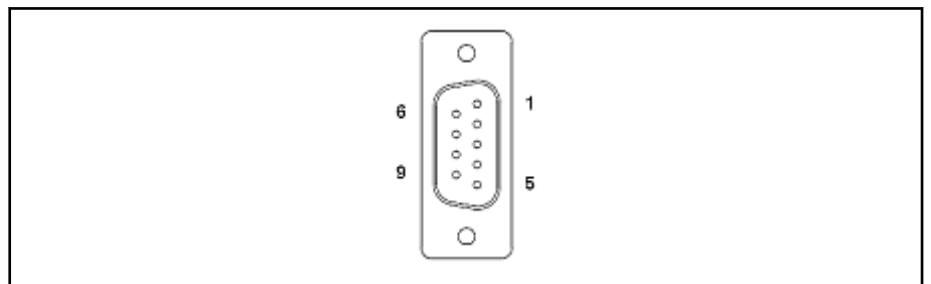


Fig. 12-17: Analog I/O header (backplane) pinout

The connector pin assignment is given in [tab. 12-37 "Analog I/O header pinout"](#) on page 135.

Pin	Pin name	Function
1	AnIn0+	Positive analog input +/- 10 V (differential or single ended).
2	AnIn0C	<ul style="list-style-type: none"> • NY4120/NY4140: Positive analog input 4-20 mA must be linked in connector to AnIn0+. • NY4130: analog reference output voltage.
3	AnIn0-	<ul style="list-style-type: none"> • Negative analog input +/- 10 V (differential input) or connected to AnGND in case of single ended input. • Negative analog input 4-20 mA must be linked in connector to AnGND (Only NY4120/NY4140).
4	AnOut0	Analog output.
5	AnOut1	Analog output.

Detailed Connection Information of Common Connectors

Pin	Pin name	Function
6	AnIn1+	Positive analog input +/- 10 V (differential or single ended).
7	AnIn1C	<ul style="list-style-type: none"> NY4120/NY4140: Positive analog input 4-20 mA must be linked in connector to AnIn1+. NY4130: analog reference output voltage.
8	AnGND	Return for analog output or 4-20 mA input, ground reference for inputs.
9	AnIn1-	<ul style="list-style-type: none"> Negative analog input +/- 10 V (differential input) or connected to AnGND in case of single ended input. Negative analog input 4-20 mA must be linked in connector to AnGND (Only NY4120/NY4140).

Tab. 12-37: Analog I/O header pinout



- Connect the shield of the cable to the metal housing of the sub-D plug.
- Use twisted pair cabling for the differential signals (AnIn0+ / AnIn0- and AnIn1+ / AnIn1-).

Cable Characteristics

Characteristic	Description
Type of cable	Shielded cable
Wire gauge / cross section	AWG 26 / 0.14 mm ²
Maximum cable length	15 m

Tab. 12-38: Analog I/O cable specification

12.13 PE – Protective Earth Connection

For safety reasons, a protective earth connection via the threaded earth post is mandatory. The protective earth connection must be connected before any other cables are connected to the system housing.

The protective earth connection is an M5 threaded post on the base plate.

See also [chapter 29.7 "Protective Earth Connection and Machine Frame"](#) on page 216.

13 NY4901 and NY4901/10: Cable Strain Relief

The NY4110 MCU uses IEEE 1394b connections to connect to other nodes and the PC. Some form of network cable strain relief is required for the IEEE 1394b connection cables. The NY4901 strain relief is developed, because the IEEE 1394b connectors do not support a locking mechanism.

The NY4112 and NY4114 MCU use RJ45 connections to connect to other nodes and the PC. The NY4150 and NY4150/10 SERCOS III Master modules also use RJ45 connections to connect to the IndraDrives. Some form of network cable strain relief is required for the Ethernet connection cables to ensure a reliable connection. For SERCOS network cables connected to the NY4150 you can use the strain relief bracket installed on the MCU. The NY4901/10 strain relief bracket is developed for the NY4112, NY4114, and the NY4150/10.

Part number of the NY4901 is R911322873, ordering code is NYA04.1-STRAIN-RELIEF-5PCS-4110-NY4901. Part number of the NY4901/10 is R911172941, ordering code is NYA04.1-STRAIN-RELIEF-41XX-NY4901/10.

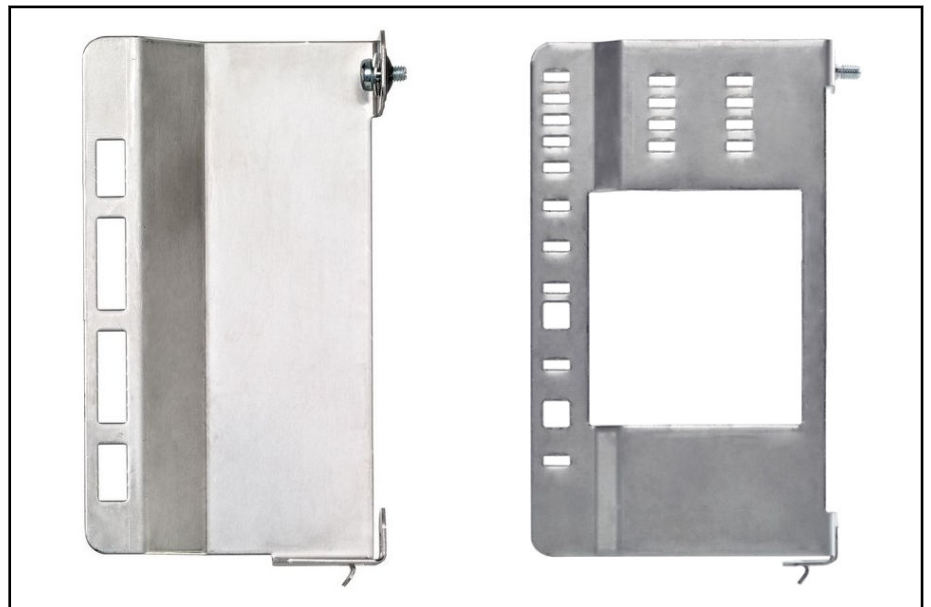


Fig. 13-1: NY4901 strain relief (left), NY4901/10 strain relief (right)

Installation of the NY4901 or NY4901/10 strain relief on a module

When you look at the front of the module the large plate of the NY4901 bracket is at the left side of the module, and the large plate of the NY4901/10 bracket is at the right side of the module. First, you hook the lower corner of the bracket (the corner shown at the bottom side in [fig. 13-1 "NY4901 strain relief \(left\), NY4901/10 strain relief \(right\)" on page 137](#)) on the bottom end of the front of the module at an angle of approximately 60°. Place the bracket against the front of the module, and install the bracket with the screw.

You can secure the connections of the connector(s) to the module with the NY4901 or NY4901/10 using a tie-wrap around the cable and through the holes in the cable strain relief bracket, see [fig. 13-2 "IEEE 1394b cable attached to the NY4901 strain relief on the NY4110 MCU" on page 138](#).

NY4901 and NY4901/10: Cable Strain Relief



Fig. 13-2: IEEE 1394b cable attached to the NY4901 strain relief on the NY4110 MCU



Make sure that your machine design has sufficient free clearance space in front of the MCU and the SERCOS III Master module for a cable strain relief and the maximum allowed bending of the connection cables. As rule of thumb, 100 mm should suffice.

14 NY4910: Motor Cable Shield and Support

14.1 Introduction

The Motor Cable Shield and Support bracket creates a solid construction for the connection of the motor cables to the system housing, a cable strain relief, and provides an adequate shielding connection for EMC measures.

The Motor Cable Shield and Support bracket package consist of the following parts.


- Five metal brackets for five motor cables, including the mounting screw.
- Five tie-wraps with an EMC gasket.
- Five standard tie-wraps.

Part number is R911172999, ordering code is NYA04.1-SHIELD-SUP-MOT-5PCS-NY4910.

14.2 Mounting Instruction

Do the following steps to connect a motor cable with the Motor Cable Shield and Support bracket to the motor header on the system housing.

1. Strip the wires of the motor cable according to the following picture.

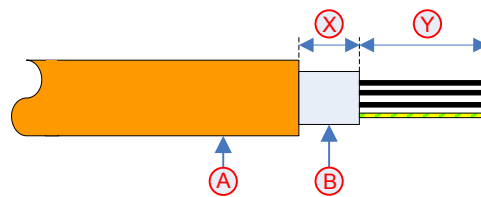


Strip the cable coating ① for a length of 50 mm.

Strip the shield ② for a length of 40 mm.

The shield length ③ is 10 mm, the wire length ④ is 40 mm.

2. Put the wires of the motor cable into the motor connector according to the instructions of the connector manufacturer. Keep the wires of the motor cable to the connector as short as possible (!).

Securely attach the motor cable ⑤ to the shield and support bracket ⑥.

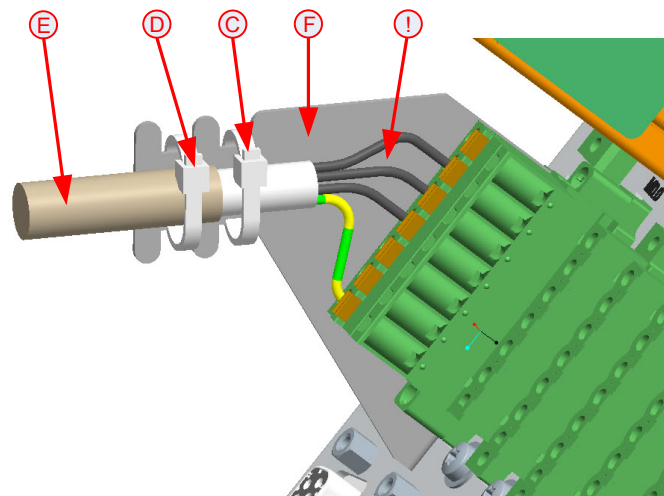


NY4910: Motor Cable Shield and Support

Use the tie-wrap with the EMC gasket ③ to clamp the shield of the cable against the metal bracket.

Use the standard tie-wrap ④ to attach the cable firmly onto the metal bracket.

3. Put the hook of the shield and support bracket ⑤ into the slit at the left side of the header on the metal base plate of the system housing. Lock the shield and support bracket ⑥ onto the base plate with the screw ⑦.

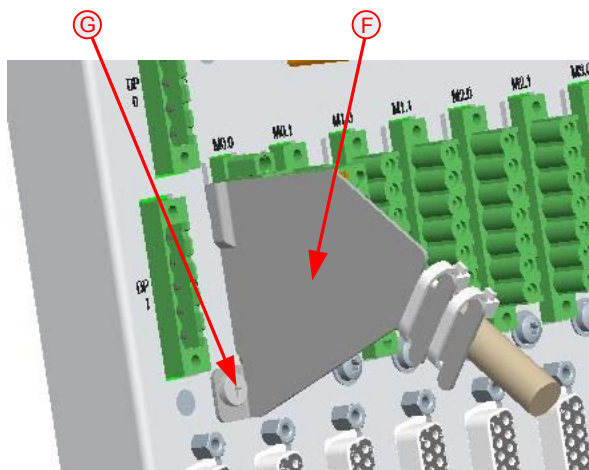

NY4915/10: Host Adapter IEEE 1394b (PCI)

15 NY4915/10: Host Adapter IEEE 1394b (PCI)

The NY4915/10 is a card with a PCI interface to install in a PCI slot of a PC. The NY4915/10 host adapter facilitates the connection of a host PC to the NY4110 MCU module using an IEEE 1394b cable.

Part number is R911328808, ordering code is NYA04.1-1394B-INT-MOD1-NY4915/10.

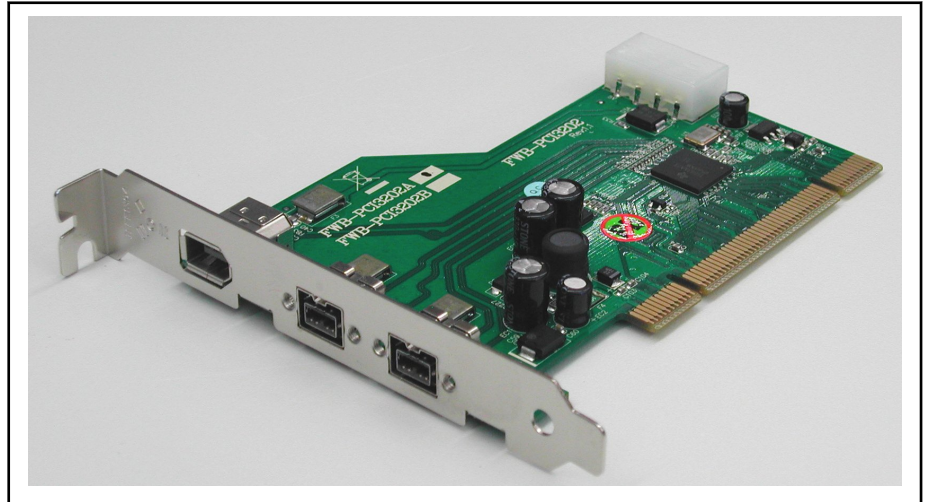


Fig. 15-1: NY4915/10 host adapter

NY4915/10 main features:

- Standard PCI interface for installation in any PCI slot of a modern PC.
- Three IEEE 1394b interface connectors for IEEE 1394b cable length up to 4.5 meter. Only the lower two rectangular sockets can be used in the NYCe 4000 system.
- The host adapter includes an industry-standard header to supply power to the IEEE 1394b connection.
- IEC60950 compliant (to be tested).

NY4916/10: Host Adapter IEEE 1394b and IEEE 1394b Cat-5e/Cat-6

16 NY4916/10: Host Adapter IEEE 1394b and IEEE 1394b Cat-5e/Cat-6

16.1 Introduction

The NY4916/10 is a card with a PCI interface to install in a PCI slot of a PC. The NY4916/10 host adapter facilitates the connection of a host PC to the NY4110 MCU module using a shielded Cat-5e or Cat-6 cable with RJ45 connectors (via an external adapter, see [chapter 18 "FireWire-b - 1394b Cat-5e/Cat-6 media converter" on page 147](#)) or IEEE 1394b cable with IEEE 1394b connectors.

Part number is R911325070, ordering code is NYA04.1-1394B-INT-CAT-NY4916/10.

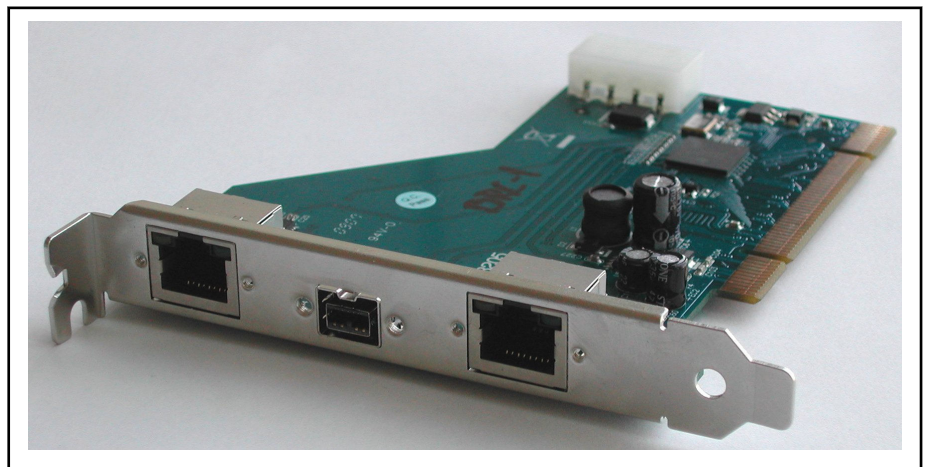


Fig. 16-1: NY4916/10 host adapter

NY4916/10 main features:

- Standard PCI interface for installation in any PCI slot of a modern PC.
- One IEEE 1394b interface connector for IEEE 1394b cable length up to 4.5 meter.
- Two RJ45 interface connectors.
 - Use "crossed STP" Cat-5e cable for lengths ≤ 20 meter.
 - Use "crossed STP" Cat-6 cable for lengths > 20 meter and ≤ 50 meter.
- Widely available standard crossed Ethernet cabling.
- The host adapter includes an industry-standard header to supply power to the IEEE 1394b connection. This power supply is only available on the IEEE 1394b interface connector, not on the RJ45 connectors.
- IEC60950 compliant (to be tested).

16.2 Standard Ethernet cable

[tab. 16-1 "Connector pin assignment and wire color coding" on page 144](#) shows the standard Ethernet cable pin definition and its use for IEEE 1394b communication.

NY4916/10: Host Adapter IEEE 1394b and IEEE 1394b Cat-5e/Cat-6

connector 1 pin number	connector 2 pin number	Wire color	Wire diagram	10Base-T 100Base-T	IEEE 1394b
1	3	White/orange		Transmit +	TPB +
2	6	Orange		Transmit -	TPB -
3	1	White/green		Receive +	TPA +
4	7	Blue		Not used	Not connected
5	8	White/blue		Not used	Not connected
6	2	Green		Receive -	TPA -
7	4	White/brown		Not used	Not connected
8	5	Brown		Not used	Not connected

Tab. 16-1: Connector pin assignment and wire color coding

The crossed Ethernet cable is defined as shown in [fig. 16-2 "Crossed Ethernet cable wiring"](#) on page 144.

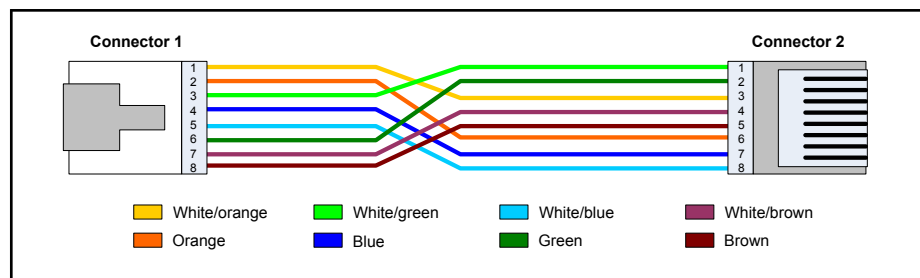


Fig. 16-2: Crossed Ethernet cable wiring

16.3 Field diagnostics

Both RJ45 connectors on the NY4916/10 include the standard green link contact indicator LED. The green LED indicates the connection to the IEEE 1394b link layer. The yellow LED of the RJ45 connectors is not used.

NY4917: Host Adapter IEEE 1394b (PCIe)

17 NY4917: Host Adapter IEEE 1394b (PCIe)

The NY4917 is a card with a PCIe interface to install in a PCIe slot of a PC. The NY4917 host adapter facilitates the connection of a host PC to the NY4110 MCU module using an IEEE 1394b cable.

Part number is R911345705, ordering code is NYA04.1-1394B-INT-PCIE-NY4917.

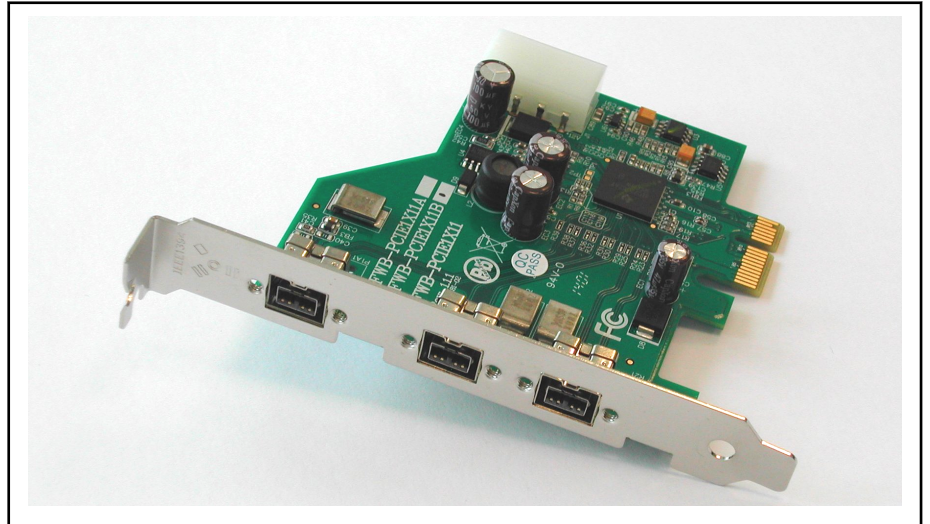


Fig. 17-1: NY4917 host adapter

NY4917 main features:

- Standard PCIe (x1) interface for installation in any PCIe slot of a modern PC.
- Three IEEE 1394b interface connectors for IEEE 1394b cable length up to 4.5 meter. Any of the three sockets can be used in the NYCe 4000 system.
- The host adapter includes an industry-standard header to supply power to the IEEE 1394b connection.
- IEC60950 compliant (to be tested).

18 FireWire-b - 1394b Cat-5e/Cat-6 media converter

18.1 Introduction

The FireWire-b to IEEE 1394b Cat-5e/Cat-6 media converter converts a FireWire IEEE 1394b cable to an Ethernet Cat-5e or Ethernet Cat-6 STP cable. The media converter solves the limiting 4.5 meter IEEE 1394b cable length as a maximum distance between the PC and the MCU. A typical application where the distance between the PC and the MCU is larger than 4.5 meter uses an NY4916/10 host adapter in the PC and connects to the media converter using standard Cat-5e or Cat-6 STP cable. The MCU is connected to the media converter with a standard IEEE 1394b cable.

Part number is R911329980, ordering code is HAWA MCS KONVERTER FWB-UTPS400.



Fig. 18-1: FireWire-b - 1394b Cat-5e/Cat-6 media converter, power supply and FireWire connection



Fig. 18-2: FireWire-b - 1394b Cat-5e/Cat-6 media converter, RJ45 and FireWire connection

FireWire-b to IEEE 1394b Cat-5e/Cat-6 media converter main features:

- Transmit and receive IEEE 1394b signals over Cat-5e or Cat-6 STP cable.

FireWire-b - 1394b Cat-5e/Cat-6 media converter

- Two IEEE 1394b interface connector for IEEE 1394b cable length up to 4.5 meter. Each IEEE 1394b connection is protected by an 1.35 A / 33 V fuse.
You may use either IEEE 1394b connection for convenient cable layout. However, you may not use both IEEE 1394b connections, that is, the FireWire-b to IEEE 1394b Cat-5e/Cat-6 media converter must not be used as a repeater in the IEEE 1394b network.
- One RJ45 interface connector.
 - Use "crossed STP" Cat-5e cable for lengths ≤ 20 meter.
 - Use "crossed STP" Cat-6 cable for lengths > 20 meter and ≤ 50 meter.
- Widely available standard crossed Ethernet cabling, see [chapter 16.2 "Standard Ethernet cable" on page 143](#).

18.2 Power supply

The FireWire-b to IEEE 1394b Cat-5e/Cat-6 media converter power supply specifications are as follows.

- DC power connector: standard 2.0 mm DC jack, center pin is +.
- Power supply input range: 8 V to 30 V DC, maximum 3 A.
- Power consumption: less than 3 W.



You must connect the "-" of the power supply to the earthing connection in the system.

18.3 Field diagnostics

The FireWire-b to IEEE 1394b Cat-5e/Cat-6 media converter has two LED indicators.

- Red LED indicates that the DC power supply voltage is present.
- The LINK LED in the RJ45 socket indicates that the Cat-5e or Cat-6 cable is connected.

19 NY4920/10 Connector Set and Keying Fingers

19.1 Introduction

The system housing has Phoenix Contact headers to connect the system power supply voltage, service inputs, drive power supply voltage and motors. To prevent errors in the assembly of the connection cables, you can order Phoenix Contact plugs with appropriate text markings that support the correct assembly of the connection cables.

Additionally, keying profiles and matching keying fingers for the drive power and motor connectors enable the machine builder to define connector configurations that prevent accidental wrong connection. The following connector set is available.

Connector set	Part number	Description Ordering code
NY4920/10	R911325078	Connector set for one system. NYA04.1-CONSET-SYSPW-NY4920/10

Tab. 19-1: Connector sets

19.2 NY4920/10 Connector Set for One System

The NY4920/10 connector set contains one 3-pin 24V System power plug and one 4-pin Service input plug. Appropriate text markings on the plugs support the correct assembly of the connection cables.

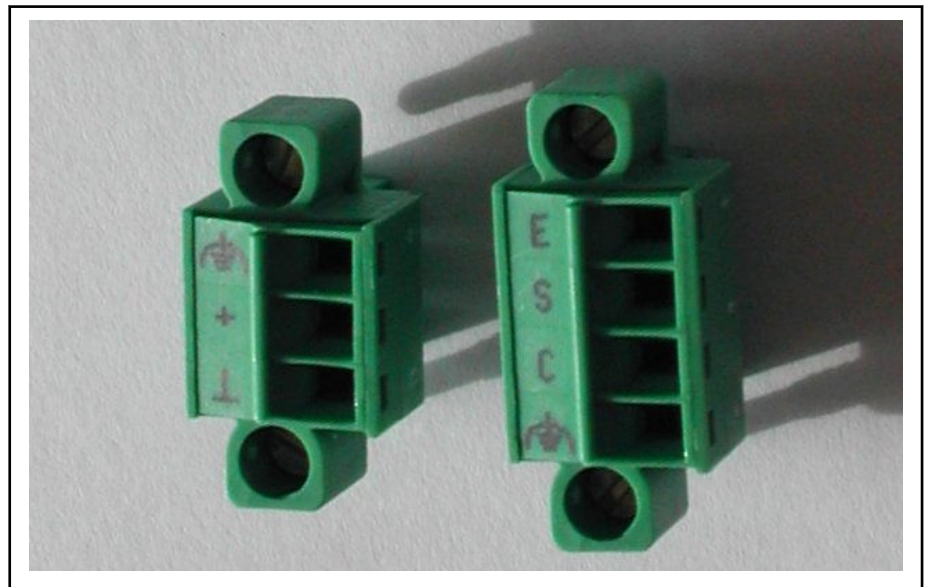


Fig. 19-1: Connector set NY4920/10

19.3 Keying Fingers for Drive Power and Motor Connectors

All NY40x3 system housings need 5-pin Drive Power plugs for installed NY4120, NY4125 or NY4140 drive modules, and one, two or five 7-pin motor plugs for each drive slot. The machine builder can install keying profiles into the male connector and install matching keying fingers on the female

NY4920/10 Connector Set and Keying Fingers

connector to create an unambiguous connection scheme. This scheme prevents the possibility that a plug is plugged into the wrong header.

Type and order number for keying profiles is Phoenix Contact, type CR-MSTB, order number 1734401.

Type and order number for keying fingers is Phoenix Contact, type CP-MSTB, order number 1734634.



The machine builder is responsible to install an unambiguous keying profile.

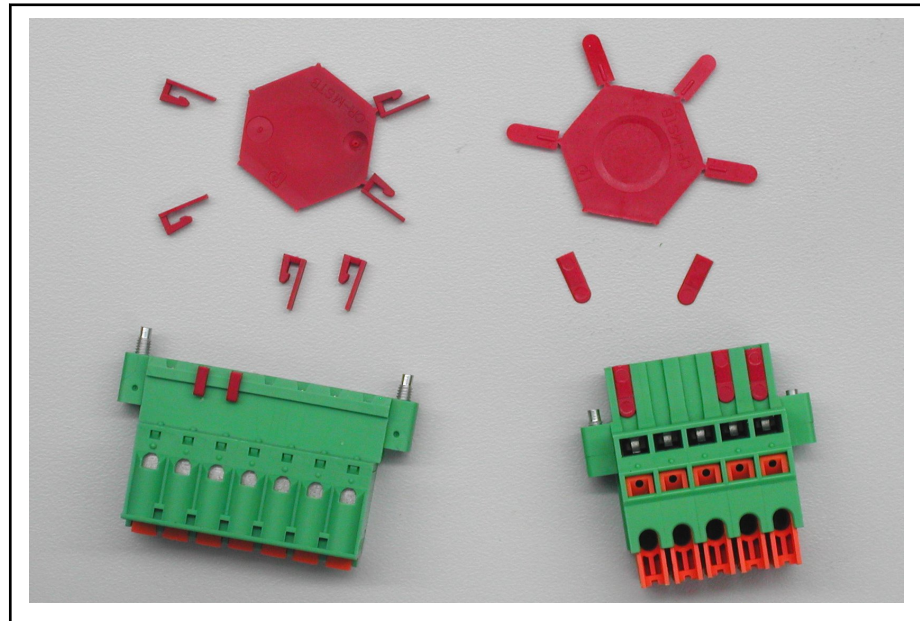


Fig. 19-2: Motor plug with keying profiles and drive power plug with keying fingers



If you use another type of Phoenix Contact plug, keep in mind that it is not allowed that the plugs for the drive power supply voltage have screw terminals for connection of the wires. The distance between the pins is such that when screw terminals are used, after stripping the insulation of a wire, a short circuit condition may occur caused by strands of the conductors in the wire that are not captured by the screw.

Mounting of a keying profile and matching finger

To create an unambiguous connection system you must mount one or more keying profiles and fingers on

- all 5-pin Drive Power connectors for NY412x or NY4140 drive modules
- all 7-pin motor connectors of all NY40x3 system housings

Matching keying profiles and fingers prevent that a plug is plugged into a wrong header on the system housing.

- Keying fingers on the female plug

Slide the keying finger in the rectangular slit next to the female connector pin of the Drive Power plug or motor plug header, see [fig. 19-3 "Insertion of a key finger on Drive Power supply plug" on page 151](#). Use

NY4920/10 Connector Set and Keying Fingers

as many fingers as needed to realize an unambiguous connection scheme.

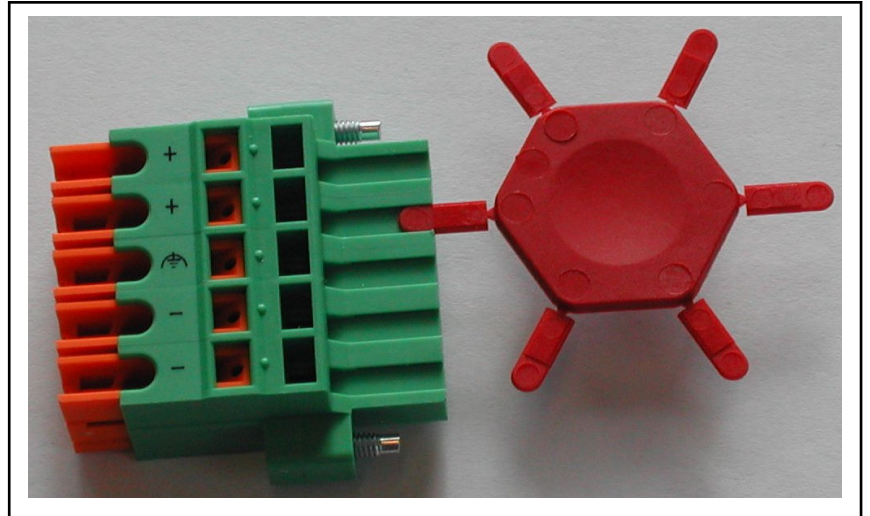


Fig. 19-3: Insertion of a key finger on Drive Power supply plug

- Keying profiles on the male plug
Slide the keying profile over the rim of the Drive Power header or motor plug with the long leg on the inside and the short leg on the outside of the connector housing until the keying profile "clicks" into place, see [fig. 19-4 "Keyed NY4120/NY4125/NY4140 Drive Power supply headers" on page 151](#). You must put a keying profile next to every pin for which the mating plug does not have a keying finger.

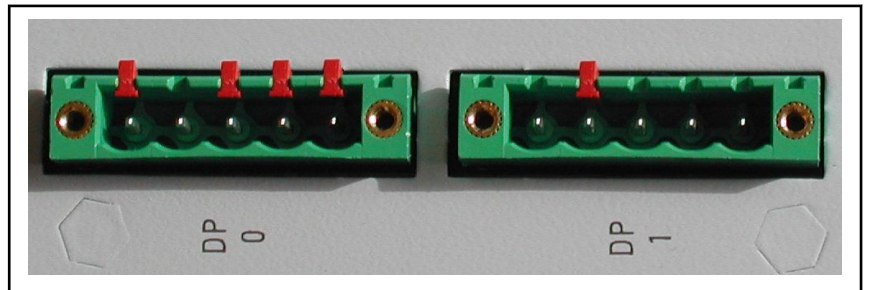


Fig. 19-4: Keyed NY4120/NY4125/NY4140 Drive Power supply headers

20 NY4921: Capacitor kit

20.1 Introduction

The NYCe 4000 drive modules NY4120, NY4140 and NY4120/10, may need an extra capacitor with a low ESR (Equivalent Series Resistance) for optimal functionality at high currents. The capacitor is needed to reduce the ripple on the supply voltage during the PWM switching cycles.

To prevent touching the contacts of the capacitor an encapsulation is supplied. The encapsulation does not cover the overpressure valve of the capacitor. For safety measures the capacitor is enclosed by a metal cover.

Each capacitor kit consists of a capacitor unit with a cable and a Phoenix Contact plug, a clamp, two screws and a metal cover to install the capacitor kit on the system housing, see [fig. 20-1 "NY4921 capacitor kit" on page 153](#).

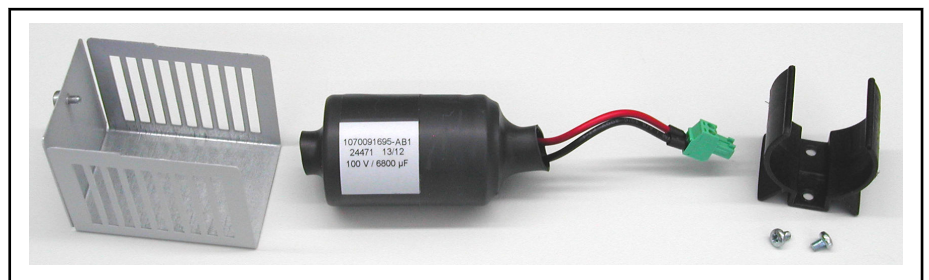


Fig. 20-1: NY4921 capacitor kit

20.2 Available Capacitor kits

Different capacitor kits are available for the NY4120, NY4120/10 and the NY4140 drive module, see [tab. 20-1 "Capacitor kits for the NY4120 and NY4140 drive modules" on page 153](#).

Drive module	Capacitor kit	Specifications	Part number and ordering code
NY4120 NY4120/10 NY4125	NY4921	Capacity: 6800 μ F Working voltage : 100 Volt Surge voltage : 125 Volt DC	R911325079 NYA04.1-CAP-100V-NY4921
NY4140	NY4921/10	Capacity : 2200 μ F Working voltage : 200 Volt Surge voltage : 250 Volt DC	R911325082 NYA04.1-CAP-200V-NY4921/10

Tab. 20-1: Capacitor kits for the NY4120 and NY4140 drive modules

20.3 Identification

The NY4921 and NY4921/10 can be identified by the label on the capacitor unit.

NY4921: Capacitor kit

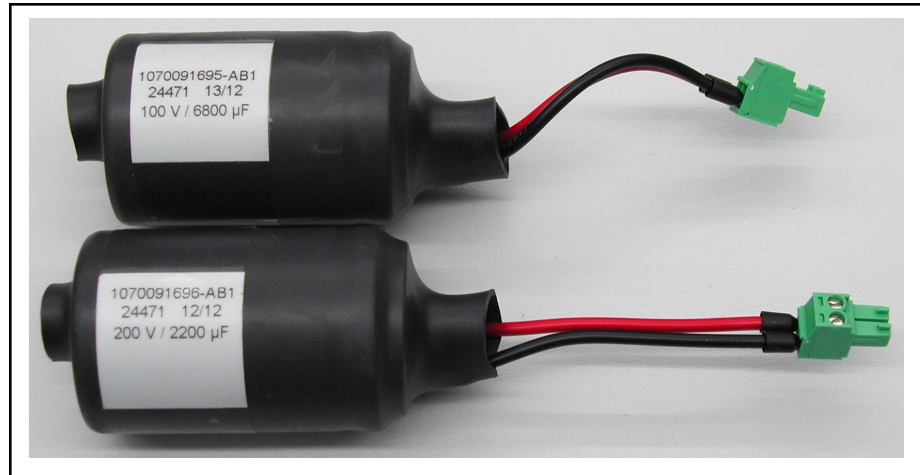


Fig. 20-2: Identification labels on the NY4921 and NY4921/10

Explanation of the identification label

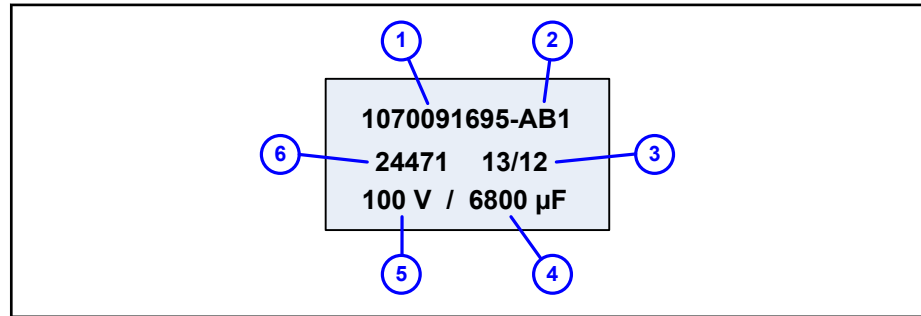


Fig. 20-3: Identification fields on the label

Field number	Explanation
1	Material number
2	Version level and status
3	Date of manufacture (ww/yy)
4	Capacitor value
5	Working voltage
6	Manufacturer identification code

Tab. 20-2: Fields of the capacitor identification label

The connection cable attached to the capacitor has a Phoenix Contact plug. The plug connects to the 2-pin header marked "CAPx" on the base plate of the system housing, where "x" can be 0, 1, 2, 3, or 4.

20.4 Mechanical dimensions of the Capacitor kit

The dimensions of the Capacitor kit are the following.

NY4921: Capacitor kit

Type code	Width	Height	Depth	Weight
NY4921	43.6 mm	58.0 mm	46.0 mm	200 gr
NY4921/10	43.6 mm	58.0 mm	46.0 mm	200 gr

Tab. 20-3: Dimensions of the Capacitor kit

You can see the dimensions of the Capacitor kit in the following views.

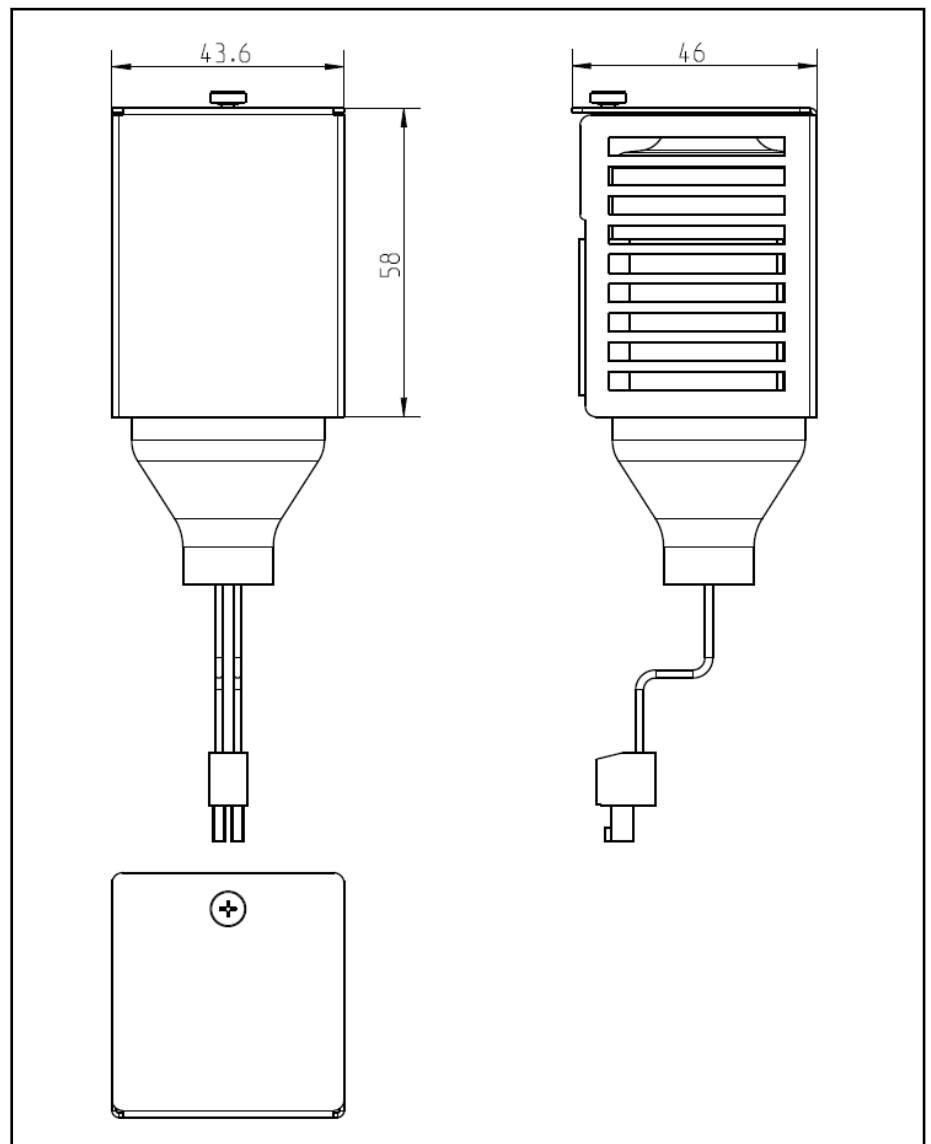


Fig. 20-4: Views with dimensions of the Capacitor kit

20.5 Installation of the Capacitor kit

The capacitor must be installed as close as possible to the drive module. For this purpose the I/O backplane in the system housing has dedicated header(s) labelled CAPx to connect the capacitor (where x is 0 for drive slot 0, 1 for drive slot 1, etc.). The module holder of the system housing has a mounting plate to install the capacitor kit(s) on the system housing.

NY4921: Capacitor kit

If a Capacitor Kit is installed on a system housing, a fuse between V+ of the drive power supply and the DP_PWR+ connection of the associated drive slot on the system housing is mandatory. The fuse certified for DC rating, Fast Acting, has to be UL recognized under CCN JDYX2/8, also IEC 60127-1 certification has to be provided.



Depending on the accessibility of the sides of the system housing after installation of the system housing inside a machine, it is advised to install the required Capacitor kit(s) on the system housing before the system housing is installed in the machine.

⚠ CAUTION

The capacitor can be damaged. Maximum drive power voltage must be lower than the working voltage of the installed capacitor.

Make sure that a capacitor with correct ratings is installed with respect to the drive power supply voltage.



If a drive slot was configured for an NY4120 or NY4125 drive module and now used for an NY4140 drive module, make sure that the Capacitor kit is upgraded (NYA04.1-CAP-100V-NY4921 upgraded to NYA04.1-CAP-200V-NY4921/10) before you connect the (higher) DP voltage.

NOTICE

The capacitor unit may be damaged. The system housing has no provisions against wrong polarity connection of the capacitor.

Observe the correct polarity of the connection of the "DP" drive power header.

NOTICE

Damage to components may occur if power is applied during installation or removal.

- Make sure power supplies are switched off before installation or removal of the Capacitor kit.
- Do not apply power until the Capacitor kit is installed.

Do the following steps to install the capacitor kit on the system housing.

1. Install the capacitor clamp ③ on the mounting plate ④ of the system housing with the two screws ⑤. There is a specific position on the module holder for each drive slot.

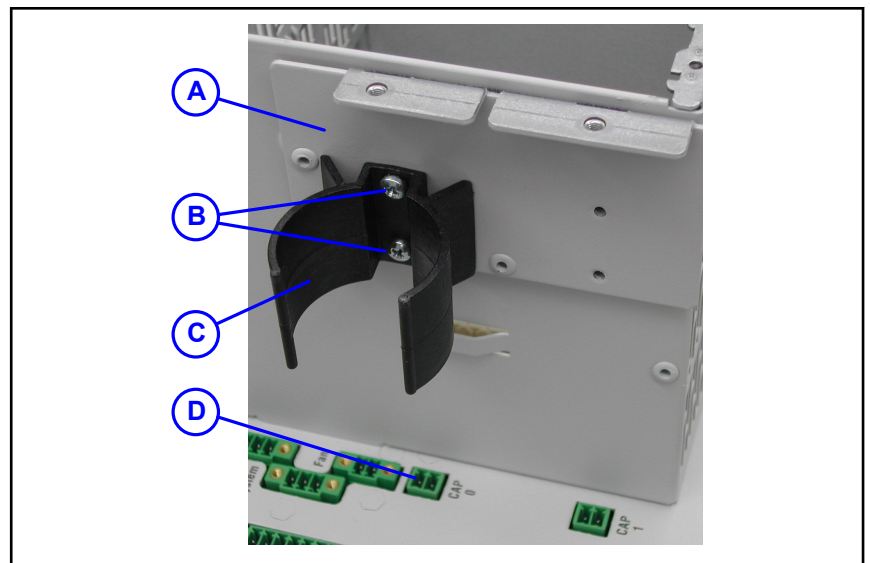


Fig. 20-5: Installation of the capacitor clamp on the system housing

2. Install the capacitor unit ⑤ in the capacitor clamp ③.

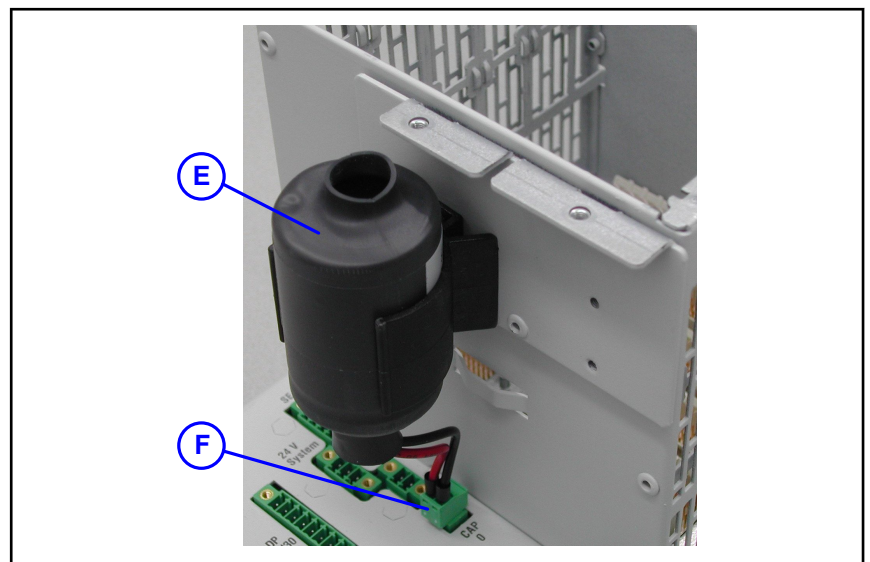


Fig. 20-6: Installation of the capacitor unit on the system housing

3. Insert the plug ⑥ in the CAPx header ④.

NOTICE

Damage to the capacitor unit may occur if the plug is connected in the wrong header. Do not use the FAN header.

Make sure that the plug ⑥ of the Capacitor unit is inserted in a header marked CAPx (where x can be 0, 1, 2, 3, or 4).

4. Put the metal cover ③ over the capacitor unit and secure the cover with screw ④. The metal cover can only be installed on the NY40x3 system housings.

NY4921: Capacitor kit

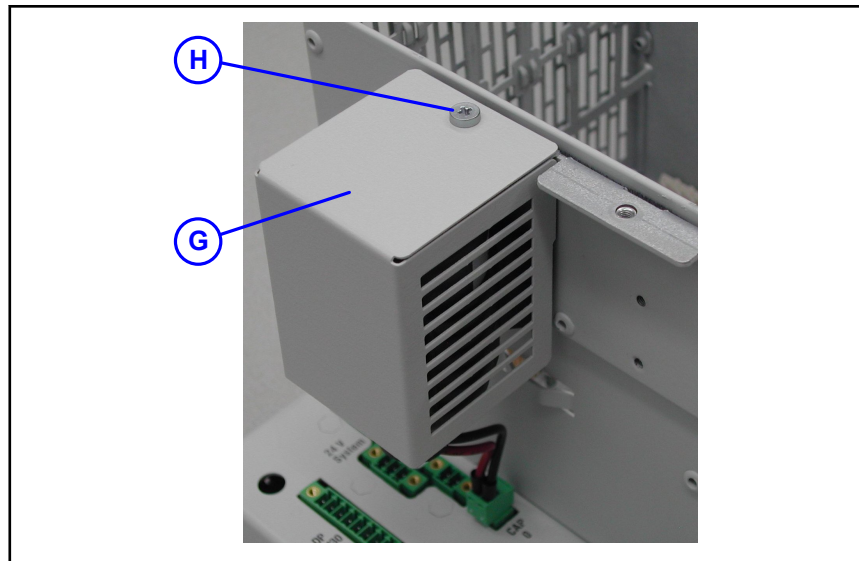


Fig. 20-7: Installation of the capacitor cover on the system housing

⚠ CAUTION

Injury may occur if specifications of the capacitor are exceeded.

The metal cover is part of the safety measures and must always be installed.

20.6 Removal of the Capacitor kit

⚠ DANGER

Electric shock may occur. The capacitor may hold a charge. Voltage on the pins of the plug can be higher than 60V DC. When the plug is disconnected, a high voltage can remain present on the pins for 5 minutes after disconnection. If the drive slot has an accompanying capacitor installed and the drive module is not installed in that slot, you must wait 30 minutes.

Do not touch the pins of the plug. Do not touch the rear side of the I/O backplane. Make sure that all power supplies are switched off before you start any work on the Capacitor kit. Wait until the capacitors in the system are discharged, check with a Volt meter.

First, disconnect all drive power supply plugs ("DPx"). Then disconnect the 24V System power supply plug.

Do the following steps to remove the Capacitor kit from the system housing, refer to the figures in [chapter 20.5 "Installation of the Capacitor kit" on page 155](#).

1. Remove the screw Ⓜ, if applicable.
2. Remove the metal cover Ⓝ, if applicable.
3. Disconnect the plug Ⓟ from the header Ⓞ.

NY4921: Capacitor kit

4. Remove the capacitor unit ⑤ from the capacitor clamp ④.
5. Remove the two screws ⑥.
6. Remove the capacitor clamp ④.

20.7 Commissioning

The capacitor of a Capacitor kit is connected to a header on the base plate of the system housing which is marked with the text "CAPx" (where "x" can be 0, 1, 2, 3, or 4, representing a specific drive slot in the module holder of the system housing).

Via the "DPx" headers on the base plate the drive power supply voltages are connected to each drive slot. This drive power voltage is also connected to the "CAPx" header.

Check that an appropriate fuse has been installed between V+ of the drive power supply and the DP_PWR+ connection of the associated drive slot on the system housing.

If the drive power supply has been connected with wrong polarity, the Capacitor Kit must be replaced.

If electrolyte has leaked from the capacitor, the Capacitor Kit must be replaced and all components exposed to the electrolyte must be replaced.

⚠ CAUTION

Injury may occur if the maximum working voltage of the capacitor is exceeded.

Make sure that the maximum drive power supply voltage for the drive modules NY4120, NY4120/10 and NY4140 (connected to "DPx" on the system housing, where "x" can be 0, 1, 2, 3, or 4), must be lower than the working voltage indication on the installed capacitor.

20.8 Maintenance

The Capacitor kit has no special maintenance requirements.

21 NY4922: Fan Units

21.1 Introduction

The modules that are installed in a NYCe 4000 system housing dissipate energy. The warm air can be transported from the system housing using convection cooling. However, as described in the NYCe 4000 Hardware System Manual, you must apply derating under certain conditions. You can install a fan unit at the bottom side of the module holder to extend the operating range of the NYCe 4000 node.

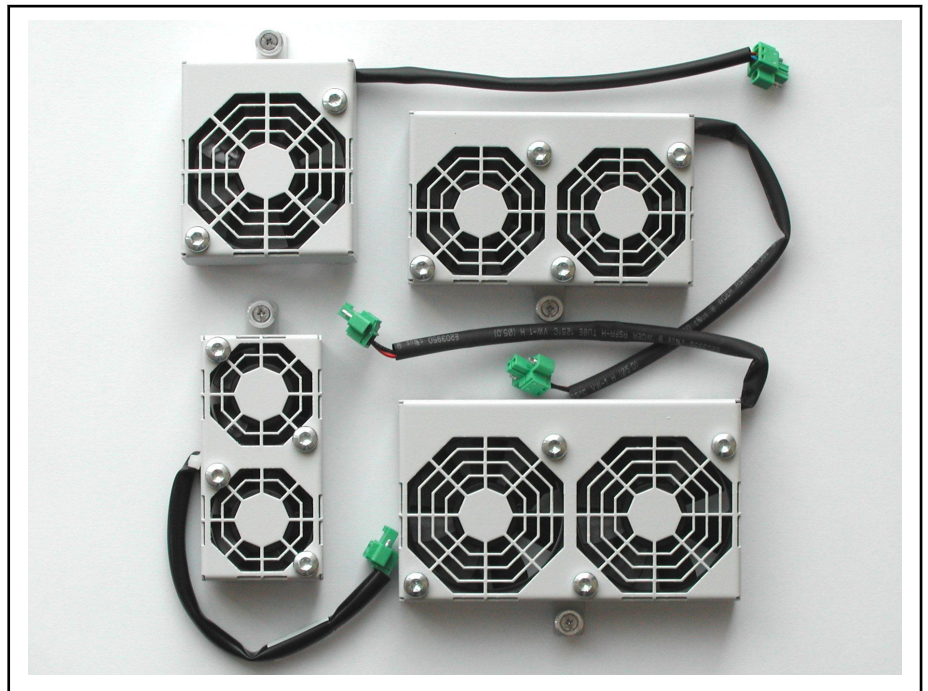


Fig. 21-1: Examples of NY4922 fan unit types

21.2 Available fan unit types

A specific fan unit type is available depending on the type (size) of the system housing, see [tab. 21-1 "Fan units and accompanying NYCe 4000 system housings"](#) on page 161.

Fan unit type	Type code	Order code	System housing
NY4922/00	NYA04.1-FAN-1DRV-NY4922/00	R911328062	NY4013 and NY4079
NY4922/10	NYA04.1-FAN-2DRV-NY4922/10	R911325083	NY4023 and NY4074
NY4922/20	NYA04.1-FAN-3DRV-NY4922/20	R911172220	NY4033 and NY4063
NY4922/30	NYA04.1-FAN-4DRV-NY4922/30	R911328063	NY4043
NY4922/50	NYA04.1-FAN-5DRV-NY4922/50	R911325084	NY4053

Tab. 21-1: Fan units and accompanying NYCe 4000 system housings

21.3 Identification

The fan unit can be identified by the label on the metal housing.

NY4922: Fan Units

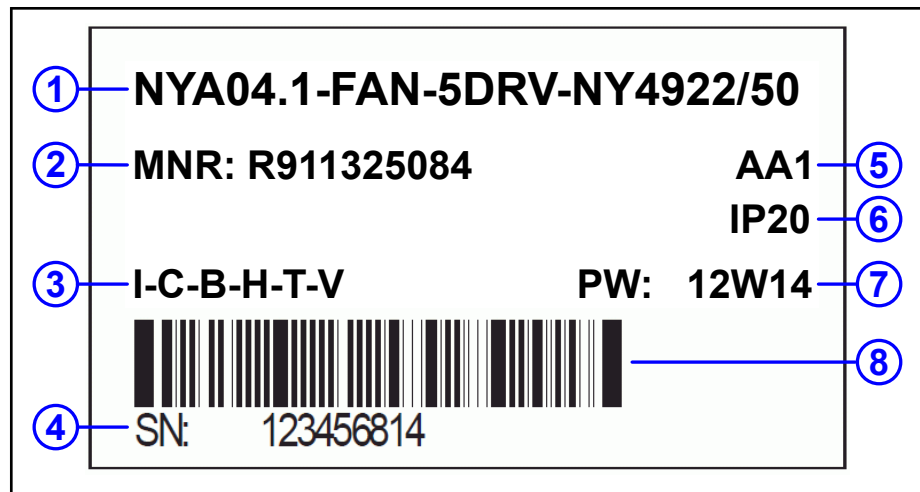


Fig. 21-2: Identification fields on the label

Field number	Explanation
1	Type code
2	Parts number
3	Test marking
4	Serial number
5	Version level and status
6	Degrees of protection provided by enclosure
7	Date of manufacture (yyWwww)
8	Bar code

Tab. 21-2: Fields of the fan unit identification label

The connection cable attached to the fan unit has a Phoenix Contact plug. The plug connects to the 2-pin header marked "FAN" on the base plate of the system housing.

21.4 Mechanical dimensions of the fan units

The dimensions of the fan units are the following.

Fan unit type	Width	Height	Depth	Weight
NY4922/00	44 mm	26.15 mm	103 mm	217 gr
NY4922/10	63 mm	25.40 mm	87 mm	196 gr
NY4922/20	84 mm	26.15 mm	106 mm	285 gr
NY4922/30	104 mm	25.40 mm	77 mm	291 gr
NY4922/50	124 mm	25.40 mm	87 mm	263 gr

Tab. 21-3: Dimensions of the fan units

You can see the dimensions of the fan units in the following views.

NY4922: Fan Units

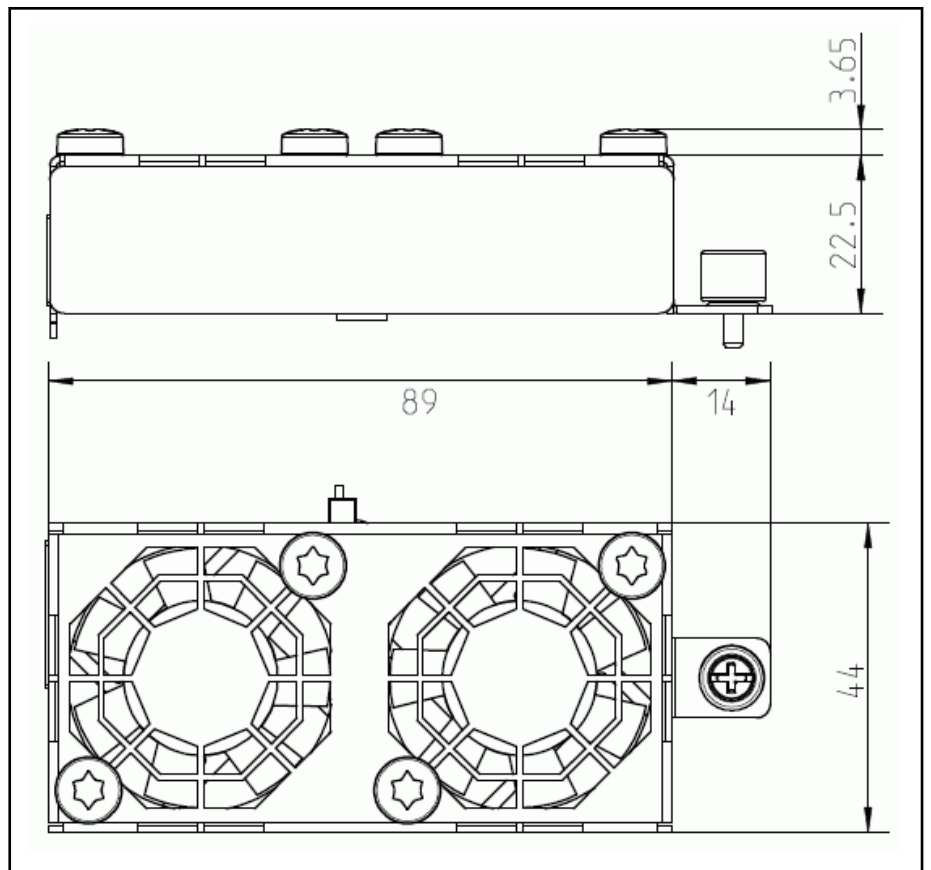


Fig. 21-3: Dimensions of the NYA04.1-FAN-1DRV-NY4922/00

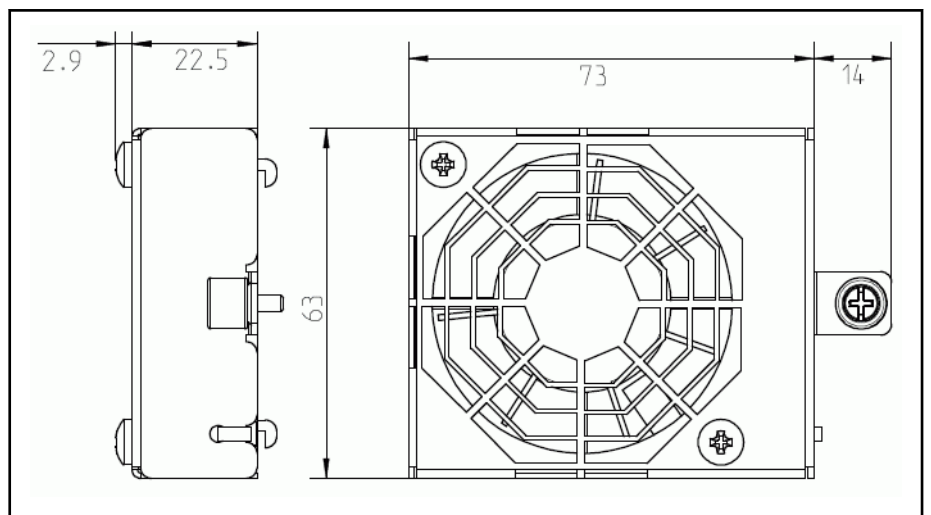


Fig. 21-4: Dimensions of the NYA04.1-FAN-2DRV-NY4922/10

NY4922: Fan Units

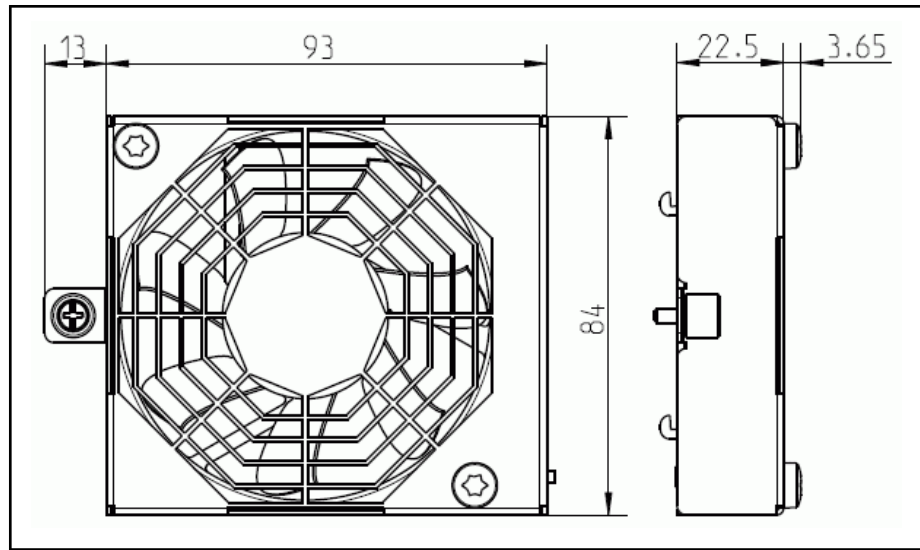


Fig. 21-5: Dimensions of the NYA04.1-FAN-3DRV-NY4922/20

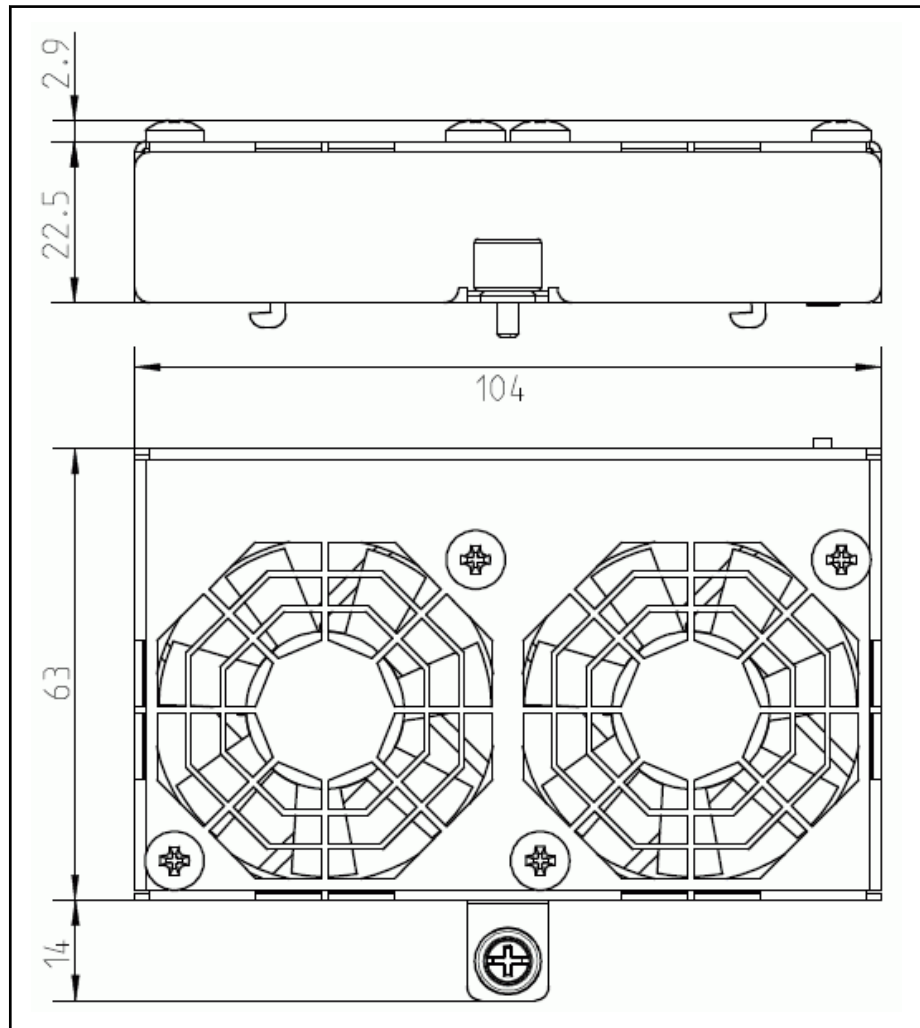


Fig. 21-6: Dimensions of the NYA04.1-FAN-4DRV-NY4922/30

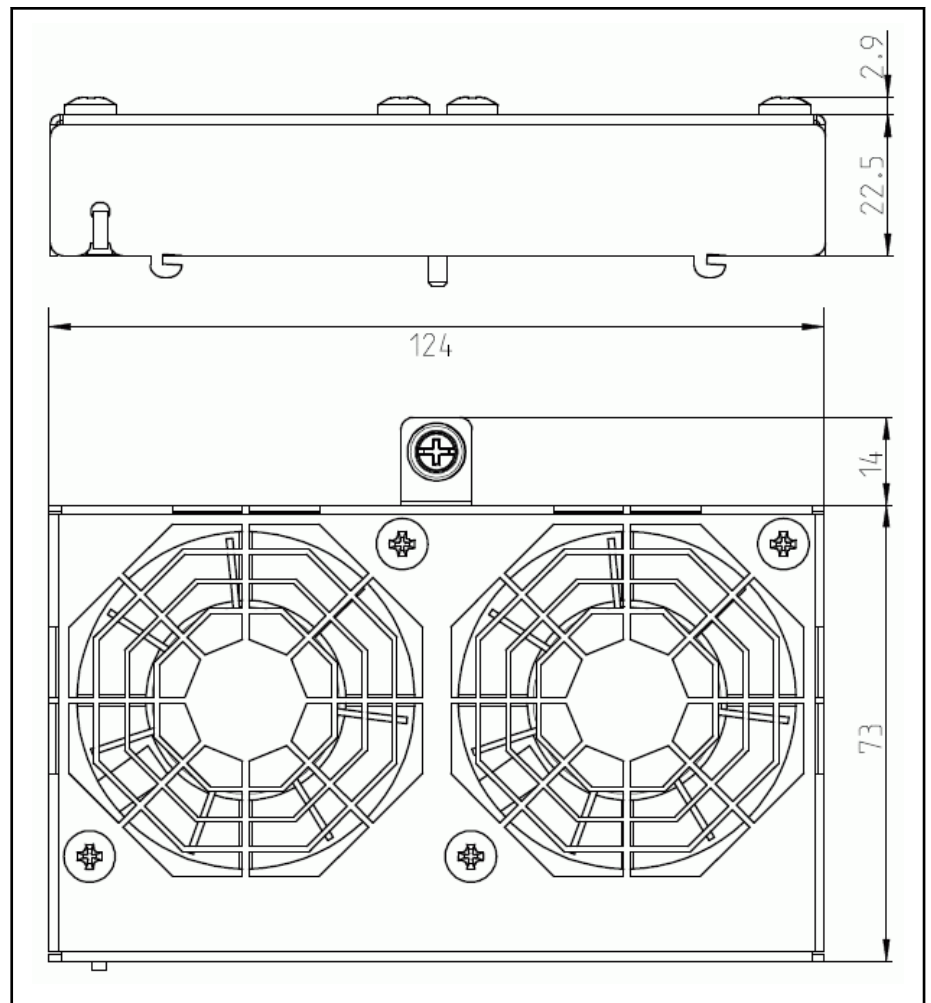


Fig. 21-7: Dimensions of the NYA04.1-FAN-5DRV-NY4922/50

21.5 Installation of the fan unit on the system housing



Depending on the accessibility of the bottom side of the system housing after installation of the system housing inside a machine, it is advised to install the fan unit module on the system housing before the system housing is installed in the machine.

NOTICE

Damage to components may occur if power is applied during installation or removal.

- Make sure power supplies are switched off before installation or removal of the fan unit.
- Do not apply power until the fan unit is installed.

Do the following steps to install the fan unit on the system housing.

1. Install the fan unit ① on the bottom of the module holder ② placing the two hooks ③ into the slits ④ of the module holder of the system housing.

NY4922: Fan Units

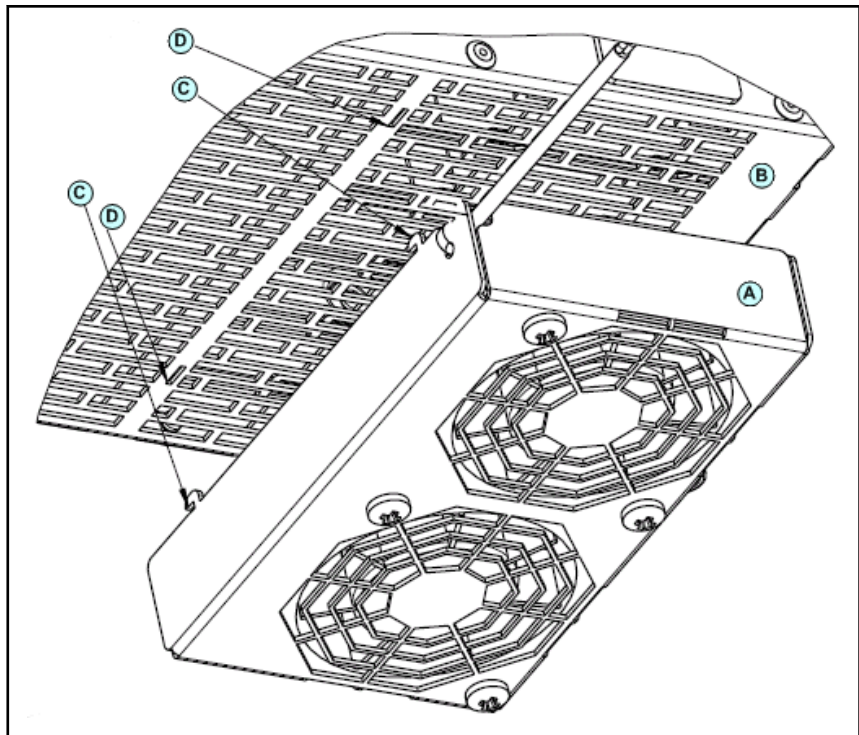



Fig. 21-8: Fan unit installation on the system housing - step 1

2. Tighten the knurled screw .

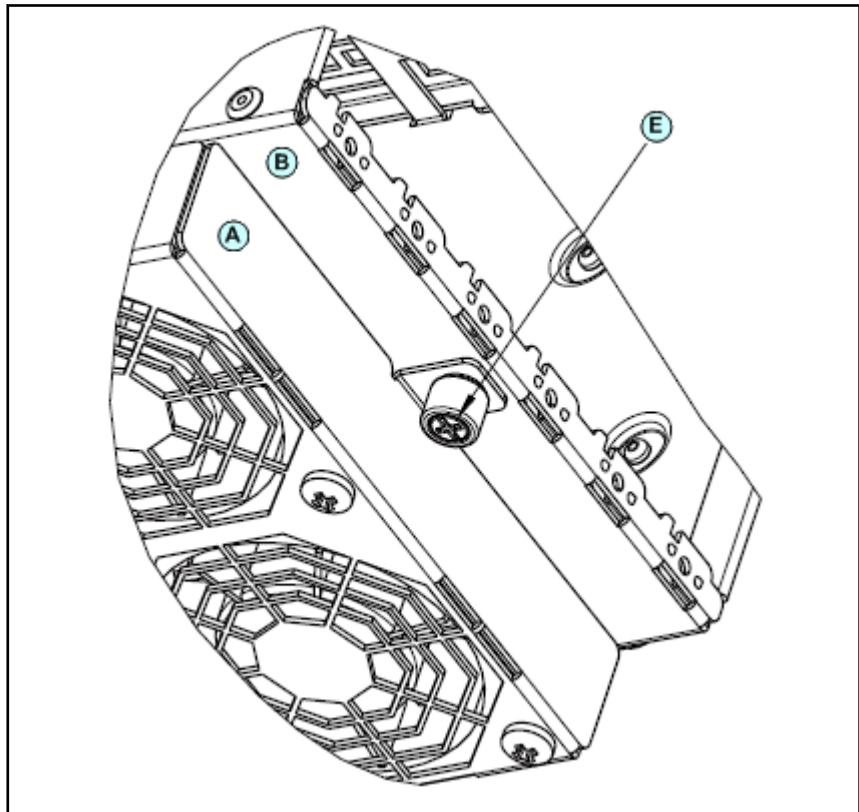


Fig. 21-9: Fan unit installation on the system housing - step 2

3. Connect plug ⑥ of the fan unit in the header marked "FAN" on the base plate of the system housing.

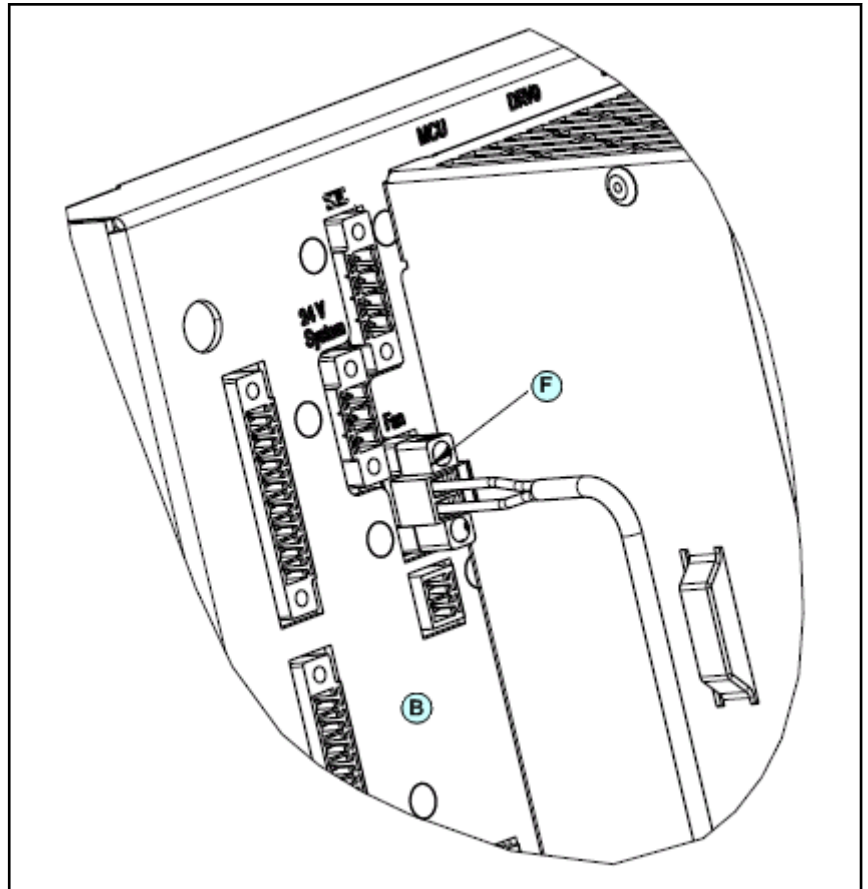


Fig. 21-10: Fan unit installation on the system housing - step 3

NOTICE

Damage to components may occur if the plug is connected in the wrong header.

Make sure that the plug of the fan unit is connected in the header marked "FAN". The header next to the "FAN" header, marked "CAP0", should never be used to connect the fan unit.

Minimum tightening torque of the screws of the plug is 1,94 lbs*inch (0,22 Nm), maximum tightening torque is 2,21 lbs*inch (0,25 Nm).

21.6 Removal of the fan unit

First, disconnect all drive power supply plugs ("DPx" and "DP NY4130 x"). Make sure that (optional) capacitors in the system are fully discharged. Then disconnect the 24V System power supply plug.

Do the following steps to remove the fan unit from the system housing, refer to the figures in [chapter 21.5 "Installation of the fan unit on the system housing"](#) on page 165.

1. Disconnect the plug ⑥ of the fan unit from the system housing.

NY4922: Fan Units

2. Loosen the knurled screw ⑥.
3. Move the hooks ③ of the fan unit ① out of the slits ④ of the module holder ②.

21.7 Commissioning

The fan unit is connected to the header marked with the text "FAN" on the base plate of the system housing.

21.8 Maintenance

The fan unit has no special maintenance requirements.

22 NY4950: IEEE 1394b Cables and Chokes

The cable used between the PC and the NY4110 MCU, and between nodes with an NY4110, is also known as "FireWire cable". The following cables are available.

Identification	Cable length	Connector on cable	Part number and ordering code
NY4950	0.5 meter	straight	R911318966 NYA04.1-1394B-CABLE-B-B-00.5M-NY4950
NY4950/10	1.0 meter	straight	R911318967 NYA04.1-1394B-CABLE-B-B-01.0M-NY4950/10
NY4950/20	2.0 meter	straight	R911318968 NYA04.1-1394B-CABLE-B-B-02.0M-NY4950/20
NY4950/30	4.5 meter	straight	R911318969 NYA04.1-1394B-CABLE-B-B-04.5M-NY4950/30

Tab. 22-1: IEEE 1394b cables



Fig. 22-1: IEEE 1394b cable and NY4950/99 chokes



Every IEEE 1394b cable must be installed with NY4950/99 chokes as close as possible to the connector at both ends to prevent frequency radiation from the environment to disturb the communication signals in the cable. Part number of the choke is R911322874, ordering code is NYA04.1-CHOKES-10PCS-1394B-NY4950/99 (set of 10 chokes).

23 NY4951: LMS sensor and shared sensor cables

23.1 LMS sensor extension cables

The following LMS sensor connection (extension) cables are available. These cables have a male M8 connector at one end, and a female M8 connector at the other end.

Component name	Order number	Cable length	Short name
NYA04.1-SENSORCABLE-M-F-00.6M-NY4951/00	R911174517	0.6 m	NY4951/00
NYA04.1-SENSORCABLE-M-F-01.5M-NY4951/10	R911174518	1.5 m	NY4951/10
NYA04.1-SENSORCABLE-M-F-03.0M-NY4951/20	R911174519	3.0 m	NY4951/20
NYA04.1-SENSORCABLE-M-F-05.0M-NY4951/30	R911174520	5.0 m	NY4951/30
NYA04.1-SENSORCABLE-M-F-09.0M-NY4951/40	R911174521	9.0 m	NY4951/40

Tab. 23-1: Sensor extension cable male-female

23.2 Shared sensor cable

The following shared sensor connection cable is available. The cable has a male M8 connector at both ends.

Component name	Order number	Cable length	Short name
NYA04.1-SHARED-CABLE-M-M-01.0M-NY4951/70	R911174516	1.0 m	NY4951/70

Tab. 23-2: Shared sensor cable male-male



If the distance between NY4074 or NY4079 system housings is too large for the NY4951/70 shared sensor cable, you can extend the length with a suitable LMS sensor extension cable, see [chapter 23.1 "LMS sensor extension cables" on page 171](#).

23.3 Connection

NOTICE

LMS sensor will be damaged if M8 connector is plugged not observing keying.

- Observe the key in the socket and connector.
- Do not plug the connector into the socket using excessive force.

NY4951: LMS sensor and shared sensor cables

NOTICE

LMS sensor may be damaged if (dis)connected while power is applied.

Make sure power supplies are switched off before connecting or disconnecting the LMS sensor connector.

Tightening torque of the M8 connector is 0.2 Nm.

23.4 Cable specifications

Ambient conditions		
	Degree of protection	IP65
		IP67
General		
	Rated voltage	30V DC, 30V AC
	Rated current at 40 °C	1.5A
	Insertion/withdrawal cycles	≥ 100
Material		
	Flammability rating according to UL 94	HB
Cable		
	Cable type	PUR halogen-free
	Conductor cross section	8x 0.14 mm ² (signal line)
	AWG signal line	26
	Thickness, insulation	≥ 0.21 mm (signal line)
		≥ 0.38 mm (outer cable sheath)
	Shielding	Tinned copper braided shield
	Smallest bending radius, fixed installation	29.5 mm
	Smallest bending radius, movable installation	59 mm
	Number of bending cycles	2000000
	Ambient temperature (operating)	-25 °C ... 80 °C

Tab. 23-3: Cable specifications

NY4980: LMS Hall sensor module

24 NY4980: LMS Hall sensor module

24.1 Available Hall sensor modules

The following Hall sensors are available.

Component name	Order number
NYA04.1-LMS-HALLSENSOR-24-180-NY4980/00	R911173569
NYA04.1-LMS-HALLSENSOR-24-90-NY4980/10	R911173570

Tab. 24-1: Hall sensor modules

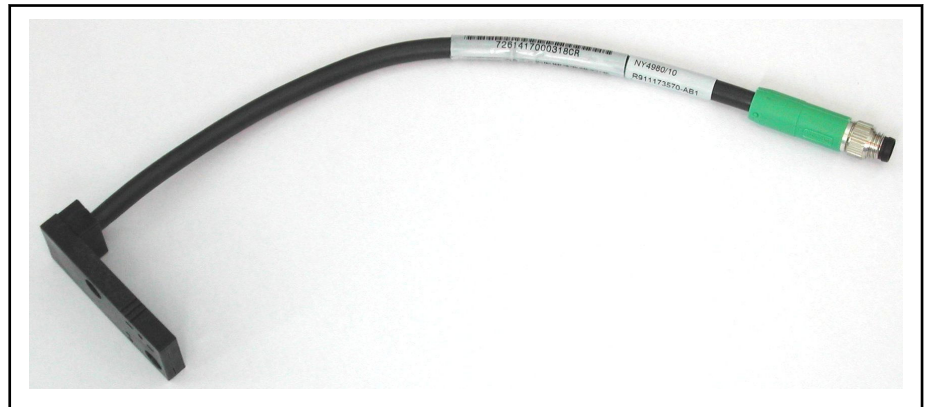


Fig. 24-1: NY4980/10 Hall sensor module

Both Hall sensor modules use the magnet plate with a pole pitch of 24 mm. The Hall sensor modules can be mounted on the coil or on the track. The attached cable length of both Hall sensor modules is approximately 20 cm.

NY4980: LMS Hall sensor module

24.2 Hall sensor dimensions

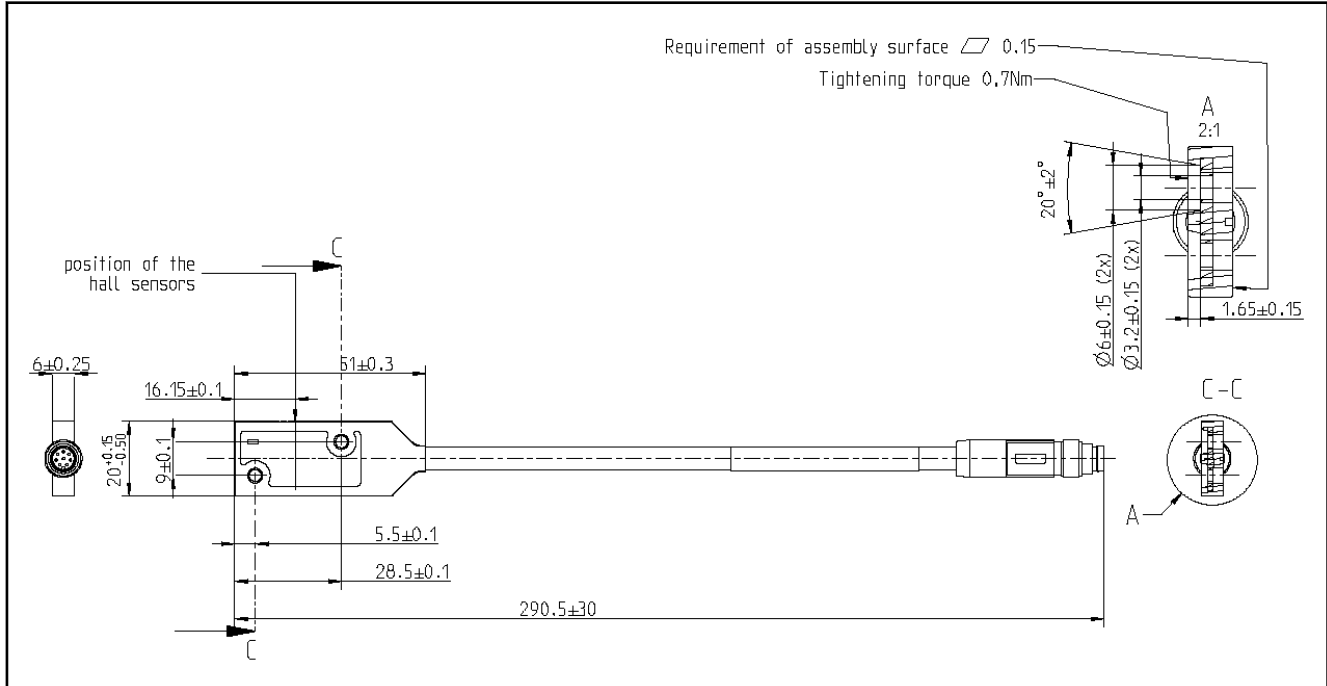


Fig. 24-2: Dimensions of the NY4980/00

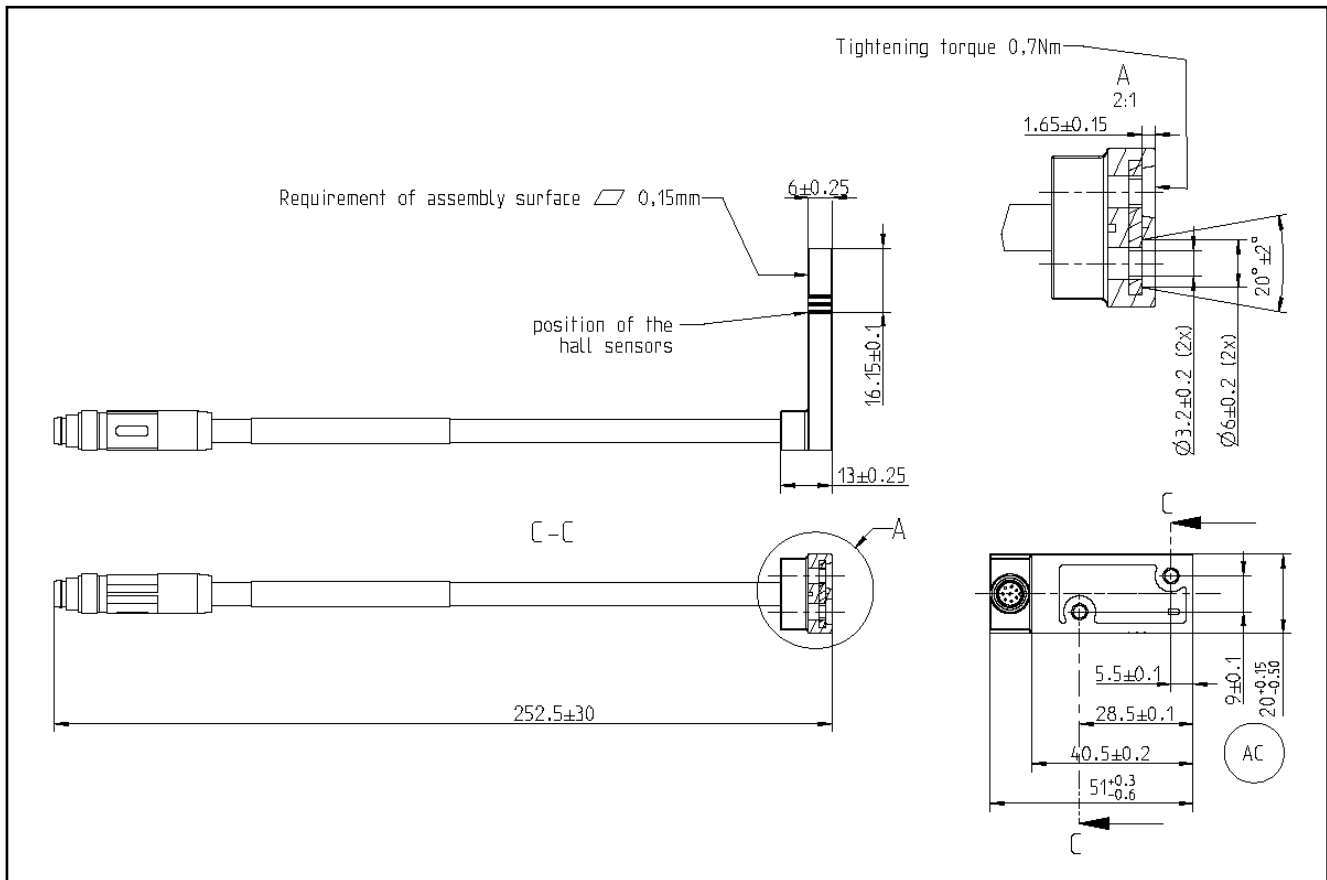


Fig. 24-3: Dimensions of the NY4980/10

24.3 Hall sensor specifications

- Nominal air gap distance: 6.5 ± 0.5 mm.
- Absolute accuracy: ± 300 μm .
- Repeatable accuracy: ± 20 μm .
- Resolution: 5 - 10 μm .
- Signal period: 24 mm.
- Power supply: +5 Vdc and -5 Vdc, typical < 5 mA (< 50 mW).
- Output voltage: 8 V_{tt} nominal, differential SinCos signal (at an air gap of 6 mm and room temperature).
- Cable connection: anchored in casting with M8 male connector.
Minimum bending radius ≥ 29.5 mm (fixed installation).
Minimum bending radius ≥ 59 mm (movable installation).
Maximum number of bending cycles: 2000000.
- Operating temperature: 5 °C .. 80 °C.



Degradation of the magnet plate occurs at high temperatures. No problems are expected when the environmental temperature of the magnet plate is kept below 40 °C.

For connection cable specifications see [chapter 23.4 "Cable specifications" on page 172](#).

24.4 Hall sensor connection

NOTICE

Hall sensor will be damaged if M8 connector is plugged not observing keying.

- Observe the key in the socket and connector.
- Do not plug the connector into the socket using excessive force.

NOTICE

Hall sensor may be damaged if (dis)connected while power is applied.

Make sure power supplies are switched off before connecting or disconnecting the Hall sensor connector.

Both Hall sensor modules have a short connection cable with an M8 male connector. Extension cables to connect the Hall sensor module to the NY4074 or NY4079 system housing are available in several lengths, see [chapter 23.1 "LMS sensor extension cables" on page 171](#) for detailed information.



Maximum sensor cable length is 10 m.

Tightening torque of the M8 connector is 0.2 Nm.

NY4980: LMS Hall sensor module

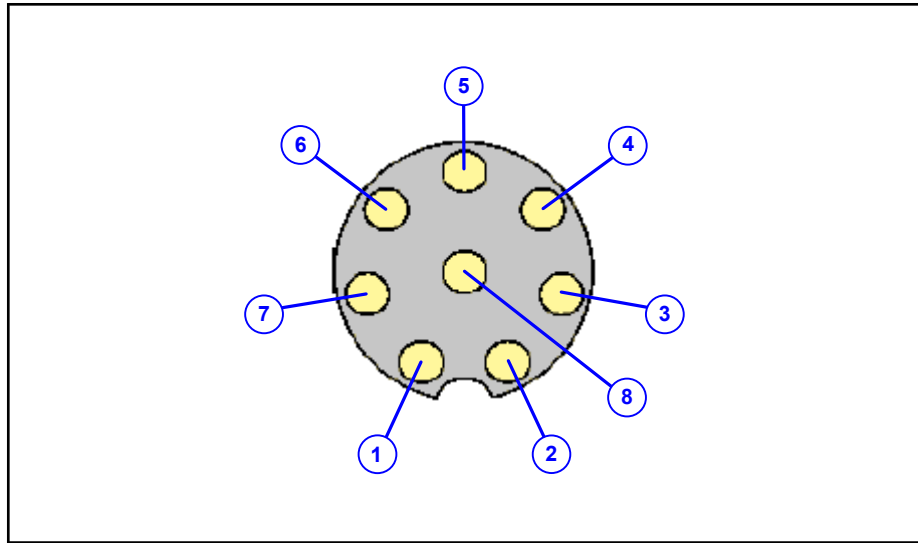


Fig. 24-4: LMS Hall sensor connector pinout

The connector pin assignment is given in [tab. 24-2 "LMS Hall sensor connection pinout"](#) on page 176.

Pin	Hall sensor connections
1	sine +
2	sine -
3	cosine +
4	cosine -
5	+5V
6	GND
7	-5V
8	GND
housing	cable shielding

Tab. 24-2: LMS Hall sensor connection pinout

Legacy support

The NY4980/00 and NY4980/10 are fully compatible with the NY4960 LMS-MUX used to connect the Hall sensor modules to the NY4073 and NY4078 system housings. However, a 15-pin sub-D connector is used on the NY4960 LMS-MUX. The following adapter cable is required to connect the NY4980 Hall sensor to the NY4960 LMS-MUX.

M8 (female) connector pin number	15-pin sub-D male connector pin number
1	1
2	9
3	2
4	10

NY4980: LMS Hall sensor module

M8 (female) connector pin number	15-pin sub-D male connector pin number
5	4
6	3
7	11
8	3
housing shielding	housing shielding

Tab. 24-3: Adapter cable M8 female / 15-pin sub-D male

The NY4980 sensor with the adapter cable can be connected to connector X1, X2, X3, X4, or X5 on the LMS-MUX, depending on the desired sensor number in the track. See the NYCe 4000 Legacy Components Manual, chapter "NY4960: LMS-MUX for 2 axes" for detailed information.

24.5 Hall sensor installation

Tightening torque of the screws is 0.4 ... 0.7 Nm.



It is mandatory that the surface of the sensor, especially at the opposite end of the cable connection side, is completely supported by the frame onto which the sensor is mounted.

If a screw with nut is used to mount the NY4980/10, there is not much space to hold the nut at the side where the cable exits the sensor (at 90 degrees angle). It is advised to use a tapped hole in the frame to mount the sensor. Further, make sure that the nut (if used) does not protrude the housing of the sensor, as this may affect the adjustment.

25 NY4981: LMS MR sensor module

25.1 Available MR sensor modules

The NY4981 MR sensor module is based on magneto-resistive sensing elements. The MR sensor module is an alternative for the NY4980 Hall sensor module. The NY4981 offers improved position accuracy compared with the NY4980. The MR sensor works in combination with an NY4985 magnetic scale, whereas the Hall sensor works in combination with the motor magnets. The MR sensor module uses the same interface as the Hall sensor module to the NY4074 and NY4079 system housing. The following MR sensor module is available.

Component name	Order number
NYA04.1-LMS-MRSENSOR-180-NY4981/00	R911174592

Tab. 25-1: MR sensor module



Fig. 25-1: NY4981/00 MR sensor module and NY4985 magnetic scale

The MR sensor module uses a magnetic scale with a pole pitch of 5 mm. The magnetic scale is mounted on a carrier, and each carrier has its own magnetic scale. The location of the magnetic scale can be chosen freely, but external magnetic fields must not affect the magnetic field of the magnetic scale. The MR sensor modules can be mounted on the track. The attached cable length of the MR sensor module is approximately 20 cm.

NY4981: LMS MR sensor module

25.2 MR sensor dimensions

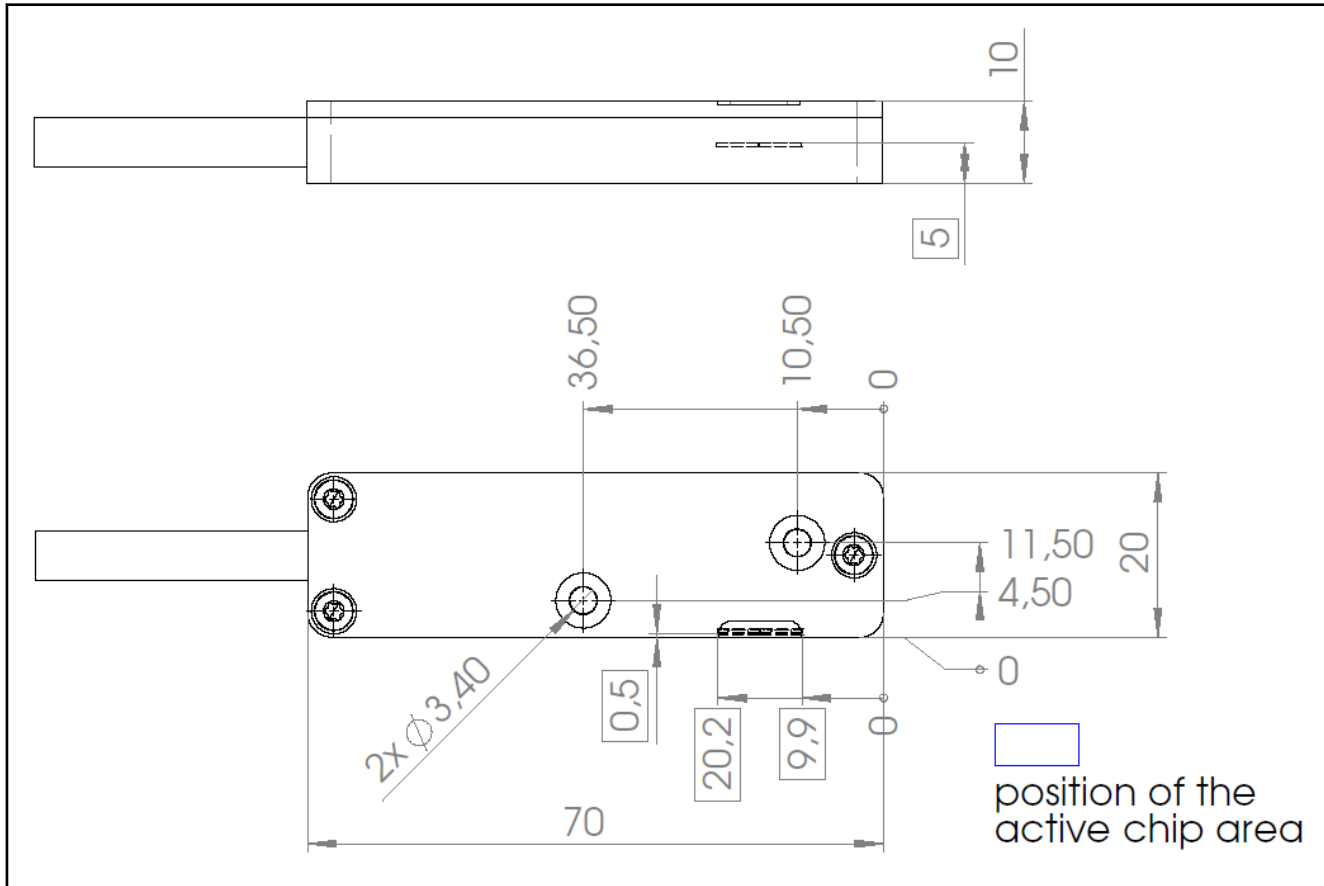


Fig. 25-2: NY4981/00 dimensions

25.3 MR sensor specifications

- The air gap distance between MR sensor and magnetic scale must be between 0.3 mm and 1.9 mm.
- Positioning
 - Absolute positioning accuracy (with NY4985): $\pm 22 \mu\text{m}$.
 - Positioning repeatability (with NY4985): $\pm 5 \mu\text{m}$.

Specified accuracy and repeatability is achieved when the air gap is $< 1.5 \text{ mm}$ and MR sensors are $(M - I * 15)$ mm apart, where M is the length of the magnetic scale and I is the length of one magnetic scale pole pitch in mm.

- Power supply: +5 Vdc / -5 Vdc $\pm 10\%$, typical $< 5 \text{ mA}$ ($< 50 \text{ mW}$).
- Cable connection: anchored in casting with M8 male connector.
Minimum bending radius $\geq 29.5 \text{ mm}$ (fixed installation).
Minimum bending radius $\geq 59 \text{ mm}$ (movable installation).
Maximum number of bending cycles: 2000000.
- Operating temperature: $5 \text{ }^\circ\text{C} \dots 70 \text{ }^\circ\text{C}$.

For connection cable specifications see [chapter 23.4 "Cable specifications"](#) on page 172.

25.4 MR sensor connection

NOTICE

MR sensor will be damaged if M8 connector is plugged not observing keying.

- Observe the key in the socket and connector.
- Do not plug the connector into the socket using excessive force.

NOTICE

MR sensor may be damaged if (dis)connected while power is applied.

Make sure power supplies are switched off before connecting or disconnecting the MR sensor connector.

The MR sensor module has a short connection cable with an M8 male connector. Extension cables to connect the MR sensor module to the NY4074 or NY4079 system housing are available in several lengths, see [chapter 23.1 "LMS sensor extension cables" on page 171](#) for detailed information.



Maximum sensor cable length is 10 m.

Tightening torque of the M8 connector is 0.2 Nm.

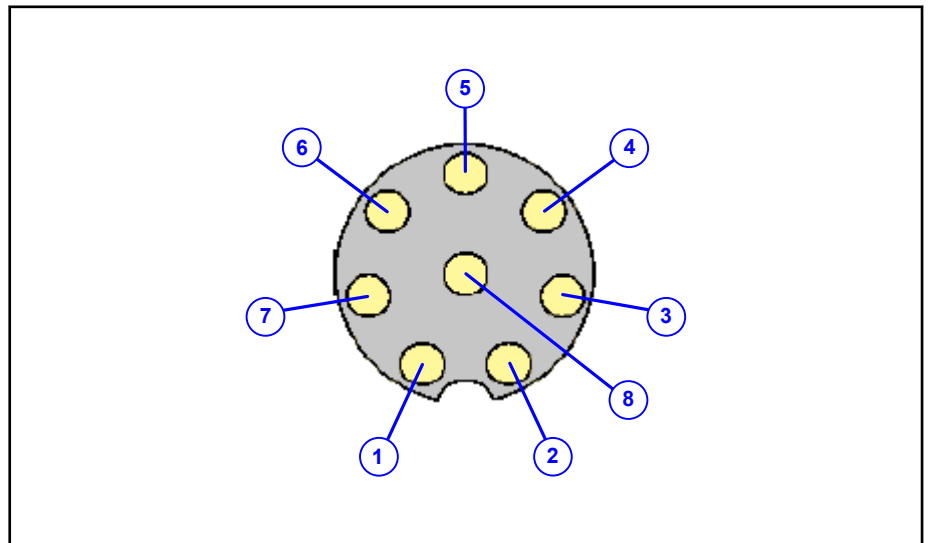


Fig. 25-3: LMS MR sensor connector pinout

The connector pin assignment is given in [tab. 25-2 "LMS MR sensor connection pinout" on page 181](#).

Pin	MR sensor connections
1	sine +
2	sine -

NY4981: LMS MR sensor module

Pin	MR sensor connections
3	cosine +
4	cosine -
5	+5V
6	GND
7	-5V
8	GND
housing	cable shielding

Tab. 25-2: LMS MR sensor connection pinout

Legacy support

The NY4981/00 is compatible with the NY4960 LMS-MUX used to connect the MR sensor modules to the NY4073 and NY4078 system housings. However, a 15-pin sub-D connector is used on the NY4960 LMS-MUX. The following adapter cable is required to connect the NY4981 MR sensor to the NY4960 LMS-MUX.

M8 (female) connector pin number	15-pin sub-D male connector pin number
1	1
2	9
3	2
4	10
5	4
6	3
7	11
8	3
housing shielding	housing shielding

Tab. 25-3: Adapter cable M8 female / 15-pin sub-D male

The NY4981 MR sensor with the adapter cable can be connected to connector X1, X2, X3, X4, or X5 on the LMS-MUX, depending on the desired sensor number in the track. See the NYCe 4000 Legacy Components Manual, chapter "NY4960: LMS-MUX for 2 axes" for detailed information.

25.5 MR sensor installation




The MR sensor must be mounted on a solid frame, to avoid vibrations.

- The mounting screws for the MR sensor must have a countersunk head and be made of stainless steel.
- The head of the screws must not protrude the surface of the sensor.
- The screw must be in the mounting bracket for at least 4 turns.
- Tightening torque is 0.4 Nm.

Mounting guide lines

NY4981: LMS MR sensor module

For optimal performance, mount the NY4981 MR sensor module as described in [tab. 25-4 "Mounting guide lines for the NY4981 MR sensor module" on page 183.](#)

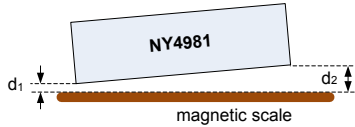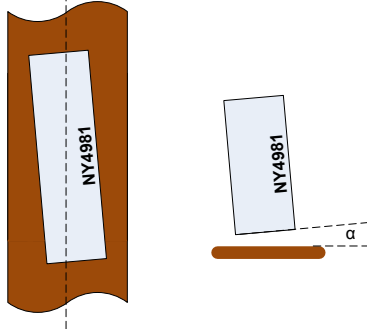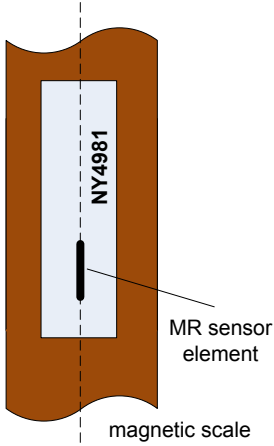	<ul style="list-style-type: none"> Mount the MR sensor module without any inclination with respect to the magnetic scale, that is $d_1 = d_2$, in order to obtain a constant air gap.
	<ul style="list-style-type: none"> Mount the MR sensor module without an angle in parallel and perpendicular with respect to the magnetic scale.
	<ul style="list-style-type: none"> Mount the MR sensor module so that the MR sensor element is within ± 1 mm of the center of the magnetic scale.

Tab. 25-4: Mounting guide lines for the NY4981 MR sensor module

26 NY4985: Magnetic scale

26.1 Introduction

The NY4985 magnetic scale is used in combination with the NY4981 MR sensor module. The NY4985 magnetic scale has a pole pitch of 5 mm. The magnetic scale is mounted on a carrier, and each carrier has its own magnetic scale. The location of the magnetic scale can be chosen freely, but external magnetic fields must not affect the magnetic field of the magnetic scale.



Fig. 26-1: NY4985 magnetic scale and NY4981/00 MR sensor module

26.2 Available magnetic scales

The following magnetic scales are available.

Component name	Order number
NYA04.1-LMS-MAGNETSCALE-5-XXXX-NY4985 Magnetic scale with a customer-ordered length. XXXX specifies the length in [mm]. The range of XXXX is 0150 .. 1000 mm in increments of 5 mm.	R91117yyyy

Tab. 26-1: Magnetic scales

26.3 Magnetic scale dimensions

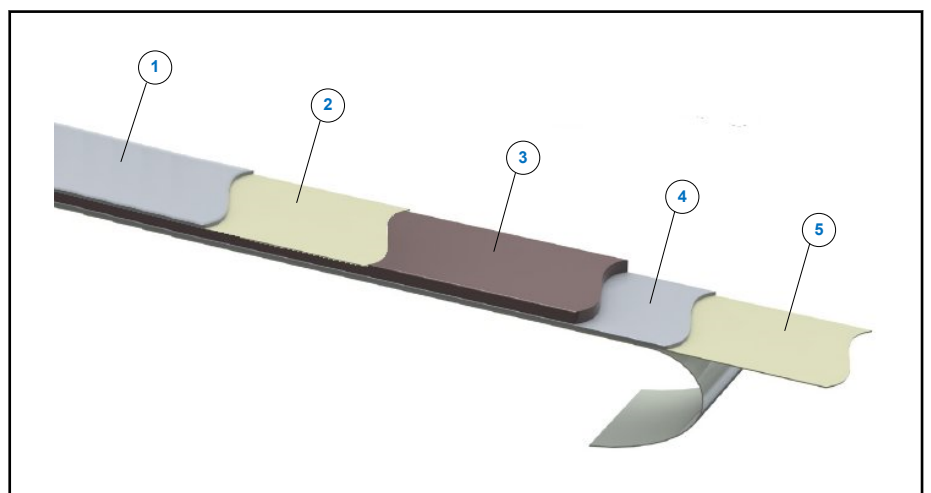


Fig. 26-2: NY4985 magnetic scale

NY4985: Magnetic scale

Item	Description	Thickness
1	Stainless steel cover tape	0.1 mm
2	Adhesive tape	0.13 mm
3	Magnetic tape	1.0 mm
4	Stainless steel carrier tape	0.3 mm
5	Adhesive tape	0.13 mm
	Total thickness	1.66 mm ±0.15 mm

Tab. 26-2: Dimensions of the NY4985 magnetic scale

Width of the magnetic scale 10 ± 0.2 mm.

26.4 Magnetic scale specifications

- Pole pitch: 5 mm.
- Accuracy: $\pm 10 \mu\text{m/m}$.
- Expansion coefficient: $\sim 17 \times 10^{-6}/^\circ\text{K}$.
- Minimum bending radius: 65 mm.
- Operating temperature: $5^\circ\text{C} \dots 70^\circ\text{C}$.

26.5 Magnetic scale installation guide lines

The mounting of the magnetic scale depends on customer-specific factors. Therefore, only general guide lines are presented for the installation of the magnetic scale on a carrier.



- Do not damage the magnetic scale with sharp objects such as a knife, saw or screwdriver.
- Keep away magnetic materials, such as a screwdriver or a magnet, from the magnetic scale.

Before you begin

Make sure that the surface of the carrier where you want to install the magnetic scale is thoroughly cleaned and degreased.

Allow sufficient time to acclimatize the carrier and the magnetic scale to the installation environment.

Put markings on the carrier where the magnetic scale must be installed.

Installation of the magnetic scale



Position the magnetic scale on the carrier.

Remove the adhesive protection foil as you glue the magnetic scale onto the carrier.



The magnetic scale has a north pole magnet at one end and a south pole magnet at the other end. Make sure that the orientation of the magnetic scale is identical for all carriers in the LMS.

NY4985: Magnetic scale

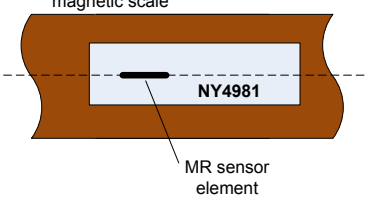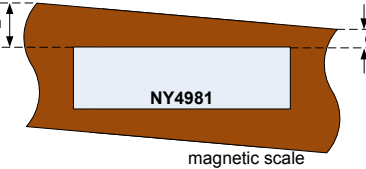 <p>magnetic scale</p> <p>MR sensor element</p> <p>NY4981</p>	<ul style="list-style-type: none">• Make sure that the MR sensor element is within ± 1 mm of the center of the magnetic scale.
 <p>NY4981</p> <p>magnetic scale</p> <p>d_1</p> <p>d_2</p>	<ul style="list-style-type: none">• Make sure that the magnetic scale is installed in parallel with the NY4981 MR sensor module, that is $d_1 = d_2$.

Tab. 26-3: Correct positioning of the magnetic scale

Apply firm finger pressure via a clean lint-free cloth along the length of the magnetic scale to ensure complete adhesion.

After the installation Clean the magnetic scale with cleaning wipes, or a clean, dry, lint-free cloth.

27 LMS coils and magnet plates

27.1 TM series coils and magnet plates

The following TM series coils are available.

Component name	Order number
NYA04.1-LMS-COIL-UNIT-TM3S-3685075	R911343771
NYA04.1-LMS-COIL-UNIT-TM3Z-3685533	R911374471
NYA04.1-LMS-COIL-UNIT-TM6S-3685076	R911343770
NYA04.1-LMS-COIL-UNIT-TM6Z-3685300	R911374470
NYA04.1-LMS-COIL-UNIT-TM12S-3685078	R911343769
NYA04.1-LMS-COIL-UNIT-TM18N-3685500	R911384027
NYA04.1-LMS-COIL-UNIT-TM18S-3685519	R911384029

Tab. 27-1: TM series coils

LMS coils and magnet plates

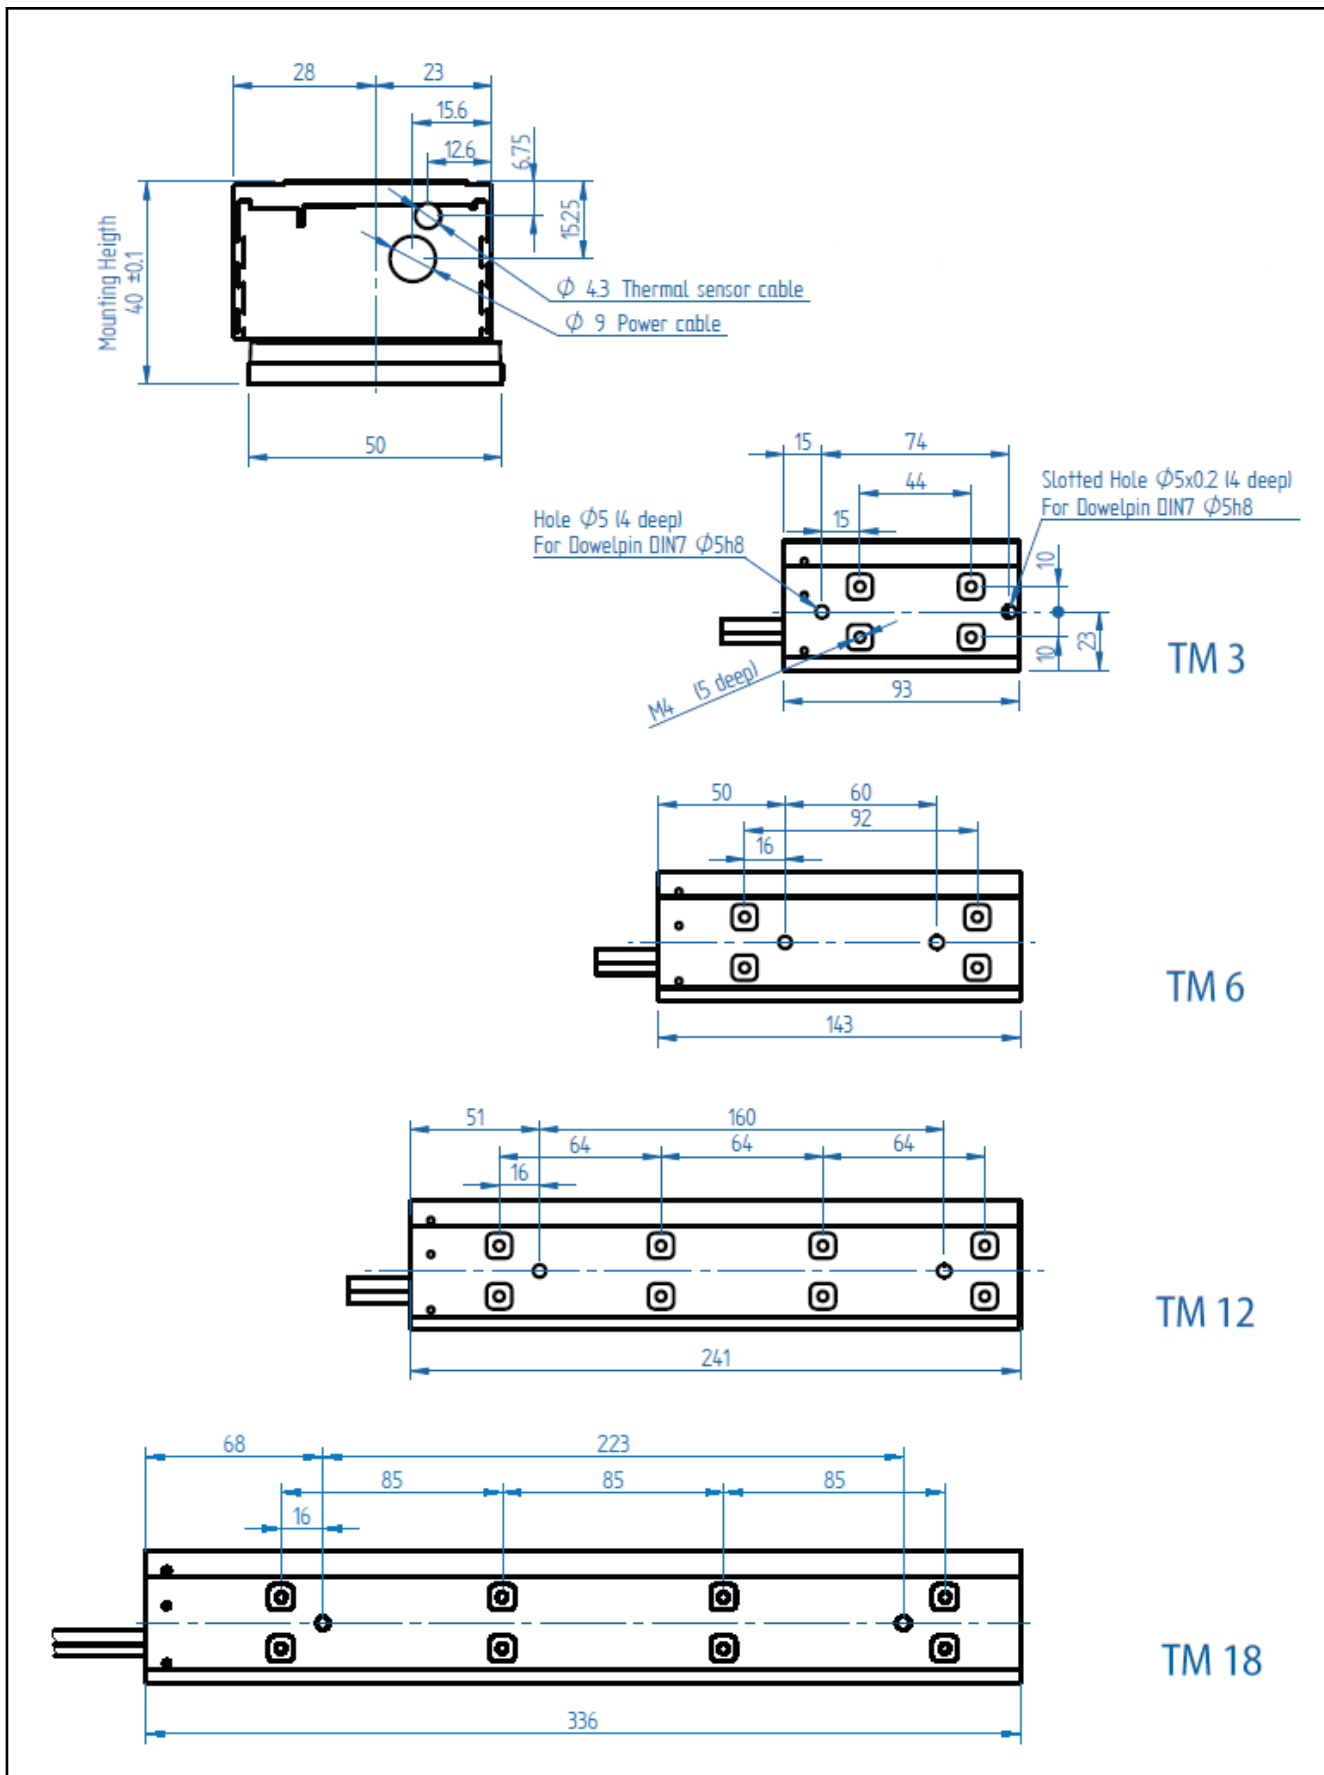


Fig. 27-1: TM series coils

LMS coils and magnet plates

	Parameter	Remarks	Symbol	Unit	TM3	TM3Z
Performance	Winding type				S	Z
	Motor type, max voltage ph-ph				3-phase synchronous Iron core, 400Vac rms (600Vdc)	
	Ultimate Force @ 10°C/s increase	magnet @ 25°C	Fu	N	120	120
	Peak Force @ 6°C/s increase	magnet @ 25°C	Fp	N	105	105
	Continuous Force*	coils @ 100°C	Fc	N	60	60
	Maximum Speed**	@ 600 V	vmax	m/s	11.6	36.6
	Motor Force Constant	mount. sfc. @ 20°C	K	N/Arms	39.7	12.9
	Motor Constant	coils @ 25°C	S	N ² /W	95	95
Electrical	Ultimate Current	magnet @ 25°C	Iu	Arms	4.1	12.6
	Peak Current	magnet @ 25°C	Ip	Arms	3.1	9.5
	Maximum Continuous Current*	coils @ 100°C	Ic	Arms	1.5	4.7
	Back EMF Phase-Phasepeak		Bemf	V / m/s	32.4	10.5
	Resistance per Phase*	coils @ 25°C ex. cable	Rf	Ω	5.32	0.56
	Induction per Phase	I < 0.6 Ip	Lf	mH	34.59	3.65
	Electrical Time Constant*	coils @ 25°C	τe	ms	6.5	6.5
Thermal	Maximum Continuous Power Loss	all coils	Pc	W	49.3	49.3
	Thermal Resistance	coils to mount. sfc.	Rth	°C/W	1.5	1.5
	Thermal Time Constant*	to max. coil temp.	tth	s	75	75
	Temperature Cut-off / Sensor				PTC 1kΩ / KTY83-122	
Mechanical	Coil Unit Weight	ex. cables	W	kg	0.55	0.55
	Coil Unit Length	ex. cables	L	mm	93	93
	Motor Attraction Force	rms @ 0 A	Fa	N	300	300
	Magnet Pitch NN		τ	mm	24	24
	Cable Mass		m	kg/m	0.164	0.164
	Cable Type (Power)	length 3 m	d	mm (AWG)	8.3 (≥18)	
	Cable Type (Sensor)	length 3 m	d	mm (AWG)	4.3 (26)	
	Cable Life (Power FLEX)***	minimum			5,000,000 cycles	
	Bending Radius Static	minimum			4x cable diameter	
	Bending Radius Dynamic	minimum			10x cable diameter	

* These values are only applicable when the mounting surface is at 20°C and the motor is driven at maximum continuous current.

** Actual values depend on drive power voltage.

*** Depending on bending radius, velocity and acceleration.

Fig. 27-2: TM3 series coil specifications

LMS coils and magnet plates

	Parameter	Remarks	Symbol	Unit	TM6	TM6Z
Performance	Winding type				S	Z
	Motor type, max voltage ph-ph				3-phase synchronous Iron core, 400Vac rms (600Vdc)	
	Ultimate Force @ 10°C/s increase	magnet @ 25°C	Fu	N	240	240
	Peak Force @ 6°C/s increase	magnet @ 25°C	Fp	N	210	210
	Continuous Force*	coils @ 100°C	Fc	N	120	120
	Maximum Speed**	@ 600 V	vmax	m/s	11.6	36.5
	Motor Force Constant	mount. sfc. @ 20°C	K	N/Arms	39.7	12.9
	Motor Constant	coils @ 25°C	S	N ² /W	190	190
Electrical	Ultimate Current	magnet @ 25°C	Iu	Arms	8.2	25.1
	Peak Current	magnet @ 25°C	Ip	Arms	6.1	18.9
	Maximum Continuous Current*	coils @ 100°C	Ic	Arms	3.0	9.3
	Back EMF Phase-Phasepeak		Bemf	V / m/s	32.4	10.5
	Resistance per Phase*	coils @ 25°C ex. cable	Rf	Ω	2.66	0.28
	Induction per Phase	I < 0.6 Ip	Lf	mH	17.30	1.83
	Electrical Time Constant*	coils @ 25°C	τe	ms	6.5	6.5
	Thermal	Maximum Continuous Power Loss	all coils	Pc	W	98.5
	Thermal Resistance	coils to mount. sfc.	Rth	°C/W	0.75	0.75
	Thermal Time Constant*	to max. coil temp.	tth	s	75	75
	Temperature Cut-off / Sensor				PTC 1kΩ / KTY83-122	
Mechanical	Coil Unit Weight	ex. cables	W	kg	0.9	0.9
	Coil Unit Length	ex. cables	L	mm	143	143
	Motor Attraction Force	rms @ 0 A	Fa	N	500	500
	Magnet Pitch NN		τ	mm	24	24
	Cable Mass		m	kg/m	0.164	0.164
	Cable Type (Power)	length 3 m	d	mm (AWG)	8.3 (≥18)	
	Cable Type (Sensor)	length 3 m	d	mm (AWG)	4.3 (26)	
	Cable Life (Power FLEX)***	minimum			5,000,000 cycles	
	Bending Radius Static	minimum			4x cable diameter	
	Bending Radius Dynamic	minimum			10x cable diameter	

* These values are only applicable when the mounting surface is at 20°C and the motor is driven at maximum continuous current.

** Actual values depend on drive power voltage.

*** Depending on bending radius, velocity and acceleration.

Fig. 27-3: TM6 series coil specifications

LMS coils and magnet plates

	Parameter	Remarks	Symbol	Unit	TM12
Performance	Winding type				S
	Motor type, max voltage ph-ph				3-phase synchronous Iron core, 400Vac rms (600Vdc)
	Ultimate Force @ 10°C/s increase	magnet @ 25°C	Fu	N	480
	Peak Force @ 6°C/s increase	magnet @ 25°C	Fp	N	420
	Continuous Force*	coils @ 100°C	Fc	N	240
	Maximum Speed**	@ 600 V	vmax	m/s	11.6
	Motor Force Constant	mount. sfc. @ 20°C	K	N/Arms	39.7
	Motor Constant	coils @ 25°C	S	N ² /W	380
Electrical	Ultimate Current	magnet @ 25°C	Iu	Arms	16.3
	Peak Current	magnet @ 25°C	Ip	Arms	12.3
	Maximum Continuous Current*	coils @ 100°C	Ic	Arms	6.0
	Back EMF Phase-Phasepeak		Bemf	V / m/s	32.4
	Resistance per Phase*	coils @ 25°C ex. cable	Rf	Ω	1.33
	Induction per Phase	I < 0.6 Ip	Lf	mH	8.66
	Electrical Time Constant*	coils @ 25°C	te	ms	6.5
Thermal	Maximum Continuous Power Loss	all coils	Pc	W	197.1
	Thermal Resistance	coils to mount. sfc.	Rth	°C/W	0.38
	Thermal Time Constant*	to max. coil temp.	tth	s	75
	Temperature Cut-off / Sensor				PTC 1kΩ / KTY83-122
Mechanical	Coil Unit Weight	ex. cables	W	kg	1.6
	Coil Unit Length	ex. cables	L	mm	241
	Motor Attraction Force	rms @ 0 A	Fa	N	900
	Magnet Pitch NN		τ	mm	24
	Cable Mass		m	kg/m	0.18
	Cable Type (Power)	length 3 m	d	mm (AWG)	8.3 (≥18)
	Cable Type (Sensor)	length 3 m	d	mm (AWG)	4.3 (26)
	Cable Life (Power FLEX)***	minimum			5,000,000 cycles
	Bending Radius Static	minimum			4x cable diameter
	Bending Radius Dynamic	minimum			10x cable diameter

* These values are only applicable when the mounting surface is at 20°C and the motor is driven at maximum continuous current.

** Actual values depend on drive power voltage.

*** Depending on bending radius, velocity and acceleration.

Fig. 27-4: TM12 series coil specifications

LMS coils and magnet plates

Parameter	Remarks	Symbol	Unit	TM18	TM18
Performance				N	S
Winding type				3-phase synchronous Iron core, 400Vac rms (600Vdc)	
Ultimate Force @ 10°C/s increase	magnet @ 25°C	Fu	N	720	720
Peak Force @ 6°C/s increase	magnet @ 25°C	Fp	N	630	630
Continuous Force*	coils @ 100°C	Fc	N	360	360
Maximum Speed**	@ 600 V	vmax	m/s	4,5	10
Motor Force Constant	mount. sfc. @ 20°C	K	N/Arms	79	39
Motor Constant	coils @ 25°C	S	N2/W	570	570
Electrical					
Ultimate Current	magnet @ 25°C	Iu	Arms	12,3	25.1
Peak Current	magnet @ 25°C	Ip	Arms	9,2	18.9
Maximum Continuous Current*	coils @ 100°C	Ic	Arms	4,5	9.3
Back EMF Phase-Phasepeak		Bemf	V / m/s	65	32
Resistance per Phase*	coils @ 25°C ex. cable	Rf	Ω	3,6	0,85
Induction per Phase	l < 0.6 lp	Lf	mH	23	5,5
Electrical Time Constant*	coils @ 25°C	te	ms	6.5	6.5
Thermal					
Maximum Continuous Power Loss	all coils	Pc	W	296	296
Thermal Resistance	coils to mount. sfc.	Rth	°C/W	0.25	0.25
Thermal Time Constant*	to max. coil temp.	tth	s	75	75
Temperature Cut-off / Sensor				PTC 1kΩ / KTY83-122	
Mechanical					
Coil Unit Weight	ex. cables	W	kg	2.3	2.3
Coil Unit Length	ex. cables	L	mm	336	336
Motor Attraction Force	rms @ 0 A	Fa	N	1300	1300
Magnet Pitch NN		τ	mm	24	24
Cable Mass		m	kg/m	0.18	0.18
Cable Type (Power)	length 3 m	d	mm (AWG)	8.3 (218)	
Cable Type (Sensor)	length 3 m	d	mm (AWG)	4.3 (26)	
Cable Life (Power FLEX)***	minimum			5,000,000 cycles	
Bending Radius Static	minimum			4x cable diameter	
Bending Radius Dynamic	minimum			10x cable diameter	

* These values are only applicable when the mounting surface is at 20°C and the motor is driven at maximum continuous current.

** Actual values depend on drive power voltage.

*** Depending on bending radius, velocity and acceleration.

Fig. 27-5: TM18 series coil specifications

The following TM series magnet plates are available. Magnet plates can be butted together.

Component name	Order number
NYA04.1-LMS-MAGNETTM-96MM-3685225	R911343774
NYA04.1-LMS-MAGNETTM-144MM-3685226	R911343775
NYA04.1-LMS-MAGNETTM-384MM-3685227	R911343773
NYA04.1-LMS-MAGNETTMV-144MM-120C-3685419	R911343772
NYA04.1-LMS-MAGNETTMV-384MM-120C-3685511	R911369668

Tab. 27-2: TM series magnet plates

LMS coils and magnet plates

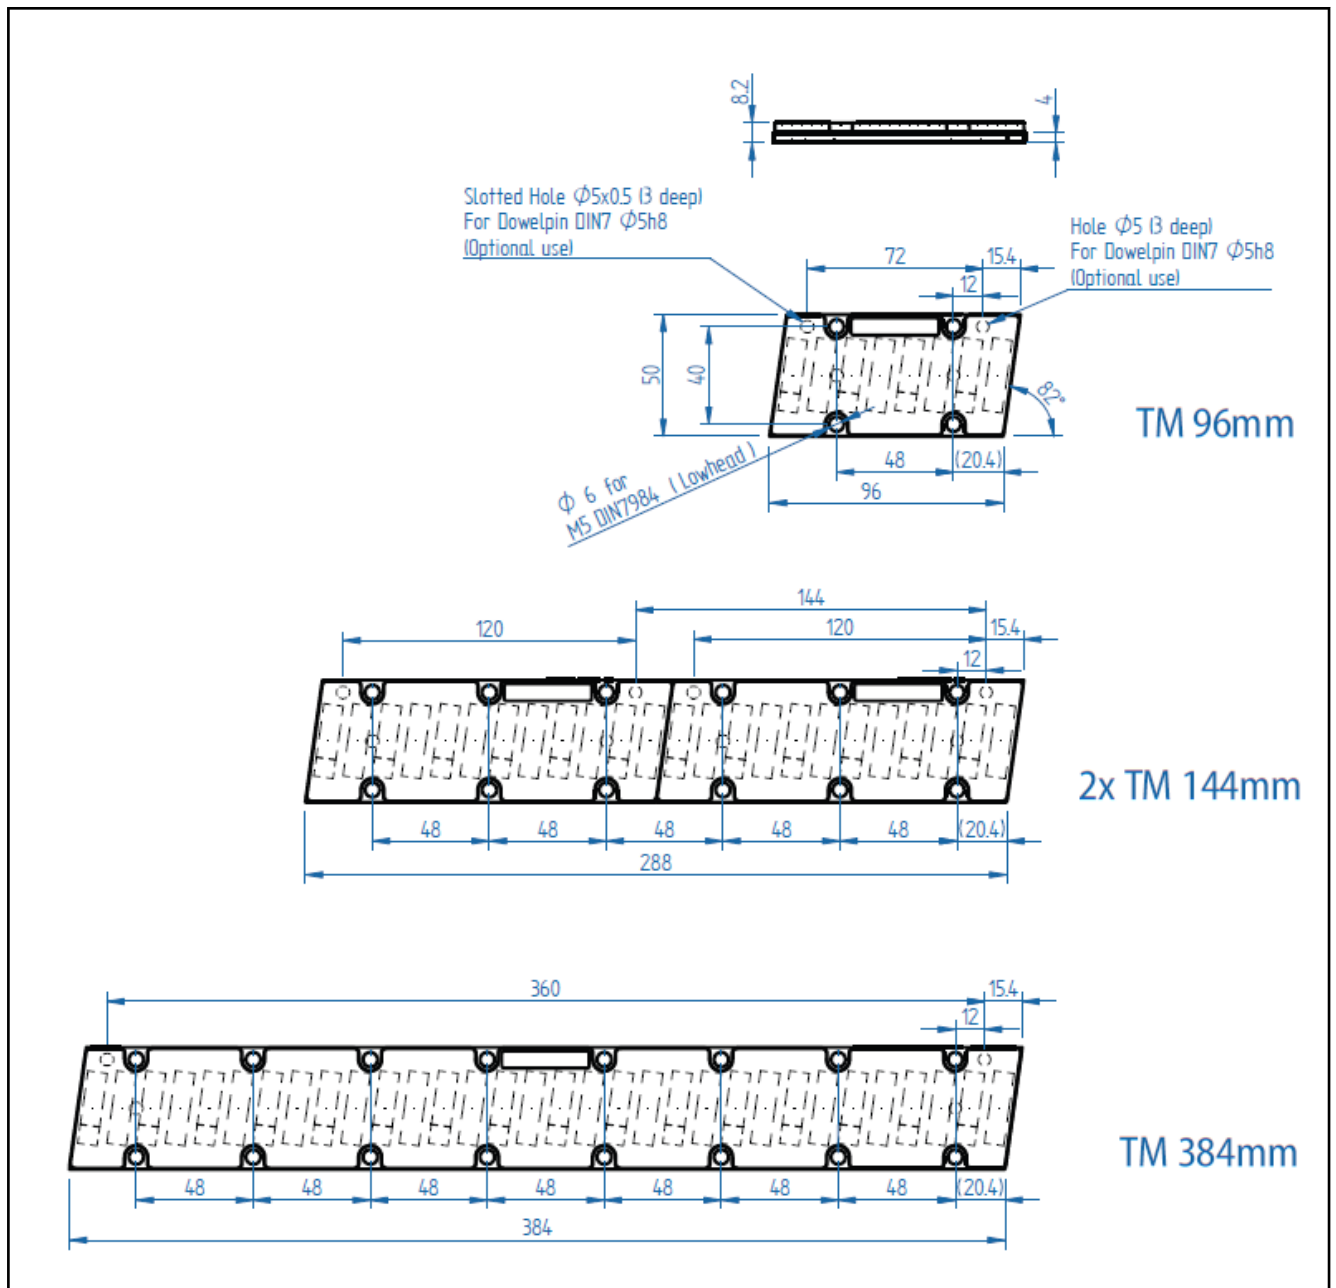


Fig. 27-6: TM series magnet plates

27.2 TL series coils and magnet plates

The following TL series coils are available.

Component name	Order number
NYA04.1-LMS-COIL-UNIT-TL6N-3697458	R911343602
NYA04.1-LMS-COIL-UNIT-TL6S-3685032	R911343601
NYA04.1-LMS-COIL-UNIT-TL9N-3685311	R911343558
NYA04.1-LMS-COIL-UNIT-TL9S-3675312	R911343559

LMS coils and magnet plates

Component name	Order number
NYA04.1-LMS-COIL-UNIT-TL12N-3697459	R911343597
NYA04.1-LMS-COIL-UNIT-TL12S-3685033	R911343435
NYA04.1-LMS-COIL-UNIT-TL15N-3687460	R911343560
NYA04.1-LMS-COIL-UNIT-TL15S-3685034	R911343561
NYA04.1-LMS-COIL-UNIT-TL18N-3685223	R911343562
NYA04.1-LMS-COIL-UNIT-TL18S-3685224	R911343603
NYA04.1-LMS-COIL-UNIT-TL24N-3685014	R911343604
NYA04.1-LMS-COIL-UNIT-TL24S-3685035	R911343605

Tab. 27-3: TL series coils

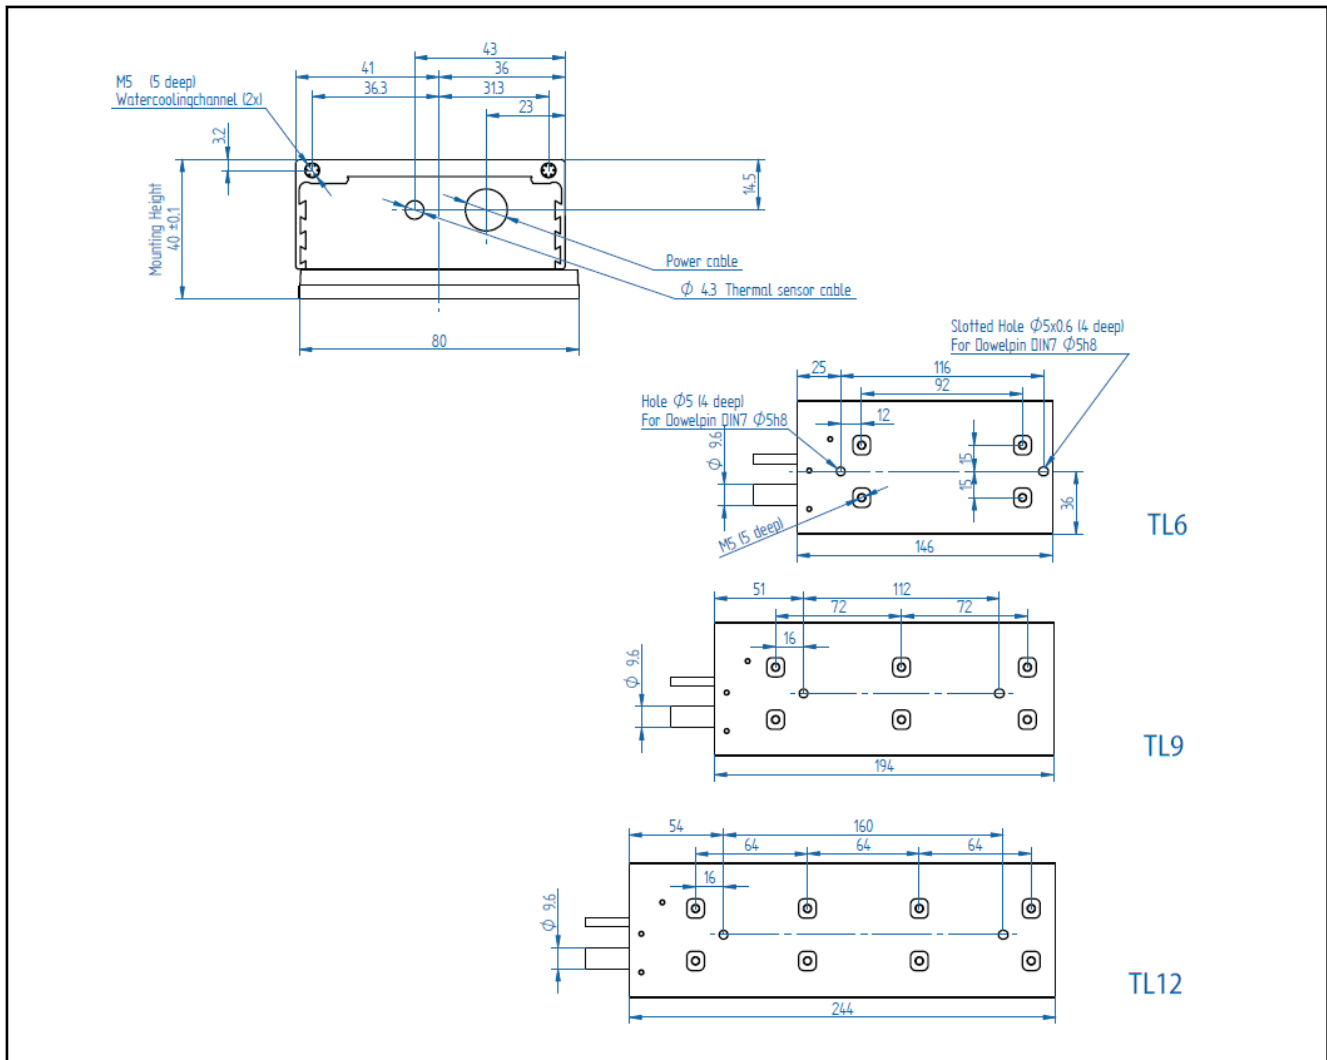


Fig. 27-7: TL6, TL9, TL12 series coils

LMS coils and magnet plates

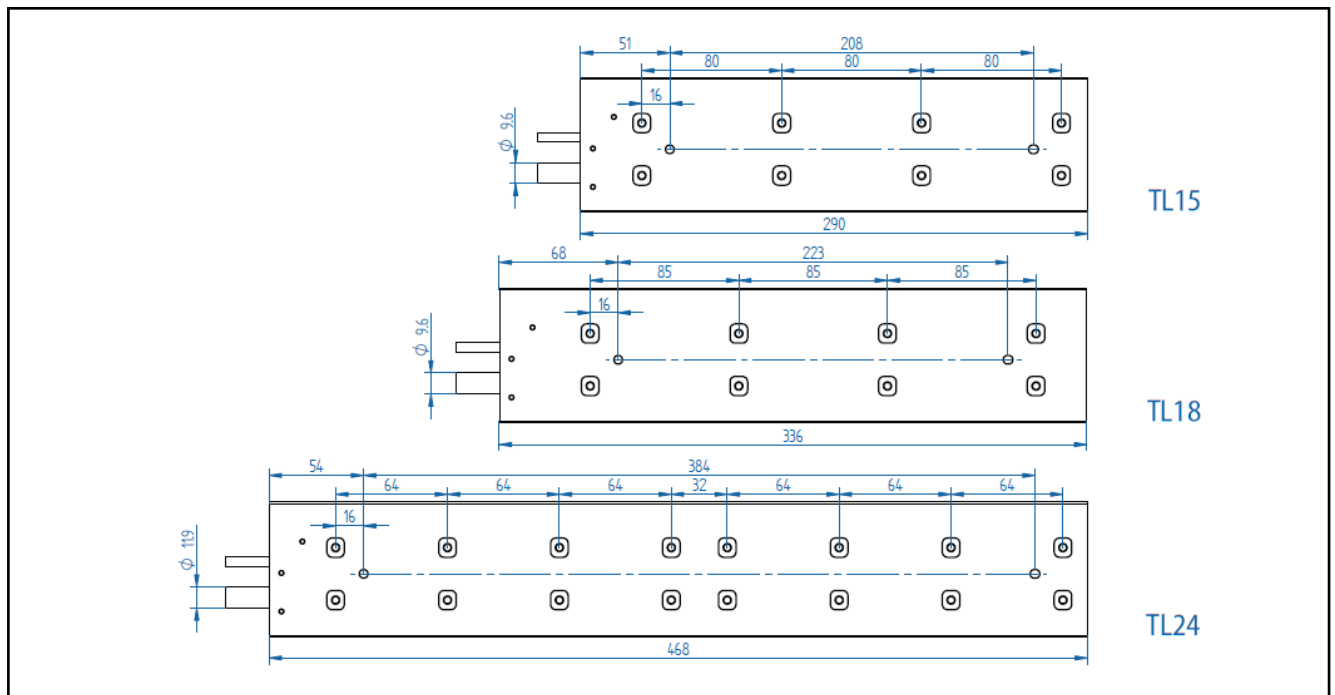


Fig. 27-8: TL15, TL18, TL24 series coils

Performance	Parameter	Remarks	Sym	Unit	TL6		TL9		TL12	
					N	S	N	S	N	S
	Winding type				3-phase synchronous Iron core, 400Vac rms (600Vdc)					
	Motor type, max voltage ph-ph				3-phase synchronous Iron core, 400Vac rms (600Vdc)					
	Ultimate Force @ 10°C/s increase	magnet @ 25°C	Fu	N	450		675		900	
	Peak Force @ 6°C/s increase	magnet @ 25°C	Fp	N	400		600		800	
	Continuous Force Watercooled*	coils @ 100°C	Fcw	N	210		315		420	
	Continuous Force Aircooled*	coils @ 100°C	Fc	N	200		300		400	
	Maximum Speed**	@ 560 V	vmax	m/s	3.5	7	4	7	3.5	7
	Motor Force Constant	mount. sfc. @ 20°C	K	N/Arms	93	46.5	140	46.5	93	46.5
	Motor Constant		S	N2/W	380		570		760	
Electrical	Ultimate Current	magnet @ 25°C	Iu	Arms	6.5	13.1	6.5	19.6	13.1	26.2
	Peak Current	magnet @ 25°C	Ip	Arms	5.0	10.0	5.0	15.0	10.0	20.0
	Continuous Current Watercooled*	coils @ 100°C	Icw	Arms	2.26	4.5	2.26	6.8	4.5	9.0
	Back EMF Phase-Phasepeak		Bemf	V / m/s	76	38	114	38	76	38
	Resistance per Phase*	coils @ 25°C ex. cable	Rf	Ω	7.2	1.80	10.8	1.21	3.6	0.90
	Induction per Phase	I < 0.6 Ip	Lf	mH	54	14	81	9.0	27	7.0
	Electrical Time Constant*	coils @ 25°C	te	ms	7.5		7.5		7.5	
Thermal	Maximum Continuous Power Loss	all coils	Pc	W	150		225		300	
	Thermal Resistance	coils to mount. sfc.	Rth	°C/W	0.48		0.32		0.24	
	Thermal Time Constant*	to max. coil temp.	tth	s	77		77		77	
	Watercooling Flow	for $\Delta T=3K$	Φ_w	l/min	0.7		1.1		1.4	
	Watercooling Pressure-drop	order of magnitude	ΔP_w	bar	1		1		2	
	Temperature Cut-off / Sensor				PTC 1k Ω / KTY83-122					
Mechanical	Coil Unit Weight	ex. cables	W	kg	1.5		2.0		2.6	
	Coil Unit Length	ex. cables	L	mm	146		194		244	
	Motor Attraction Force	rms @ 0 A	Fa	N	950		1325		1700	
	Magnet Pitch NN		τ	mm	24		24		24	
	Cable Mass		m	kg/m	0.18		0.18		0.18	
	Cable Type (Power)	length 1 m	d	mm (AWG)	9.6 (18)					
	Cable Type (Sensor)	length 1 m	d	mm (AWG)	4.3 (26)					

* These values are only applicable when the mounting surface is at 20°C and the motor is driven at maximum continuous current.

** Actual values depend on drive power voltage.

Fig. 27-9: TL6, TL9, TL12 series coil specifications

LMS coils and magnet plates

Performance	Parameter	Remarks	Sym	Unit	TL15		TL18		TL24	
					N	S	N	S	N	S
	Winding type									
	Motor type, max voltage ph-ph									
	Ultimate Force @ 10°C/s increase	magnet @ 25°C	Fu	N	1125		1350		1800	
	Peak Force @ 6°C/s increase	magnet @ 25°C	Fp	N	1000		1200		1600	
	Continuous Force Watercooled*	coils @ 100°C	Fcw	N	525		630		840	
	Continuous Force Aircooled*	coils @ 100°C	Fc	N	500		600		800	
	Maximum Speed**	@ 560 V	vmax	m/s	3.5	7	3.5	7	3.5	7
	Motor Force Constant	mount. sfc. @ 20°C	K	N/Arms	112	46.5	93	44.9	93	46.5
	Motor Constant		S	N ² /W	950		1140		1520	
Electrical	Ultimate Current	magnet @ 25°C	Iu	Arms	13.5	32.7	19.6	41	26.2	52
	Peak Current	magnet @ 25°C	Ip	Arms	10.4	25.0	15.0	31.0	20.0	40.0
	Continuous Current Watercooled*	coils @ 100°C	Icw	Arms	4.7	11.3	6.8	14.0	9.0	18.1
	Back EMF Phase-Phasepeak		Bemf	V / m/s	92	38	76	38	76	38
	Resistance per Phase*	coils @ 25°C ex. cable	Rf	Ω	4.3	0.72	2.41	0.59	1.81	0.46
	Induction per Phase	I < 0.6 Ip	Lf	mH	32	5.4	18	4.4	14	3.4
	Electrical Time Constant*	coils @ 25°C	te	ms	7.5		7.5		7.5	
Thermal	Maximum Continuous Power Loss	all coils	Pc	W	375		450		600	
	Thermal Resistance	coils to mount. sfc.	Rth	°C/W	0.19		0.16		0.12	
	Thermal Time Constant*	to max. coil temp.	tth	s	77		77		77	
	Watercooling Flow	for ΔT=3K	Φw	l/min	1.8		2.2		2.9	
	Watercooling Pressure-drop	order of magnitude	ΔPw	bar	2		2		3	
	Temperature Cut-off / Sensor				PTC 1kΩ / KTY83-122					
Mechanical	Coil Unit Weight	ex. cables	W	kg	3.2		3.8		5.2	
	Coil Unit Length	ex. cables	L	mm	290		336		468	
	Motor Attraction Force	rms @ 0 A	Fa	N	2075		2450		3400	
	Magnet Pitch NN		τ	mm	24		24		24	
	Cable Mass		m	kg/m	0.18		0.18		0.30	
	Cable Type (Power)	length 1 m	d	mm (AWG)	9.6 (18)				11.9 (14)	
	Cable Type (Sensor)	length 1 m	d	mm (AWG)	4.3 (26)				4.3 (26)	

* These values are only applicable when the mounting surface is at 20°C and the motor is driven at maximum continuous current.

** Actual values depend on drive power voltage.

Fig. 27-10: TL15, TL18, TL24 series coil specifications

The following TL series magnet plates are available. Magnet plates can be butted together.

Component name	Order number
NYA04.1-LMS-MAGNETTL-192MM-3685193	R911343580
NYA04.1-LMS-MAGNETTL-288MM-3685194	R911343563
NYA04.1-LMS-MAGNETTLV-192MM-120C-3685457	R911343565
NYA04.1-LMS-MAGNETTLV-288MM-120C-3685472	R911343573
NYA04.1-LMS-MAGNETTLV-192MM-150C-3685473	R911343576
NYA04.1-LMS-MAGNETTLV-288MM-150C-3685420	R911343579

Tab. 27-4: TL series magnet plates

LMS coils and magnet plates

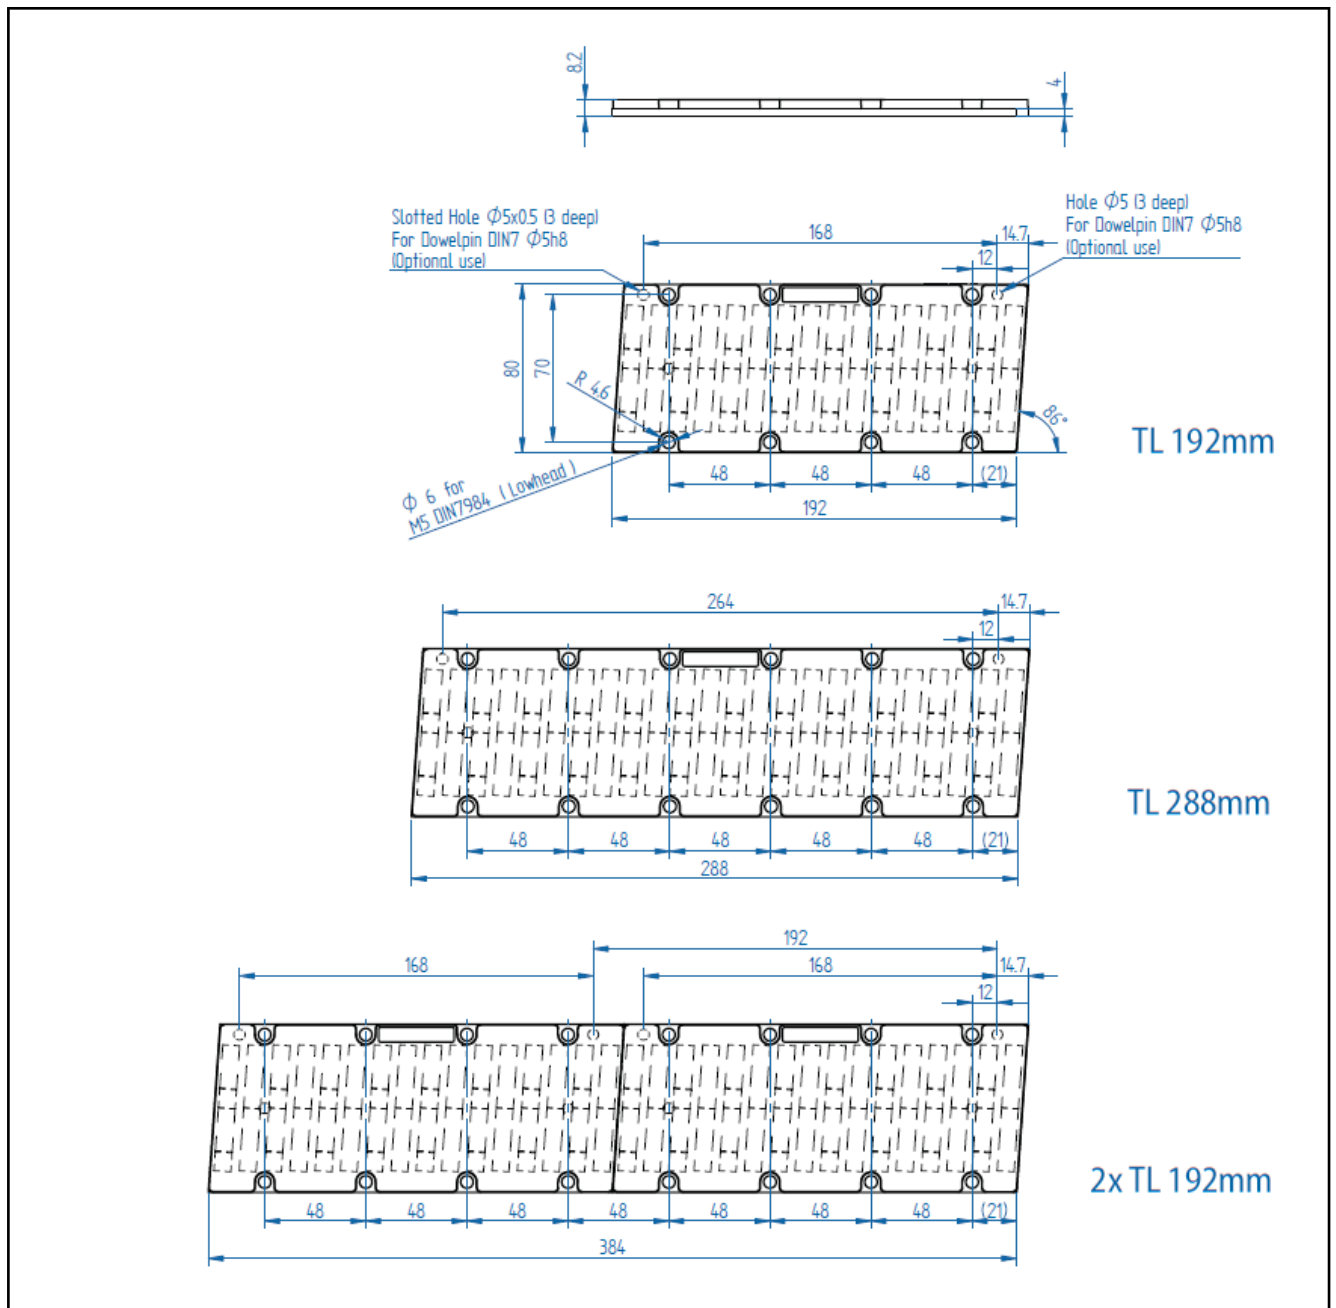


Fig. 27-11: TL series magnet plates

27.3 TB series coils and magnet plates

The following TB series coils are available.

Component name	Order number
NYA04.1-LMS-COIL-UNIT-TB12N-3685155	R911343767
NYA04.1-LMS-COIL-UNIT-TB12S-3685157	R911347637
NYA04.1-LMS-COIL-UNIT-TB15N-3685122	R911347642
NYA04.1-LMS-COIL-UNIT-TB15S-3685120	R911347643

LMS coils and magnet plates

Component name	Order number
NYA04.1-LMS-COIL-UNIT-TB30N-3685123	R911347644
NYA04.1-LMS-COIL-UNIT-TB30S-3685121	R911347645

Tab. 27-5: TB series coils

The following TBW series coils are available.

Component name	Order number
NYA04.1-LMS-COIL-UNIT-TBW18N-3685263	R911347646
NYA04.1-LMS-COIL-UNIT-TBW18S-3685264	R911347647
NYA04.1-LMS-COIL-UNIT-TBW30N-3685242	R911347648
NYA04.1-LMS-COIL-UNIT-TBW30S-3685243	R911347649
NYA04.1-LMS-COIL-UNIT-TBW45N-3685244	R911347650
NYA04.1-LMS-COIL-UNIT-TBW45S-3685245	R911347651

Tab. 27-6: TBW series coils

LMS coils and magnet plates

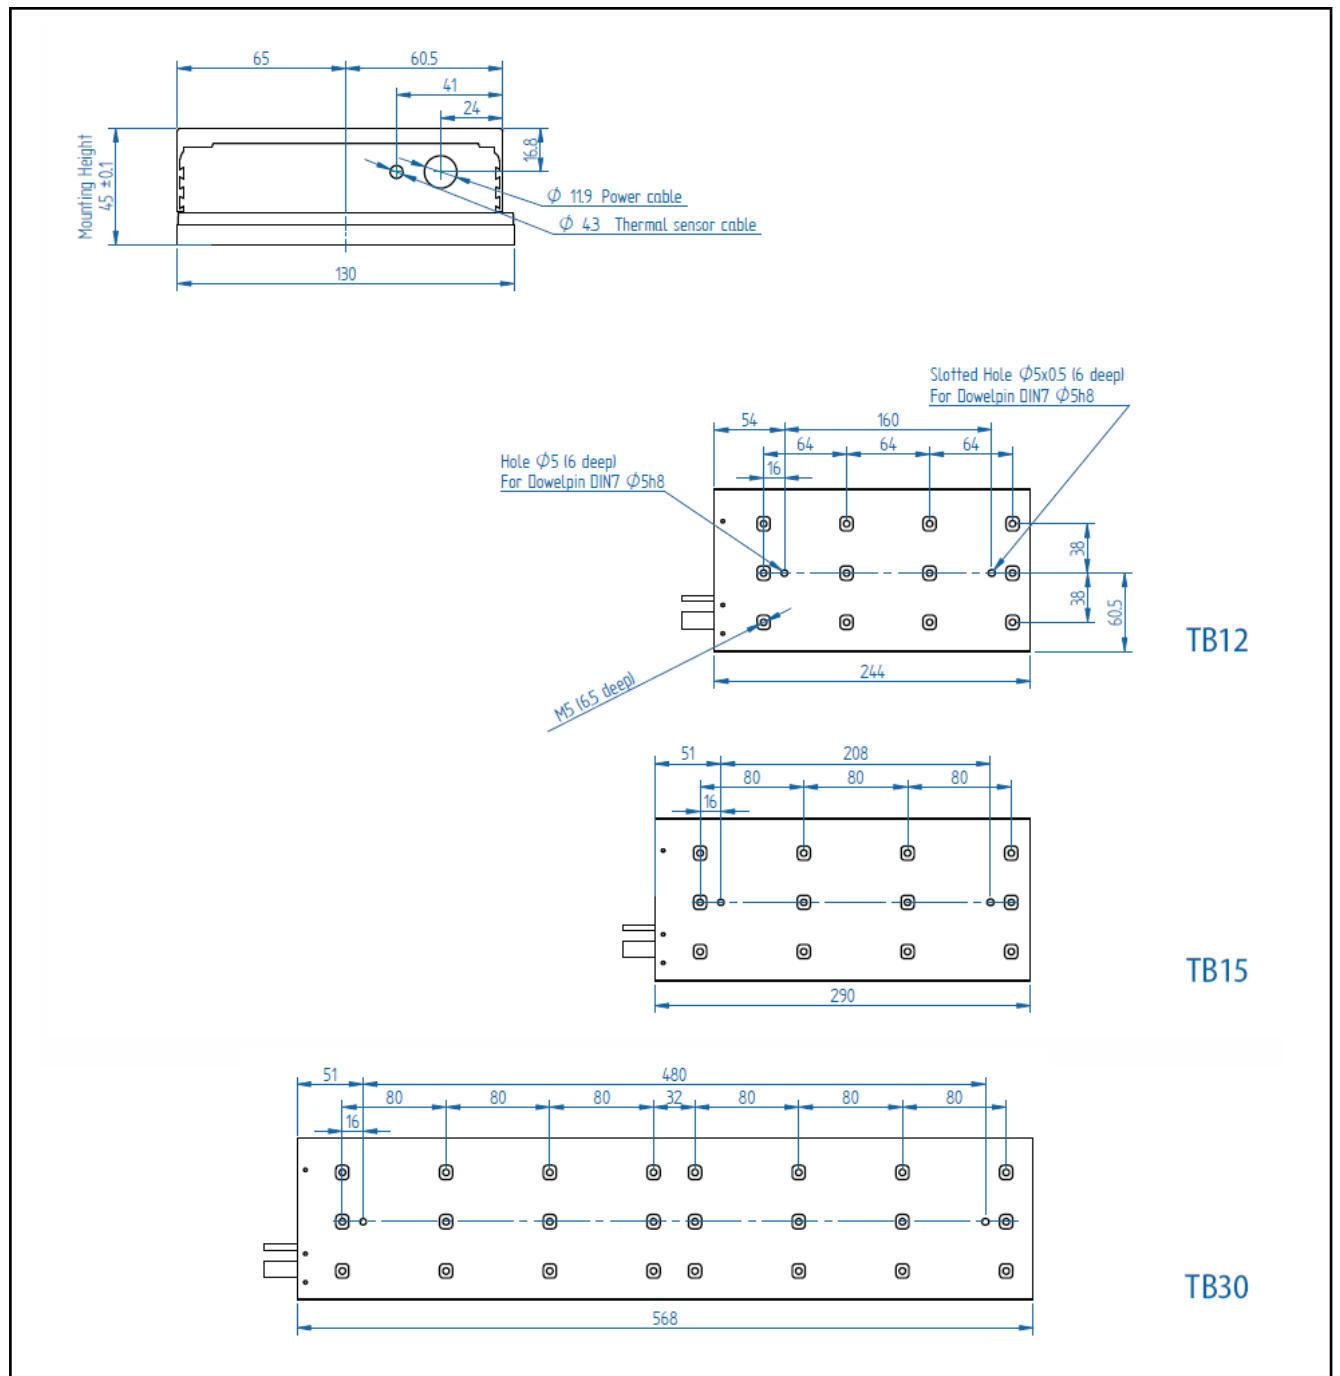


Fig. 27-12: TB12, TB15, TB30 series coils

LMS coils and magnet plates

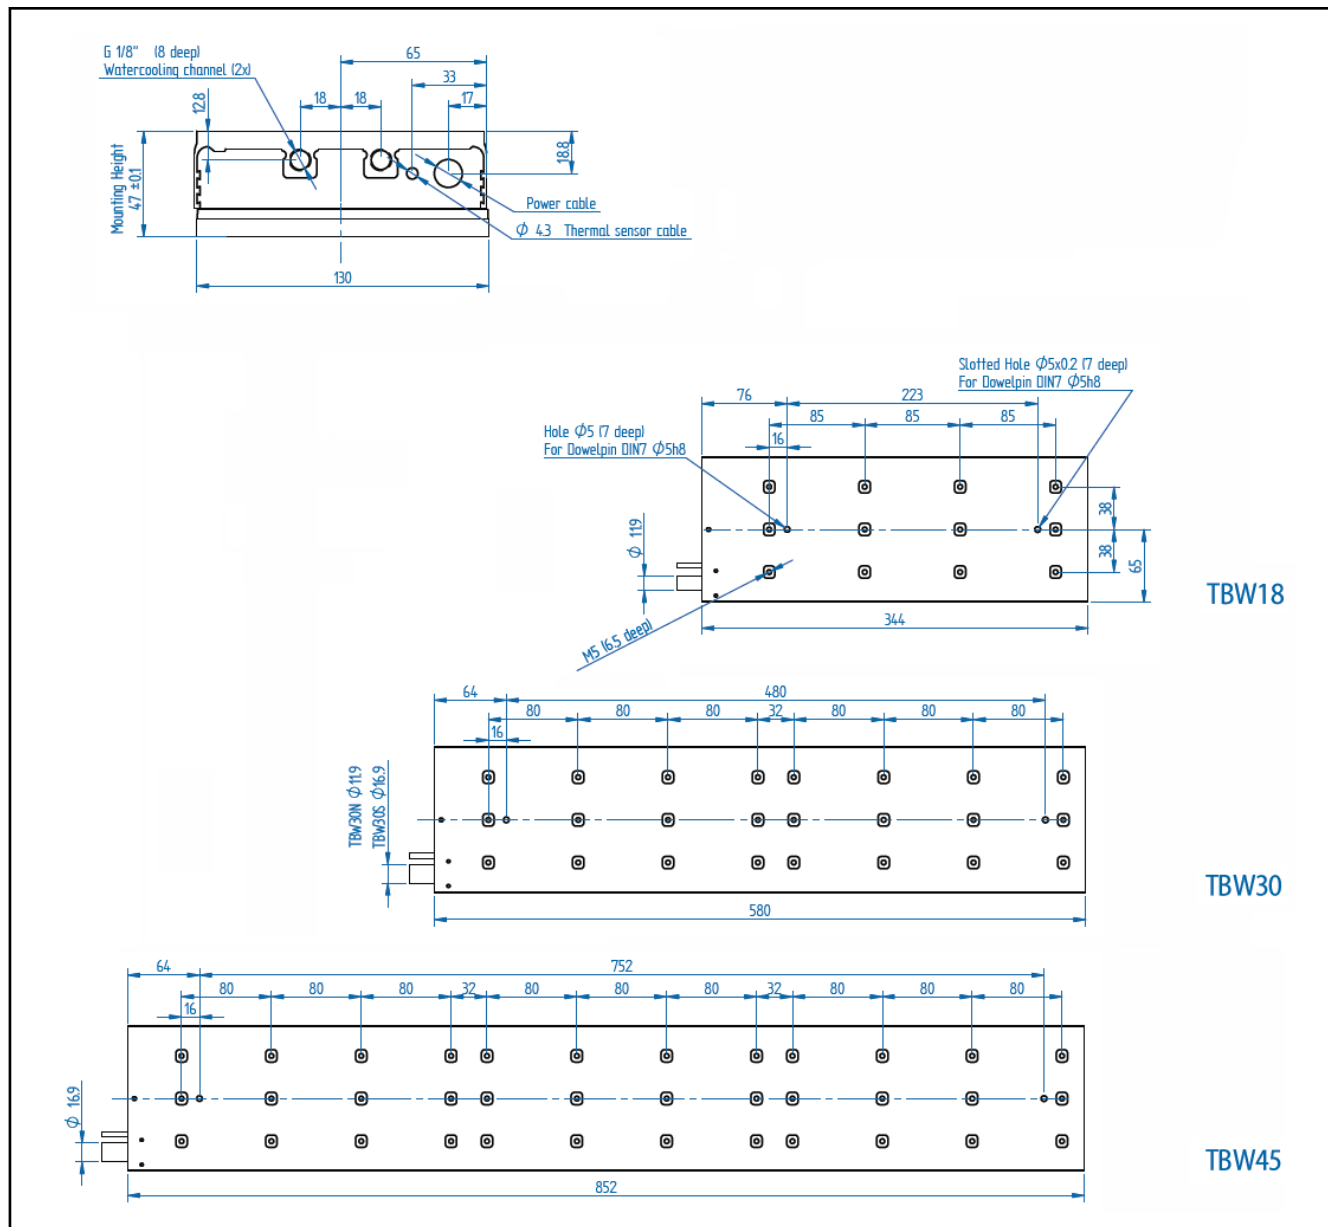


Fig. 27-13: TBW18, TBW30, TBW45 series coils

LMS coils and magnet plates

	Parameter	Remarks	Symbol	Unit	TB12		TB15		TB30	
Performance	Winding type				N	S	N	S	N	S
	Motor type, max voltage ph-ph				3-phase synchronous Iron core, 400Vac rms (600Vdc)					
	Ultimate Force @ 10°C/s increase	magnet @ 25°C	Fu	N	1800		2250		4500	
	Peak Force @ 6°C/s increase	magnet @ 25°C	Fp	N	1600		2000		4000	
	Continuous Force*	coils @ 100°C	Fc	N	760		950		1900	
	Maximum Speed**	@ 560 V	vmax	m/s	3	6	2.5	6	2.5	6
	Motor Force Constant	mount. sfc. @ 20°C	K	N/Arms	186	93	225	93	225	93
	Motor Constant	coils @ 25°C	S	N2/W	1750		2150		4300	
	Ultimate Current	magnet @ 25°C	Iu	Arms	13.0	26	13.5	33	27	66
	Peak Current	magnet @ 25°C	Ip	Arms	10.0	20	10.0	25	20	50
Maximum Continuous Current	coils @ 100°C	Ic	Arms	4.1	8.2	4.2	10.2	8.5	20.5	
Back EMF Phase-Phasepeak		Bemf	V / m/s	152	76	183	76	183	76	
Resistance per Phase*	coils @ 25°C ex. cable	Rf	Ω	6.3	1.6	7.6	1.3	3.8	0.65	
Induction per Phase	I < 0.6 Ip	Lf	mH	51	13	60	10	30	5	
Electrical Time Constant*	coils @ 25°C	te	ms	8		8		8		
Thermal	Maximum Continuous Power Loss	all coils	Pc	W	430		530		1060	
	Thermal Resistance	coils to mount. sfc.	Rth	°C/W	0.15		0.12		0.06	
	Thermal Time Constant*	to max. coil temp.	tth	s	90		90		90	
	Temperature Cut-off / Sensor				PTC 1kΩ / KTY83-122					
Mechanical	Coil Unit Weight	ex. cables	W	kg	4.9		5.9		11.6	
	Coil Unit Length	ex. cables	L	mm	244		290		562	
	Motor Attraction Force	rms @ 0 A	Fa	N	3400		4150		8300	
	Magnet Pitch NN		τ	mm	24		24		24	
	Cable Mass		m	kg/m	0.3		0.3		0.3	
	Cable Type (Power)	length 1 m	d	mm (AWG)	11.9 (14)					
Cable Type (Sensor)	length 1 m	d	mm (AWG)	4.3 (26)						

* These values are only applicable when the mounting surface is at 20°C and the motor is driven at maximum continuous current.

** Actual values depend on drive power voltage.

Fig. 27-14: TB12, TB15, TB30 series coil specifications

LMS coils and magnet plates

Performance	Parameter	Remarks	Symbol	Unit	TBW18		TBW30		TBW45	
					N	S	N	S	N	S
	Winding type				3-phase synchronous Iron core, 400Vac rms (600Vdc)					
	Motortype, max voltage ph-ph				3-phase synchronous Iron core, 400Vac rms (600Vdc)					
	Ultimate Force @ 10°C/s increase	magnet @ 25°C	Fu	N	2700		4500		6750	
	Peak Force @ 6°C/s increase	magnet @ 25°C	Fp	N	2400		4000		6000	
	Continuous Force Watercooled*	coils @ 100°C	Fcw	N	1200		2000		3000	
	Continuous Force Aircooled*	coils @ 100°C	Fc	N	1140		1900		2850	
	Maximum Speed**	@ 560 V	vmax	m/s	3	6	2.5	6	2.5	6
	Motor Force Constant	mount. sfc. @ 20°C	K	N/Arms	186	90	225	93	225	93
	Motor Constant	coils @ 25°C	S	N2/W	2580	4300	6450			
Electrical	Ultimate Current	magnet @ 25°C	Iu	Arms	19.6	41	27	65	41	98
	Peak Current	magnet @ 25°C	Ip	Arms	15.0	31.1	20.7	50	31	75
	Continuous Current Watercooled*	coils @ 100°C	Icw	Arms	6.5	13.4	8.9	21.5	13.4	32.3
	Back EMF Phase-Phasepeak		Bemf	V / m/s	152	76	183	76	183	76
	Resistance per Phase*	coils @ 25°C ex. cable	Rf	Ω	4.4	1.0	3.9	0.66	2.6	0.44
	Induction per Phase	I < 0.6 Ip	Lf	mH	35	8	31	5	21	3
	Electrical Time Constant*	coils @ 25°C	te	ms	8		8		8	
Thermal	Maximum Continuous Power Loss	all coils	Pc	W	726		1209		1804	
	Thermal Resistance	coils to mount. sfc.	Rth	°C/W	0.10		0.06		0.04	
	Thermal Time Constant*	to max. coil temp.	tth	s	87		87		87	
	Watercooling Flow	for ΔT=3K	Φw	l/min	3.1		5.2		7.8	
	Watercooling Pressure-drop	order of magnitude	ΔPw	bar	1.0		1.5		2.5	
	Temperature Cut-off / Sensor				PTC 1kΩ / KTY83-122					
Mechanical	Coil Unit Weight	ex. cables	W	kg	7.3		12.3		18.2	
	Coil Unit Length	ex. cables	L	mm	344		580		852	
	Motor Attraction Force	rms @ 0 A	Fa	N	4900		8300		12450	
	Magnet Pitch NN		τ	mm	24		24		24	
	Cable Mass		m	kg/m	0.3		0.3		0.3	
	Cable Type (Power)	length 1 m	d	mm (AWG)	11.9 (14)			16.9 (10)		
	Cable Type (Sensor)	length 1 m	d	mm (AWG)	4.3 (26)					

* These values are only applicable when the mounting surface is at 20°C and the motor is driven at maximum continuous current.

** Actual values depend on drive power voltage.

Fig. 27-15: TBW18, TBW30, TBW45 series coil specifications

The following TB series magnet plates are available. Magnet plates can be butted together.

Component name	Order number
NYA04.1-LMS-MAGNETTB-192MM-3685221	R911343765
NYA04.1-LMS-MAGNETTB-288MM-3685222	R911343763
NYA04.1-LMS-MAGNETTBV-192MM-120C-3685474	R911343764
NYA04.1-LMS-MAGNETTBV-288MM-120C-3685475	R911343768

Tab. 27-7: TB series magnet plates

LMS coils and magnet plates

Power cable		Color code TM/TL/TB/TBW	Standard housing Motor connection
3-phases	L1	black "1"	U
	L2	black "2"	V
	L3	black "3"	W
Protective Earth		green/yellow	PE
Shield		Metal shield	PE

Tab. 27-8: Coil power cable wire identification

Sensor cable	Standard housing PTC connection
PTC (white)	PTC input +
PTC (brown)	PTC input -
Shield	Not connected

Tab. 27-9: Coil sensor cable wire identification

28 NYCe 4000 Hardware Glossary

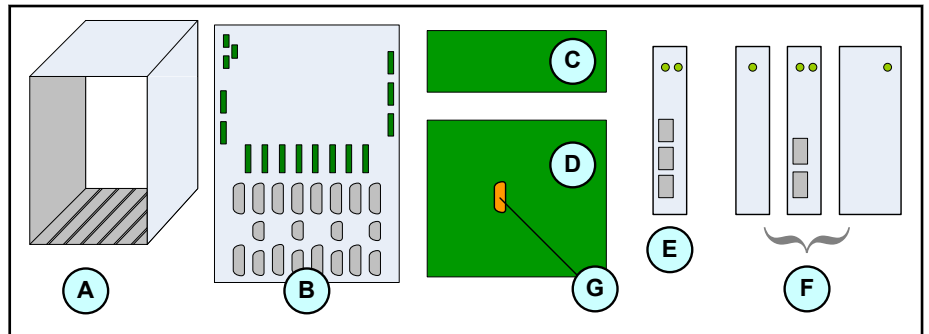


Fig. 28-1: NYCe 4000 components

Component	Name	Type number	Remarks
A	module holder	-	-
B	base plate	-	-
C	system backplane	-	Interconnect between MCU module and other NYCe 4000 motion node modules.
D	I/O backplane	-	Connection panel between NYCe 4000 drive modules and motor and I/O headers.
E	MCU	NY4110, NY4112, NY4114	Motion Control Unit. This is not a "drive" but actually a unit, because it can be used 'stand-alone'. If an MCU is put in a system housing, you can communicate with it.
F	drive module	NY41xy, where xy = 20, 25, 30, 40, 50	These components are not "units" because they cannot be used 'stand-alone'. If only a drive module is put in a system housing, you cannot do any useful work with it. Drive module can also be I/O module, power supply module, or SERCOS III Master module.
G	header	-	For clear identification the 'connector' at the end of a cable is called "plug" and the 'connector' on a [system, I/O] backplane is called "header".

Tab. 28-1: Identification names of the components

NYCe 4000 Hardware Glossary

Combination	Name	Type number	Remarks
A + B	metalwork	NY44xx NY46xx	This is a term only for internal use.
C + D	backplane	NY45xx	This is a combination of a system backplane and I/O backplane on a single board.
A + B + C + D	system housing	NY40x2 NY40x3 NY407x NY47xx	-
A + B + C + D + E + n*F	node	-	$n \geq 0$ A node on the NYCe 4000 network is capable of controlling up to 10 axes.
m * node	NYCe 4000 system	-	$m \geq 1$

Tab. 28-2: Identification names of combined components

Expression	Definition
MCU module	Motion Control Unit, a module containing the motion processor. A "Motion Controller" which takes care of the communication to the Industrial PC, and acts as a local motion controller.
Drive module	Module containing the drive technology for stepper motor, and/or brushless AC servo motor, and/or brushless DC servo motor, and/or DC servo motor and analog and digital I/O. A module can control one or more axes.
Drive power	Incoming supply voltage for the power stages on the drive modules.
System power	Incoming supply voltage for the logic of NYCe 4000 node.
I/O power	Digital I/O supply voltage.
Quadrature encoder	A digital position encoder that generates two block wave signals with 90° phase shift relative to each other and an optional index signal. Also known as A/B encoder, S0S90 encoder and 3-channel digital incremental encoder.

Tab. 28-3: Explanation of other expressions

29 Installation, Earthing, Shielding, EMC, Electrical Connections

29.1 Introduction

This chapter describes how the NYCe 4000 system must be installed to comply with regulations regarding EMC. The following topics are addressed.

- [chapter 29.2 "Connection Diagram Overview" on page 209](#) shows connection diagrams of the NY40x3 system housing. These diagrams give you insight of the connections, required shielding and protective earth connections.
- [chapter 29.3 "General EMC Measures for Design and Installation" on page 210](#) describes the general measures needed to comply to regulations regarding EMC. [chapter 29.4 "EMC-optimal Installation in Machine and Control Cabinet" on page 211](#) gives guidelines for an optimal installation in a control cabinet.
- [chapter 29.4 "EMC-optimal Installation in Machine and Control Cabinet" on page 211](#) describes the EMC-optimal installation of components in a machine and control cabinet.
- [chapter 29.5 "Ground Connections" on page 215](#) describes the ground connections of all metal parts and components in the cabinet.
- [chapter 29.6 "Installation of Signal Cables" on page 216](#) describes how signal cables are best routed in a cabinet.
- [chapter 29.7 "Protective Earth Connection and Machine Frame" on page 216](#) describes the protective earth connection for all components and metal parts of the machine.
- [chapter 29.8 "Installation of the NYCe 4000 System Housing" on page 217](#) describes the mechanical installation of the NYCe 4000 system .
- [chapter 29.9 "Connection of NYCe 4000 Systems" on page 218](#) describes the cable connections for NYCe 4000 systems.
- [chapter 29.10 "Power Supply" on page 219](#) describes power supply requirements and connection.
- [chapter 29.11 "PC" on page 221](#) describes the connection of the PC.

Modifications that are needed if you upgrade an installation with NY40x2 system housings to an installation with NY40x3 system housings are described in [chapter 29.12 "Installation Differences for NY40x2 and NY40x3 System Housings" on page 222](#).

29.2 Connection Diagram Overview

[fig. 29-1 "NYCe 4000 NY40x3 system housing connection diagram overview" on page 210](#) gives an overview of the electrical connections, shield connections, and protective earth connections for an NY40x3 system housing.



The GND connection of the 24V digital I/O must be connected to PE, whereas the GND connection of the drive power supply must **not** be connected to PE.

Installation, Earthing, Shielding, EMC, Electrical Connections

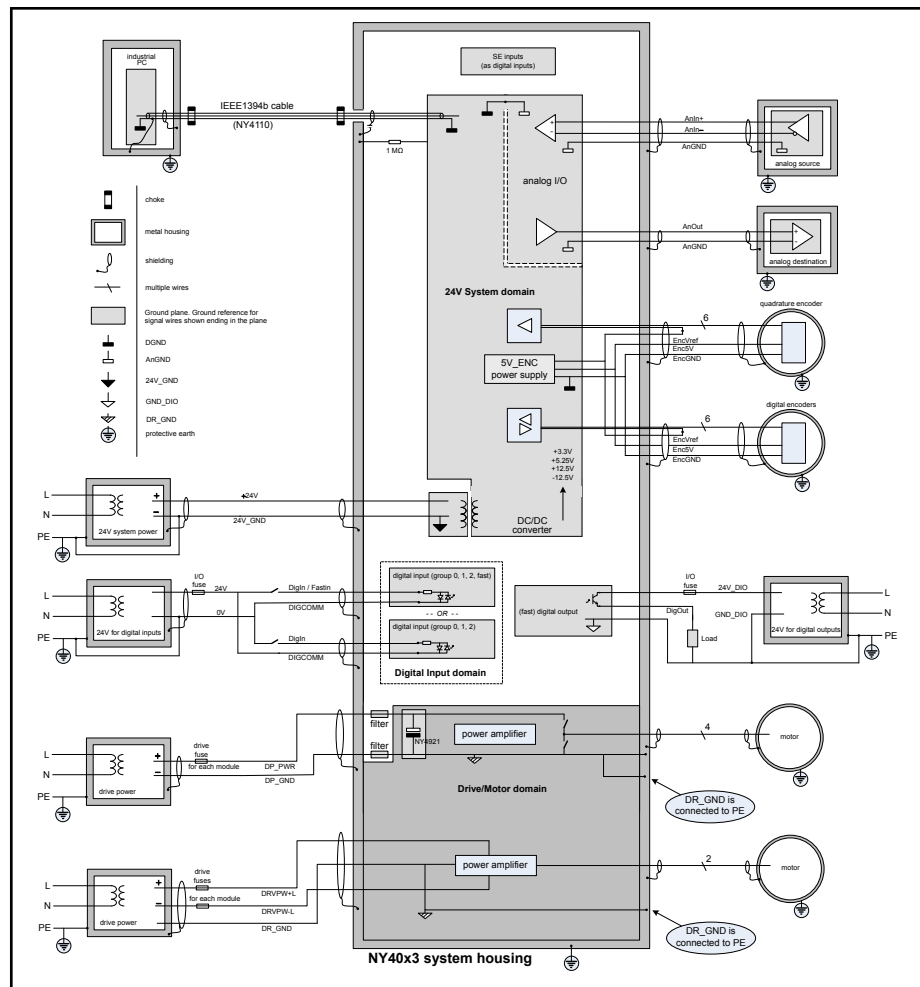


Fig. 29-1: NYCe 4000 NY40x3 system housing connection diagram overview

29.3 General EMC Measures for Design and Installation

The following rules are the basics for the design and installation of a NYCe 4000 system in compliance with EMC.

Control cabinet grounding

Connect all metal parts (frame, side walls, top, bottom, and door) of the cabinet with one another over the largest possible surface area to establish a good electrical connection.

Cable routing

Avoid coupling between cables with high levels of noise and noise-free cables. For this reason, you must route signal cables, motor cables, and power cables separated from another. Keep a minimum distance of 100 mm between the cables of each type. Install separating sheets between the power cables and signal cables. Ground the separating sheets several times. Cables with high levels of noise are, for example, the following cables.

Installation, Earthing, Shielding, EMC, Electrical Connections

- Cables for the mains connection.
- Cables for the motor connection.
- Cables for the DC power supply connection.

In general, interference injection is reduced when cables are routed close to grounding sheet metal plates. For this reason, do not route cables and wires freely in the cabinet, but route cables and wires close to the cabinet housing or mounting panels.

Interference suppression elements

Install interference suppression combinations, if the following components are installed in the control cabinet.

- Contactors.
- Relays.
- Solenoids.
- Electromechanical operation hours contactors.

Cables for measuring systems (encoders)

Cables for measuring systems must be shielded with a braid. The shield must be connected to the machine frame at both ends of the cable and over the largest possible surface area. The shield may not be interrupted, for example by using intermediate terminals. Use metallized plastic or metal shells for D-sub connectors on the system housing.

Cables for digital input and digital output signals

Connect the shield of digital signal cables at both ends to ground over the largest possible surface area and with low impedance. If a bad ground connection exists between transmitter and receiver, additionally route a bonding conductor of minimum 10 mm². Braided shields are better than foil shields. Use metallized plastic or metal shells for D-sub connectors.

Cables for analog input and analog output signals

Connect the shield of analog signal cables at both ends over the largest possible surface area and with low impedance. This avoids low-frequency (mains frequency range) interference currents in the shield. Use metallized plastic or metal shells for D-sub connectors.

29.4 EMC-optimal Installation in Machine and Control Cabinet

29.4.1 Introduction

Spatial separation of interference-free areas and interference susceptible areas is recommended for EMC-optimal installation. The separation is realized by dividing the control cabinet into different interference areas.

Installation, Earthing, Shielding, EMC, Electrical Connections

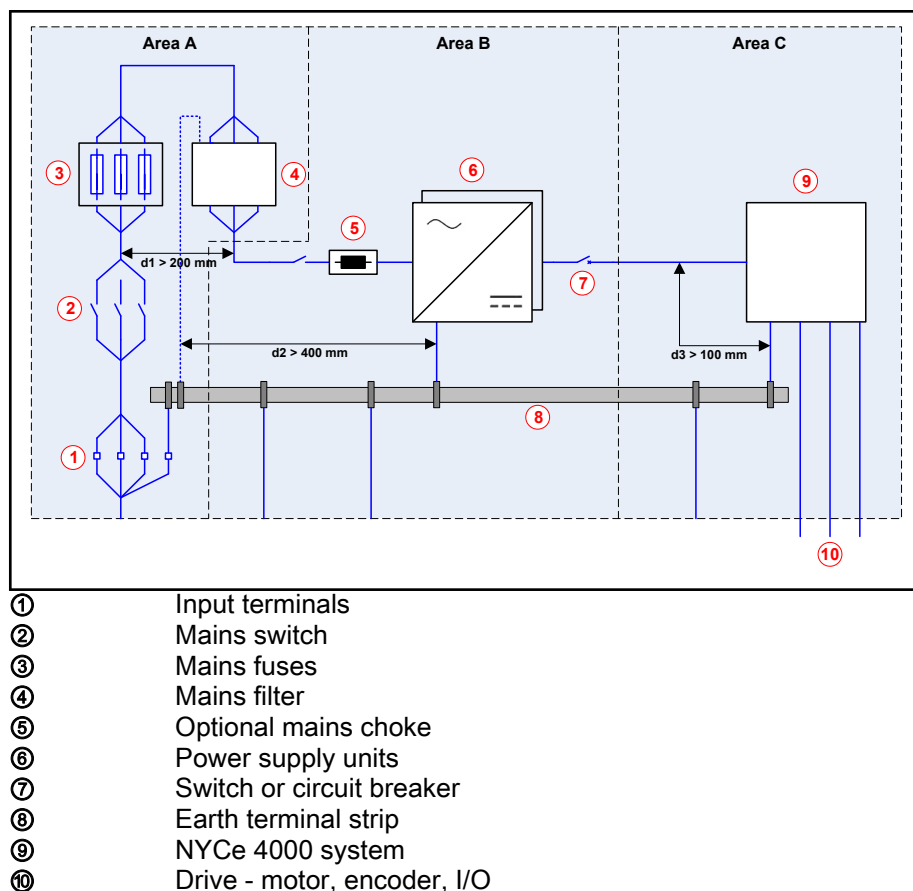


Fig. 29-2: EMC interference-free and interference-susceptible areas

Three different EMC interference areas can be identified in the cabinet.

1. Area A - interference-free area.
2. Area B - interference-susceptible area.
3. Area C - strongly interference-susceptible area.

29.4.2 Interference-free area (area A)

Components in area A include the following.

- Supply feeder, input terminal, mains fuse, mains switch, mains side of mains filter for drives and associated connection cables.
- Control voltage or auxiliary voltage connection with power supply units and other parts, unless connection is via the mains filter of the AC drives.
- All components that are not electrically connected with the drive system.

Comply with a distance of at least 200 mm (distance "d1" in [fig. 29-2 "EMC interference-free and interference-susceptible areas" on page 212](#)) between components and electrical elements (such as switches, pushbuttons, fuses, and terminal connectors) in area A and components and electrical elements in the other areas B and C.

Comply with a distance of at least 400 mm (distance "d2" in [fig. 29-2 "EMC interference-free and interference-susceptible areas" on page 212](#)) between magnetic components, (such as transformers, mains chokes and DC voltage chokes that are directly connected to power connections of the drive system)

Installation, Earthing, Shielding, EMC, Electrical Connections

and the interference-free components and wiring between mains filter and the power supply units.

29.4.3 Interference-susceptible area (area B)

Components in this area include the following.

- Mains connection between power supplies and mains filters for drives, mains switch.
- Interface wires of the drive controller.


Modules, components and cables in area B should be placed at a distance of at least 200 mm (distance "d1" in fig. 29-2 "EMC interference-free and interference-susceptible areas" on page 212) from components and cables in area A. Alternatively, shield components and cables in area B from components and cables in area A by distance plates mounted vertically on the mounting plate or use shielded cables.

Guide the cables along grounded metal surfaces to minimize radiation of interference fields to area A (transmitting antenna effect).

29.4.4 Strongly interference-susceptible area (area C)

Components in this area include the following.

- Motor power cables.
- Encoder cables.
- I/O cables.

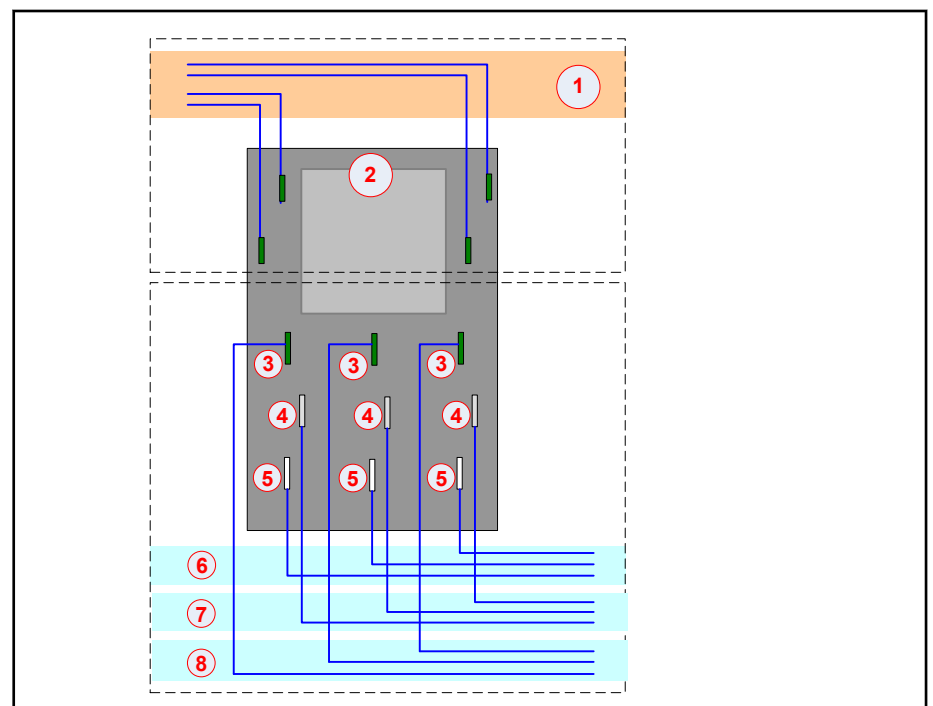

- ① Cable duct for drive power cables
- ② NYCe 4000 system
- ③ Motor cable with cable shield and support bracket
- ④ Encoder connection
- ⑤ I/O connection
- ⑥ Cable duct for I/O cables
- ⑦ Cable duct for encoder cables
- ⑧ Cable duct for motor cables

Fig. 29-3: NYCe 4000 system installation with cable ducts

Installation, Earthing, Shielding, EMC, Electrical Connections

Never put drive power cables in parallel with motor, encoder, or I/O cables to prevent unwanted interference injection from one area to the other area. Use the shortest possible connection cables.

It is recommended for complex systems to install power supplies in one cabinet and the NYCe 4000 nodes in a separate cabinet.

Badly connected control cabinet doors act as antennas. For that reason, connect large doors to the cabinet at the top, in the middle and at the bottom of the door via short equipment grounding conductors. Small doors can be connected with one short equipment grounding conductor. The equipment grounding conductor must have a cross section of at least 6 mm² or, even better, is a grounding strap with the same cross section. Make sure that the connection points have good contact.



Fig. 29-4: Example of a braid wire to connect to a machine frame

Route the cables along grounded metal surfaces, in order to minimize radiation of interference fields to area A (transmitting antenna effect).

Route the motor cables and encoder cables along grounded metal surfaces, both inside the control cabinet and outside the control cabinet, in order to minimize radiation or interference fields. If possible, route the drive power cables and motor cables in metal-grounded cable ducts. Route motor cables and encoder cables, if possible, with a distance of at least 100 mm to interference-free cables, and a distance of 100 mm to signal cables. Also, if possible, route motor cables in a separate duct, and route encoder cables in a separate duct.


Shield connection of motor and encoder cables



Connect the cable shield immediately at the motor / encoder in the shortest and most direct possible way, and make the connection with the largest possible surface area.

If the connector, attached to the motor or encoder cable is made of non-conducting material, connect the shield of the connection cable near the connector to the metal mounting plate with a shield terminal connection block and with the largest possible surface underneath the shield connection terminal block.

Installation, Earthing, Shielding, EMC, Electrical Connections

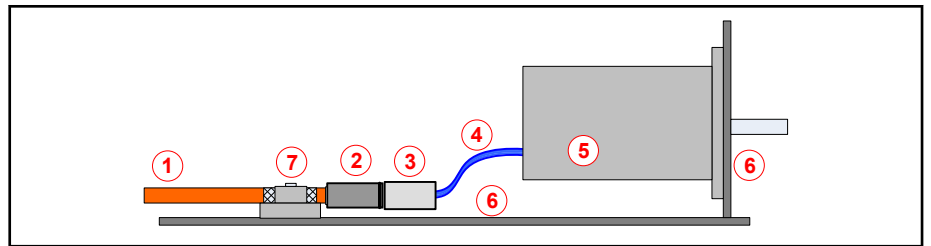


- ① Motor / encoder cable from NYCe 4000 node
- ② Motor / encoder connector (non-conducting material)
- ③ Motor / encoder connector (non-conducting material)
- ④ Motor / encoder cable to motor / encoder
- ⑤ Motor / encoder
- ⑥ Metal mounting plate
- ⑦ Shield connection terminal block

Fig. 29-5: Motor / encoder cable with non-conducting connector housing

EMC class B measures

If EMC class A is not sufficient for your application, but EMC class B is required, you can implement the following additional EMC measures.

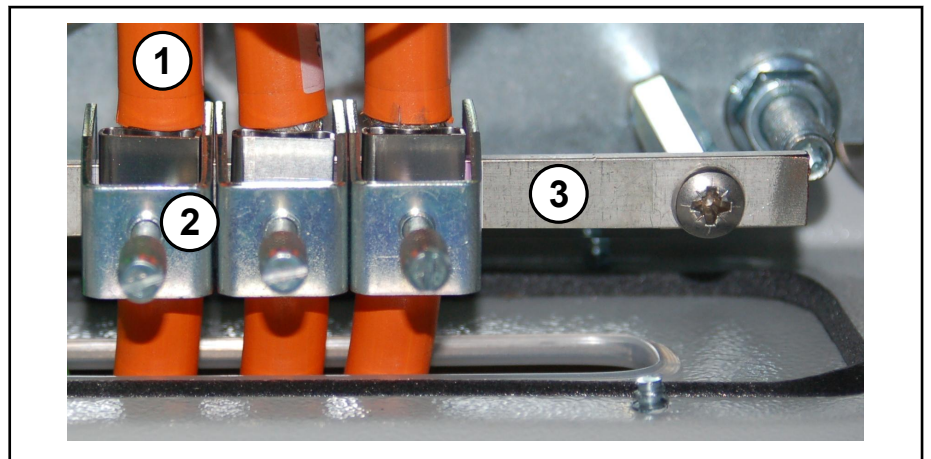

- ① Motor cables
- ② Shield connection terminal block
- ③ Metal connection bar

Fig. 29-6: Additional EMC measures for shielding of motor and encoder cables

Mount the shield of the motor cable at the NYCe 4000 node side directly underneath the node with connection terminal blocks. The contact surface of the shield must cover the largest possible surface underneath the shield connection terminal block.

29.5 Ground Connections

Housing and mounting plate

It is possible to reduce the emission of interference by using appropriate ground connections, because interference is fed to ground via the shortest possible way.

Installation, Earthing, Shielding, EMC, Electrical Connections

Ground connections of the metal housings of EMC-critical components, such as filters, devices of the drive system, and connection points of cable shields, must be well contacted over a large surface area. This also applies to all screw connections between mounting plates and the control cabinet, and the mounting of a ground bus to the mounting plate.

Metal surface

Always use connection elements (screws, nuts, plain washers) with good electro-conductive surface. Anodized, yellow chromated, black gunmetal finish or lacquered metal surfaces have bad electro-conductive properties.

Ground wires and shield connections

For connection of ground wires and shield connections, it is not the cross section of the cable but the size of contact surface that is important. Always connect cable shields, especially of the motor power cables, to ground potential over a large surface area.

29.6 Installation of Signal Cables

The following measures are recommended for signal cables.

- Route signal cables separated from power supply cables at a minimum distance of 100 mm (distance "d3" in [fig. 29-2 "EMC interference-free and interference-susceptible areas" on page 212](#)). The optimum way is to route signal cables and power supply cables in separate cable ducts. If possible, enter signal cables into the control cabinet at one point.
- If signal cables cross power supply cables, route the cables at an angle of 90° to minimize interference injection.
- Connect both ends of not used wires to ground, so that they do not have any antenna effect. If wires are connected at one side, but not used, connect the other end to an appropriate voltage or ground.
- Keep cables as short as possible.
- Guide cables as close as possible along grounded metal surfaces (reference potential).

29.7 Protective Earth Connection and Machine Frame

[fig. 29-7 "Block schematic NYCe 4000 system grounding scheme" on page 217](#) gives an overview of the ground connections for all equipment. As you can see, all parts of the machine, power supplies, NYCe 4000 systems, and PC must have a good connection to the metal parts of the machine.

The industrial PC must have a separate PE connection. This PE connection must be connected to the PE terminal block of the machine. If a desktop PC is used you must connect the PE of the power supply to the PE terminal block of the machine which must be connected to PE.

Installation, Earthing, Shielding, EMC, Electrical Connections

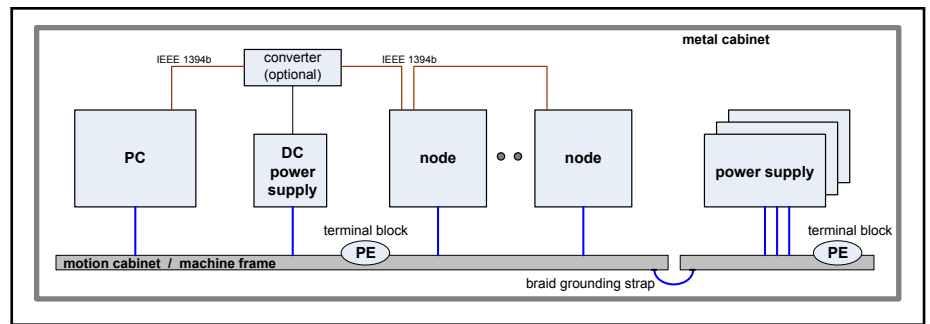



Fig. 29-7: Block schematic NYCe 4000 system grounding scheme

- The system housing must be connected to the Protective Earth using the M5 threaded post on the system housing marked with the  symbol.
- Follow the applicable safety rules for connecting all equipment, including the NYCe 4000 system housing, to protective earth.
- Each protective earth connection may be routed in the most convenient manner for the piece of equipment concerned. The NYCe 4000 system places no extra requirements on the protective earth wiring – no central earth point or similar constraint.
- The protective earth connection must be realized using a green-yellow cable of sufficient diameter or a braided band with a faston at the system housing side. The protective earth connection is fastened on the M5 threaded post of the system housing using a ring, the faston with the cable or braided band, a spring washer and a nut, in that order. You must adhere to the installation requirements of your country.

29.8 Installation of the NYCe 4000 System Housing

The galvanic insulation in the NYCe 4000 system housing between the different functions is not intended for a deliberate potential difference between the functions. It is solely intended to control the paths available for interference currents, in order to minimize the effects of electrical noise, eliminate ground loops, etc.

The guidelines ensure proper functioning and EM compatibility in most applications. In extreme environments, for example motor connection with unshielded cable, or if extra restrictions on the radiated or conducted emission exist, modifications and/or additional measures may be necessary.

To ensure proper system operation, several galvanic insulated domains are implemented within the system. These domains are:

- 24V_System domain, includes encoder, analog I/O, and PC connection
- digital I/O domain
- drive/motor domain, connected to PE
- housing as a mechanical Faraday cage

Each area has its own 0V reference earth. The connections to the outside world can be realized with shielded cables. All shields must be connected to the metal parts of the housing. These housing / shields connections play a central role for EMC and noisy disturbances. It is important that the housing is connected with an excellent connection to the central earth of the machine, where the motors and power supplies are also connected.

Installation, Earthing, Shielding, EMC, Electrical Connections

Mechanical Mounting

- Mount the NYCe 4000 node on a vertical metal surface, and ensure electrical contact between the housing and this surface, either by means of spring washers under the M4 screw heads or by making use of the protective earthing post on the housing with spring washers and nuts.
- When mounting other equipment on a metal frame or mounting base, ensure that there is electrical contact between the housing and the mounting base of each piece of equipment.

29.9 Connection of NYCe 4000 Systems

29.9.1 General Cabling Remarks

- Shielded cable for all high-frequency signalling is mandatory. Shielded cable for motor connection is mandatory.
- The maximum length of any cable may not exceed 15 meter. Note that manufacturers of other equipment, such as encoders, may have more restrictions on cable specifications and cable lengths.

29.9.2 Power Supply Cables

Connect the shield of the power supply cable at the system housing side to the shield pin in the connector or to the connector housing. It is mandatory that the shield of the cable at the power supply side is connected to the chassis.

29.9.3 Motor Cables

Shielded cable for motors is mandatory.

Every motor cable must be installed with the NY4910 motor shield and support bracket. The shielding of the motor cable must make a good electrical contact with the bracket. Connect the shield on the other side to the motor housing or to the metal mounting plate on which the motor is mounted.

In a typical application, motors are mounted on a metal plate. The metal plate is connected to the metal chassis of the machine.

29.9.4 Encoder and/or Hall Sensor Cable, Analog Input, Analog Output

- Separate shielded cables for encoder signals and analog signals is mandatory.
- Connect the shield at the NYCe 4000 side to the connector housing and tighten the screw(s) of the connector backshell to ensure good electrical contact.
- If the equipment housing at the "other side" is metal, connect the shield of the encoder cable to the equipment housing.
- If the equipment housing at the "other side" is non-metal, connect the shield of the encoder cable to the motor housing with an as short as possible wire.



Never connect the ground/minus wires of these signals to other grounds, otherwise malfunction of the module is possible.

29.9.5 Fast Digital I/O, Digital I/O

Fast digital I/O

Shielded cable is mandatory for fast digital I/O connections.

Connect the shield at the system housing side to the connector housing. Connect the shield at the "other" side to a convenient metal part or leave it unconnected.

The cable with the signal wire(s) must also contain the return current path for every signal in the cable. It is acceptable for a single wire to carry the return currents of more than one signal, as long as the current rating of the wire is not exceeded.

Digital I/O

Shielded cables are recommended for digital I/O connections.

If shielding is used, connect the shield at the system housing side to the connector housing. Connect the shield at the "other" side to a convenient metal part or leave it unconnected.

For unshielded digital I/O, the cable with the signal wire(s) must also contain the return current path for every signal in the cable. It is acceptable for a single wire to carry the return currents of more than one signal, as long as the current rating of the wire is not exceeded.

29.10 Power Supply

29.10.1 Requirements on Mains Circuits

- Mains Circuits of overvoltage category II up to 300 V AC rms.

29.10.2 Combination of Power Supplies

- Three 24V power supply connections may be needed for the NYCe 4000 system housing.
 - One for system power
 - One for all fast digital inputs, fast digital outputs and digital outputs
 - One for digital inputs

The separation of these power supplies at the NYCe 4000 system housing allows optimization of the cabling, especially in widely distributed and/or complex systems, where it may be desirable to separate the "noisy" functions (for example the power supply for the digital outputs) from the "quiet" functions (for example the power supply for the internal logic).

- In many installations, however, it is quite acceptable for these functions to be combined and connected to a single power supply. In a custom I/O backplane, this may even be done in the backplane itself.
- Never combine the drive power supply in case it is also 24 Volt with the other functions, even if the drive power has enough reserve capacity. (One reason: during regenerative braking of a motor, the supply voltage may swing up to a high value, considerably higher than the value for which the other functions are designed.)
- Any floating "grounds" in individual pieces of equipment will in general be fixed to safety earth potential by the detailed installation rules below.

Installation, Earthing, Shielding, EMC, Electrical Connections

29.10.3 24V System Power Supply

The 24V power supply for the system housing, connected to the 24V System header must be an SELV power supply with the required insulation barriers.

29.10.4 Drive Power Supply

The power supply for the motors must be a power supply with the required insulation barriers. A fuse between the drive power supply and the system housing is mandatory.

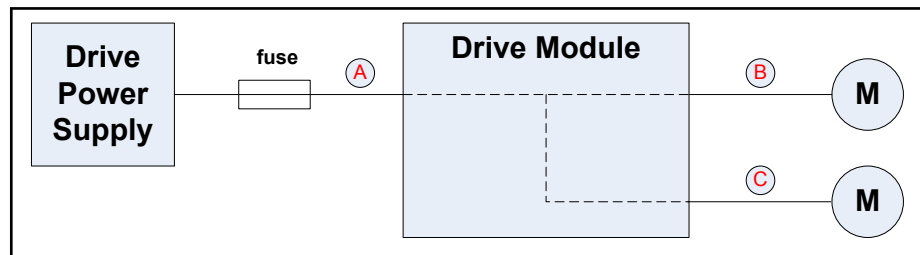


Fig. 29-8: Drive power supply, fuse, and motor cabling

The drive power supply connection cable, Ⓐ in fig. 29-8 "Drive power supply, fuse, and motor cabling" on page 220, and the cables from the system housing to the motors (Ⓑ and Ⓒ) must have the same diameter. The rating of the fuse depends on the used cables and application requirements of the motion profiles. The fuse certified for DC rating, has to be UL recognized under CCN JDYX2/8, also IEC 60127-1 certification has to be provided.

See also "Power switch on/off precautions" in the NYCe 4000 Hardware System manual (NY4120 or NY4140 chapter), if the drive power supply is connected to a drive slot that contains an NY4120 or NY4140 drive module.

29.10.5 (Fast) Digital I/O 24V Power Supply

The 24V power supply for the fast digital I/O and digital I/O must be an SELV power supply with the required insulation barriers. A fuse between the 24 Volt power supply and the system housing is mandatory.

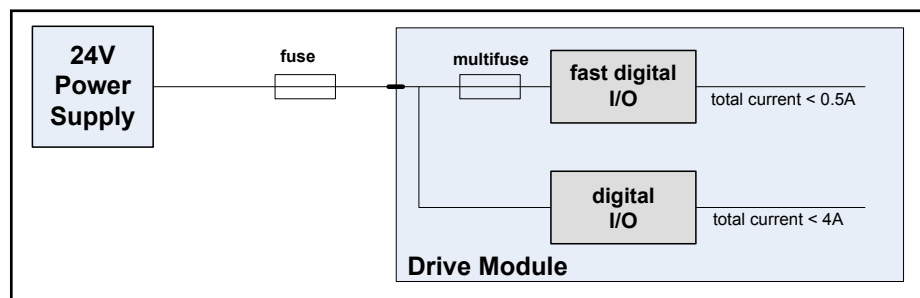


Fig. 29-9: Connection and fuses for the (fast) digital I/O

The rating of the fuses depends on the used cables and total current. The fuses certified for DC rating, have to be UL recognized under CCN JDYX2/8, also IEC 60127-1 certification has to be provided.

29.10.6 Fuse Rating and Wire Diameter

The following tables list for typical currents within the NYCe 4000 system the required fuse and wire diameter according to UL and IEC norms, together with a possible usage.

Installation, Earthing, Shielding, EMC, Electrical Connections

current [DC]	Fast Acting fuse (UL) ① [nominal DC current]	Wire gauge number ② [AWG, minimum]	example of usage
1.0 A	2 A	24	Drive power NY4130 (+/- 26V)
2.0 A	3 A	20	Drive power NY4130 (+/- 15V)
4.5 A	6 A	16	Digital I/O
6.0 A	8 A	16	Drive power NY4140
12.0 A	15 A	12 ③	Drive power NY4120

- ① Fuses must be certified for DC rating, Fast Acting, have to be UL recognized under CCN JDX Y2/8.
- ② Wire gauge as a function of ambient temperature are derived from the NFPA-79:2012. Insulation temperature of wires is assumed to be 60 °C (140 °F) or 75 °C (167 °F).
- ③ If using wires with AWG smaller than or equal 12, two pins for the (+) and (-) connection must be used on the drive power connectors.

Tab. 29-1: *Typical currents, fuse ratings and wire gauge numbers for UL fuses in a NYCe 4000 system*

current [DC]	Fast Acting fuse (IEC) ① [nominal DC current]	Wire cross section ② [mm ² , minimum]	example of usage
1.0 A	1 A	0.20	Drive power NY4130 (+/- 26V)
2.0 A	2 A	0.52	Drive power NY4130 (+/- 15V)
4.5 A	5 A	0.82	Digital I/O
6.0 A	6 A	1.31	Drive power NY4140
12.0 A	12 A	3.31 ③	Drive power NY4120

- ① Fuses must be certified for DC rating, Fast Acting, have to be IEC 60127-1 certified.
- ② Wire cross section as a function of ambient temperature are derived from the EN 60204-33:2011. Insulation temperature of wires is assumed to be 60 °C or 75 °C.
- ③ If using wires with a cross section larger than or equal 2 mm², two pins for the (+) and (-) connection must be used on the drive power connectors.

Tab. 29-2: *Typical currents, fuse ratings and wire cross sections for IEC fuses in a NYCe 4000 system*

29.11 PC

If the PC uses a FireWire PCI controller card and one IEEE 1394b cable to connect to the NYCe 4000 node, make sure that the FireWire PCI controller card in the PC is fixed with a screw to the metal housing of the PC. Further, make sure that a choke is installed on the IEEE 1394b cable as close as possible to the FireWire connector at both ends.



Do not strip the insulation of the IEEE 1394b cable.

The PC must be connected to the same ground as the motion installation.

Installation, Earthing, Shielding, EMC, Electrical Connections

If a FireWire-b to IEEE 1394b Cat-5e/Cat-6 media converter is installed, the "-" of the DC power supply must be connected to the PE terminal block of the machine.

29.12 Installation Differences for NY40x2 and NY40x3 System Housings

Due to improved design for EMC behavior of the NY40x3 system housing, compared to the NY40x2 system housing, you must make the following changes in the machine installation if you upgrade the NYCe 4000 motion control with NY40x2 system housing(s) to NY40x3 system housing(s).



If you replace NY40x2 system housings with NY40x3 system housings in the motion application, you must replace all system housings.

A mix of NY40x2 and NY40x3 system housings is not allowed.

- It is recommended that for the 24V power supply units (system power and digital I/O) for NY40x2 and NY40x3 system housings, the minus terminal (0V) at the secondary side of the power supply unit remains connected to the Protective Earth connection.
- It is recommended that for drive power supply units for NY40x3 system housings the minus terminal (0V) at the secondary side of the power supply unit is **not** connected to the Protective Earth connection. If the minus terminal (0V) of the drive power supply cable remains connected to the Protective Earth connection, large ground currents may flow over the shield, because in the NY40x3 system housings the 0V of the drive power supply is connected to PE.
 - ⇒ Remove the connection from the minus terminal (0V) to PE.
- The shield of the 24V power cables (for system power and digital inputs) for NY40x2 and NY40x3 system housings remains connected to the ground pin at the power supply unit side.
- The shield of the drive power cables for NY40x2 system housings is connected to the minus terminal (0V) at the secondary side of the power supply unit.
 - ⇒ Disconnect the shield of the drive power cables from the minus terminal (0V) at the secondary side of the drive power supply unit for NY40x3 system housings. Connect the shield at the drive power supply unit side to the metal chassis of the power supply unit.
- The motor connector headers on the NY40x2 system housing are 8-pin male. The motor connector headers on the NY40x3 system housing are 7-pin female.
 - ⇒ Replace the 8-pin female plug on the motor cable (at the system housing side) with a 7-pin male plug
 - The 8-pin connector header on the NY40x2 system housing has a SHIELD pin to which the shield of the motor cable is connected. The 7-pin connector header on the NY40x3 system housing does

Installation, Earthing, Shielding, EMC, Electrical Connections

not have a SHIELD pin. Instead, you must use the NY4910 motor cable shield and support bracket (order number R911172999).

- The motor cable is mounted on a metal bar underneath the NY40x2 system housing with the shield connected to the metal bar. This installation is needed for cable support and proper shield connection to the machine. The NY4910 motor cable shield and support bracket is used on the NY40x3 system housing for these purposes, but it is not necessary to remove the motor cable installation on the metal bar.
- The PE screw on the NY40x2 system housings is M4, the PE screw on the NY40x3 system housing is M5.

30 Environmental Conditions

30.1 Thermal

- Operating**
 - Temperature : +5 °C ... +55 °C
 - Relative Humidity : 10% ... 90% (non condensing)
- Storage**
 - Temperature : -40 °C ... +85 °C
 - Relative humidity : 5% ... 95% (non condensing)

Thermal compatibility

	Used standard
Cold	EN 60068-2-1:2007
Dry heat	EN 60068-2-2:2007
Change of temperature	EN 60068-2-14:2009
Damp heat	EN 60068-2-30:2005

Tab. 30-1: Thermal compatibility

30.2 Free clearance space

Free clearance space around a system housing is needed for cooling air flow and for cables and connectors.

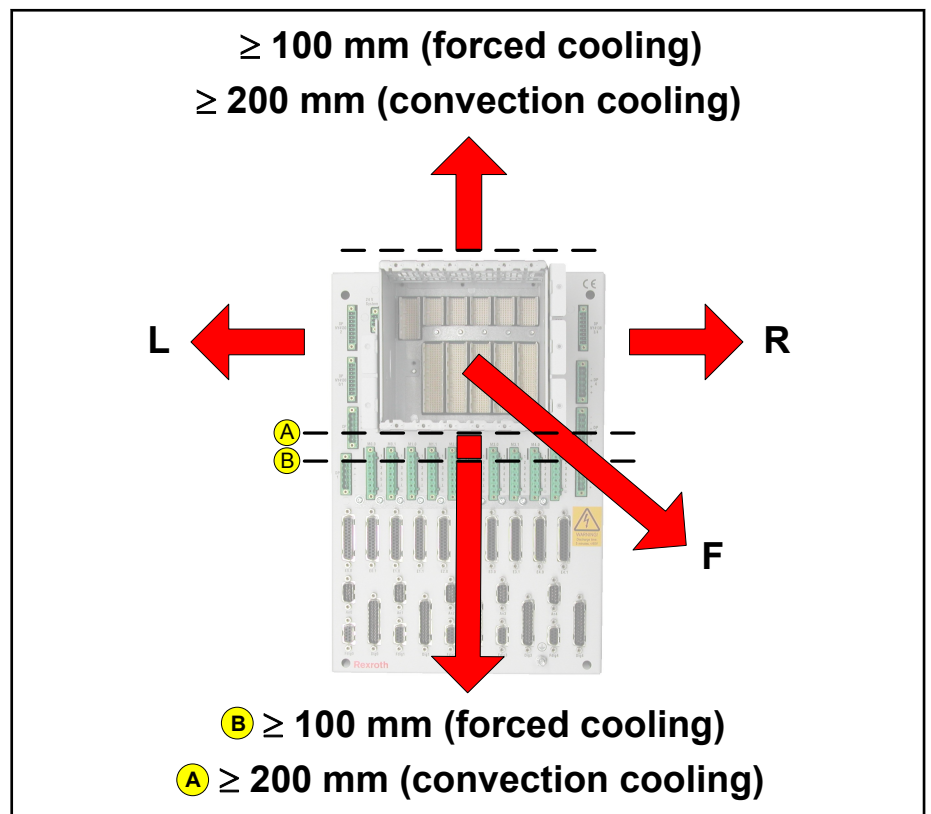


Fig. 30-1: Free space requirements for forced and convection cooling

**Airflow for module holder
 (all system housings)**

Ensure that above and below the system housing air can flow freely in a vertical direction through the ventilation holes. Typical free distances are 100

Environmental Conditions

mm for forced cooled systems, and 200 mm for convection cooled systems. The indication line ④ represents the bottom of the module holder for a convection cooled system. The indication line ⑤ represents the bottom of the fan unit (not shown in the figure) for a forced cooled system. Bend the cabling away from the ventilation holes as near to the connectors as possible to improve air flow through the module holder. Note that for small system housings, for example the NY4013, the height of the connector area on the base plate is less than the required free space, thus free space is required on the mounting plate below the system housing.

- For convection cooled systems the housing must be installed vertically to allow free air flow from the bottom to the top through the module holder.
- For forced cooled systems using an NY4922 fan unit, the housing is allowed to be installed horizontally.

Airflow for base plate (NY4074 & NY4079)

The NY4074 and NY4079 system housings contain electronic circuits on the backplane. The NY4074 and NY4079 require cooling for the module holder **and additionally** for the base plate. For this reason, the NY4074 and NY4079 housings must always be installed vertically, unless you provide forced cooling for the base plate.

Frontal free clearance

Free clearance space in front of the module holder ("F") is needed for the optional strain relief bracket(s) and for bending IEEE 1394b cable(s) for NY4110, ethernet cables for NY4112 and NY4114, and (optional) SERCOS III cables for NY4150. As a rule of thumb, 100 mm is sufficient. If the NY4130 is installed, the minimum clearance distance is 35 mm.

Side-way free clearance

The free distance on the right (R) and left (L) of the system housing must be sufficient to access the connectors at those sides.

30.3 Shock and Vibration

	Used standard
Mechanical, non-operating Shock	IEC 60068-2-27:2008
Mechanical, operating Vibration	IEC 60068-2-6:2007
Vibration, broad-band	IEC 60068-2-64:2008

Tab. 30-2: Shock and vibration

30.4 Electromagnetic Compatibility

Emission

Standard EN 61000-6-4:2007/A1:2011 is met.

Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments.

Immunity

Standard EN 61000-6-2:2005 is met.

Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments.

Environmental Conditions

	Used standard in general	Used standard for NY4074, NY4079, NY4980, NY4981
Electrostatic discharge	EN 61000-4-2:2009	
Radiated, RF electromagnetic field	EN 61000-4-3:2006 + A1:2008 + A2:2010	
Electrical fast transient (burst)	EN 61000-4-4:2004 + A1:2010	EN 61000-4-4:2012
RF conducted disturbances	EN 61000-4-6:2009	EN 61000-4-6:2014

Tab. 30-3: Electromagnetic compatibility (EMC)

30.5 Environment

Degrees of protection provided by enclosures: IP20.
Pollution degree (operating / storage and transport): 2.
Overvoltage category: II.
Maximum altitude: 4000 m.

31 Cleaning, Disposal and Environmental Protection

31.1 Cleaning

Softly wipe the surface with a dampened cloth using a diluted neutral detergent or alcohol, and then wipe the surface again with a dry cloth. For systems without a fan, use a compressor or vacuum cleaner to blow off the accumulated dust in the ventilating channel of the housing and inside the housing.



Do not use a compressor or vacuum cleaner on systems with a fan. Remove the fan before cleaning the system.

31.2 Disposal

Products

Our products can be returned to us free of charge for disposal. It is a precondition, however, that the products are free of oil, grease or other dirt. In addition, when returned the products must not contain any undue foreign matter or foreign component.

Please send the products free domicile to the following address:

Bosch Rexroth AG
Electric Drives and Controls
Bürgermeister-Dr.-Nebel-Straße 2
D-97816 Lohr am Main

Packaging Materials

The packaging materials consist of cardboard, wood and polystyrene. They can be easily recycled. For ecological reasons you should not return the empty packages to us.

31.3 Environmental Protection

No Release of Hazardous Substances

Our products do not contain any hazardous substances that they can release in the case of appropriate use. Normally there are not any negative effects on the environment to be expected.

Materials Contained in the Products

- Electronic Devices
Electronic devices mainly contain:
 - steel
 - aluminum
 - copper
 - synthetic materials
 - electronic components and modules
- Motors
Motors mainly contain:
 - steel

Cleaning, Disposal and Environmental Protection

- aluminum
- copper
- brass
- magnetic materials
- electronic components and modules

Recycling

Due to their high content of metal most of the product components can be recycled. In order to recycle the metal in the best possible way it is necessary to disassemble the products into individual modules.

The metals contained in the electric and electronic modules can also be recycled by means of specific separation processes.

The synthetic materials remaining after these processes can be thermally recycled.

32 Service and Support

32.1 Helpdesk

Unser Kundendienst-Helpdesk im Hauptwerk Lohr am Main steht Ihnen mit Rat und Tat zur Seite. Sie erreichen uns	Our service helpdesk at our headquarters in Lohr am Main, Germany can assist you in all kinds of inquiries. Contact us
---	---

telefonisch - by phone: +49 9352 18 0

über Service Call Entry Center (Mo-Fr 07:00-18:00)

via Service Call Entry Center (Mo-Fr 7:00 am - 6:00 pm)

per Fax - by fax: +49 9352 18 8400

per e-Mail - by e-mail: service.svc@boschrexroth.de

32.2 Service-Hotline

Außerhalb der Helpdesk-Zeiten ist der Service direkt ansprechbar unter	After helpdesk hours, contact our service department directly at
--	--

+49 171 333 88 26

oder - or: +49 172 660 04 06

32.3 Internet

Unter www.boschrexroth.com finden Sie ergänzende Hinweise zu Service, Reparatur und Training sowie die aktuellen Adressen unserer Vertriebs- und Servicebüros.	At www.boschrexroth.com you may find additional notes about service, repairs and training in the Internet, as well as the actual addresses of our sales- and service facilities
--	---

32.4 Vor der Kontaktaufnahme... - Before contacting us...

Wir können Ihnen schnell und effizient helfen wenn Sie folgende Informationen bereithalten: <ol style="list-style-type: none">1. Detaillierte Beschreibung der Störung und der Umstände.2. Angaben auf dem Typenschild der betreffenden Produkte, insbesondere Typenschlüssel und Seriennummern.3. Tel./Faxnummern und e-Mail-Adresse, unter denen Sie für Rückfragen zu erreichen sind.	For quick and efficient help, please have the following information ready: <ol style="list-style-type: none">1. Detailed description of the failure and circumstances.2. Information on the type plate of the affected products, especially type codes and serial numbers.3. Your phone/fax numbers and e-mail address, so we can contact you in case of questions.
---	--

Notes

Bosch Rexroth AG

Electric Drives and Controls

P.O. Box 13 57

97803 Lohr, Germany

Bgm.-Dr.-Nebel-Str. 2

97816 Lohr, Germany

Phone +49 9352 18 0

Fax +49 9352 18 8400

www.boschrexroth.com/electrics



R911337672